


HEADLIGHT DIMMER SWITCH



COMPONENTS

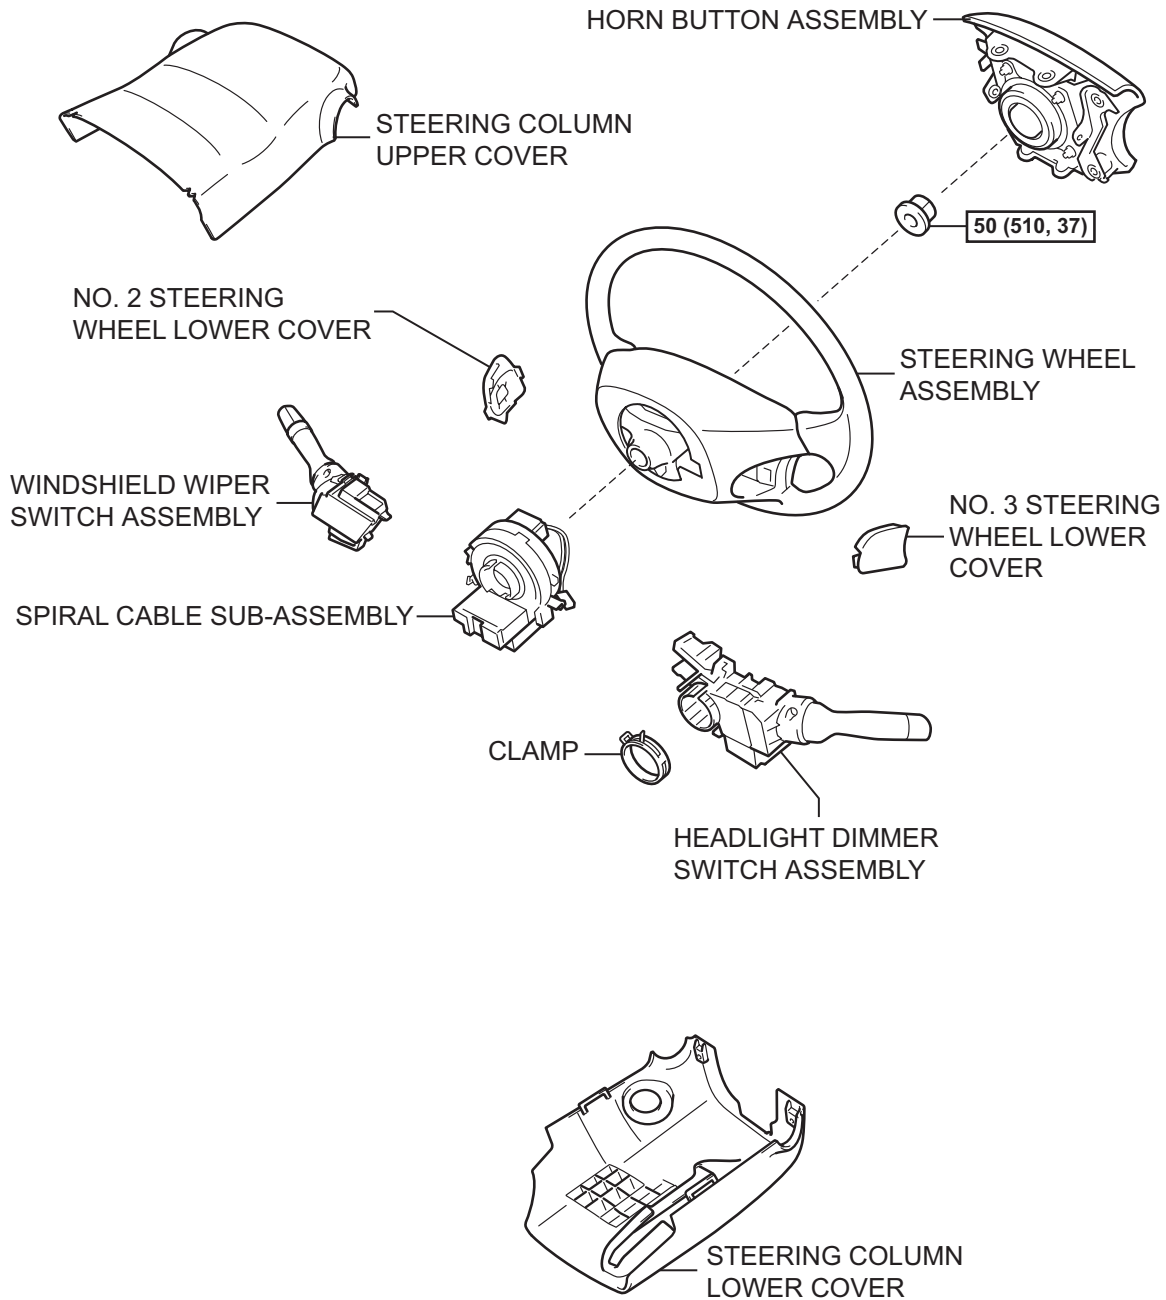

$\boxed{\text{N}\cdot\text{m}}$ ($\text{kgf}\cdot\text{cm}$, $\text{ft}\cdot\text{lbf}$): Specified torque

REMOVAL

1. **PRECAUTION**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE NO. 2 STEERING WHEEL LOWER COVER**
(See page [RS-558](#))
5. **REMOVE NO. 3 STEERING WHEEL LOWER COVER**
(See page [RS-558](#))
6. **REMOVE HORN BUTTON ASSEMBLY** (See page [RS-558](#))
7. **REMOVE STEERING WHEEL ASSEMBLY** (See page [SR-9](#))
8. **REMOVE STEERING COLUMN LOWER COVER** (See page [SR-9](#))
9. **REMOVE STEERING COLUMN UPPER COVER** (See page [SR-10](#))
10. **REMOVE SPIRAL CABLE SUB-ASSEMBLY** (See page [RS-566](#))
11. **REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY**
(See page [WW-17](#))
12. **REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY**
 - (a) Disconnect the connector.
 - (b) Remove the headlight dimmer switch assembly as shown in the illustration.

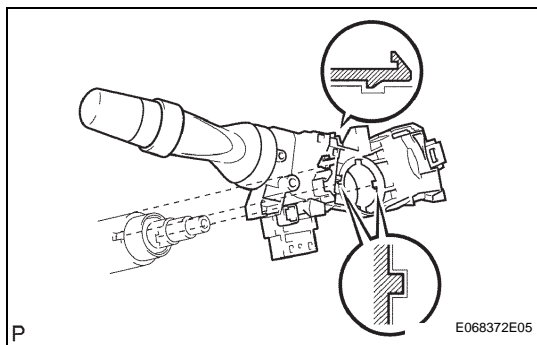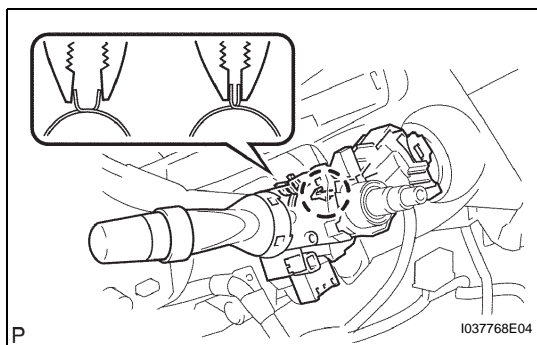

- (c) Disengage the 2 claws and remove the headlight dimmer switch assembly.