


# FUEL PRESSURE PULSATION DAMPER

## REMOVAL

1. **DISCHARGE FUEL SYSTEM PRESSURE**  
(See page [FU-1](#))
2. **REMOVE V-BANK COVER** (See page [ES-414](#))
3. **REMOVE FUEL PRESSURE PULSATION DAMPER ASSEMBLY**
  - (a) Remove the clip.
  - (b) Pull the fuel pressure pulsation damper out of the fuel delivery pipe.

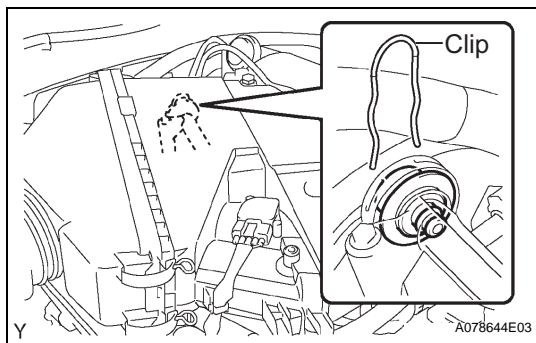

## INSTALLATION

1. **INSTALL FUEL PRESSURE PULSATION DAMPER ASSEMBLY**
  - (a) Apply a light coat of spindle oil or gasoline to a new O-ring and install it onto the fuel pressure pulsation damper.
  - (b) Install the fuel pressure pulsation damper onto the fuel delivery pipe.
  - (c) Install the clip.
2. **INSTALL V-BANK COVER (See page [ES-416](#))**
3. **CHECK FOR FUEL LEAKAGE**