


INSTALLATION

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).


1. INSTALL ROOF WIRE

- Install the roof wire with 5 new adhesive tapes, as shown in the illustration.

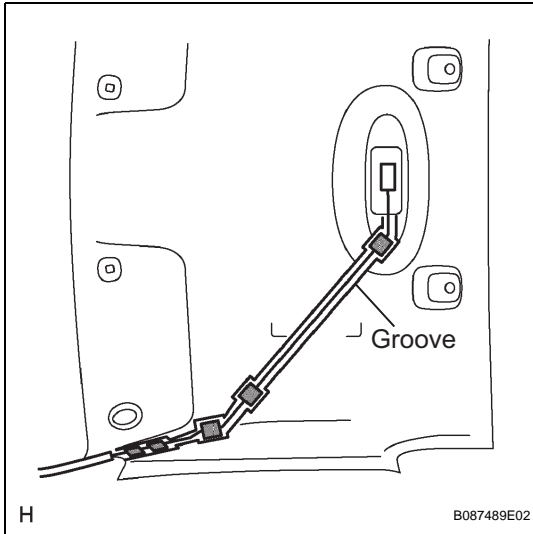


2. INSTALL ROOF HEADLINING PAD

- Install a new roof headlining pad onto the roof headlining, as shown in the illustration.

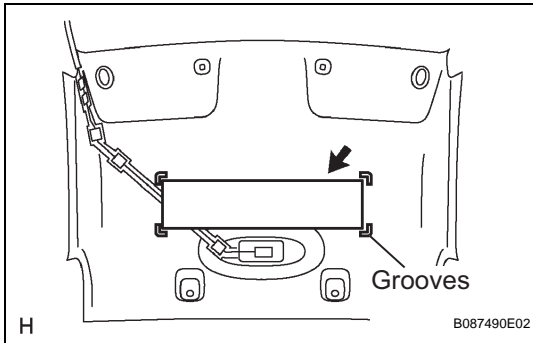



3. INSTALL ROOF HEADLINING ASSEMBLY

- Install the roof headlining into the vehicle.

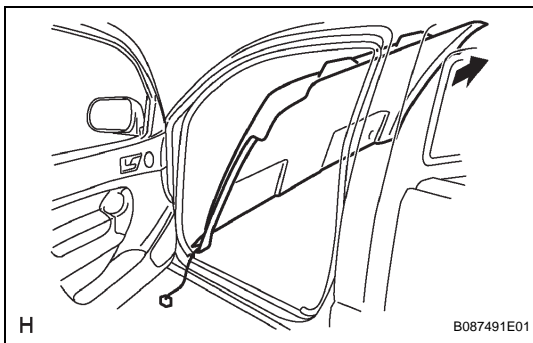

- Install the 2 wire harness clamps.
- Connect the roof wire connector.
- Connect the frame wire connector.

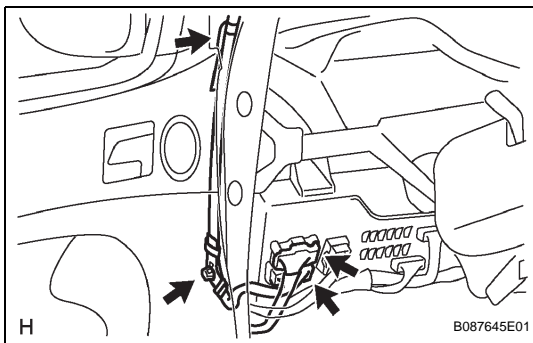


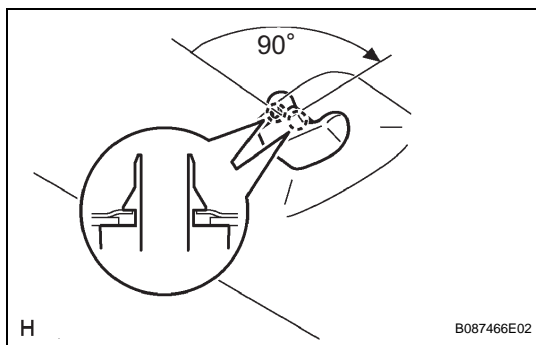**4. INSTALL COAT HOOK**

HINT:

Follow the same procedures as for the opposite side.

(a) Turn the coat hook 90° clockwise and install it.

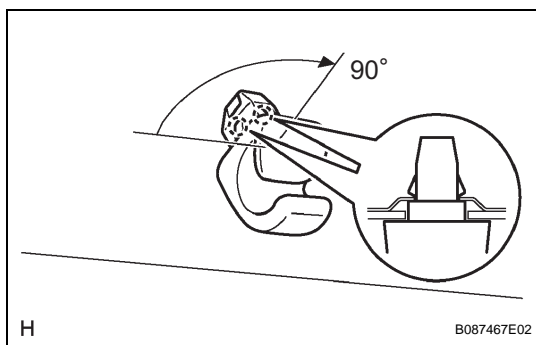
**5. INSTALL VISOR HOLDER**

HINT:

Follow the same procedures as for the opposite side.

(a) Turn the visor holder 90° clockwise and install it.

IR

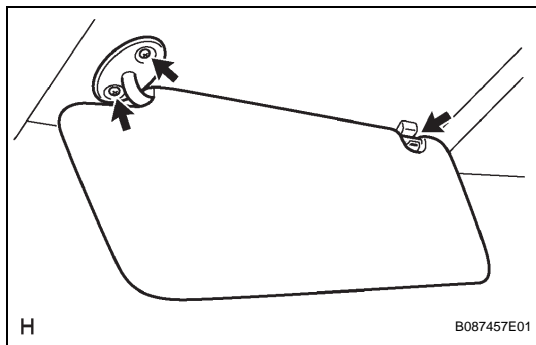**6. INSTALL VISOR ASSEMBLY LH**


(a) Install the visor into the visor holder.

(b) Install the 2 screws.

7. INSTALL VISOR ASSEMBLY RH

HINT:


Follow the same procedures as for the visor assembly LH.

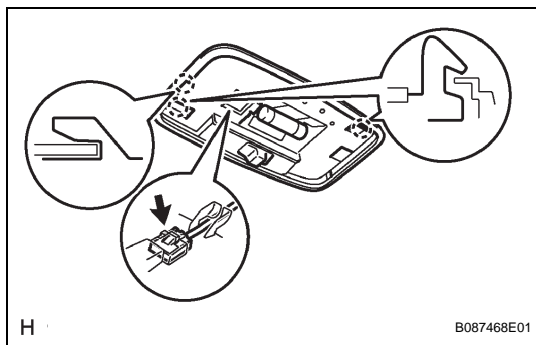
**8. INSTALL ROOM LIGHT ASSEMBLY**

(a) Connect the room light connector.

(b) Engage the 3 claws and install the room light.


(c) Engage the 2 claws and install the room light lens.

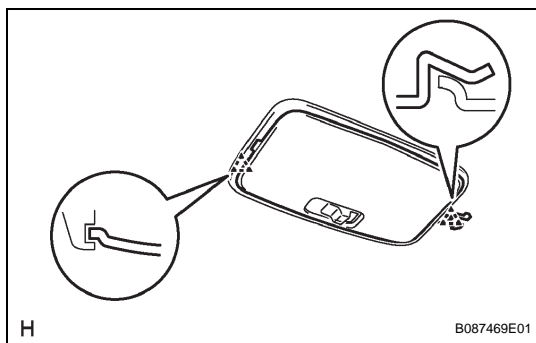

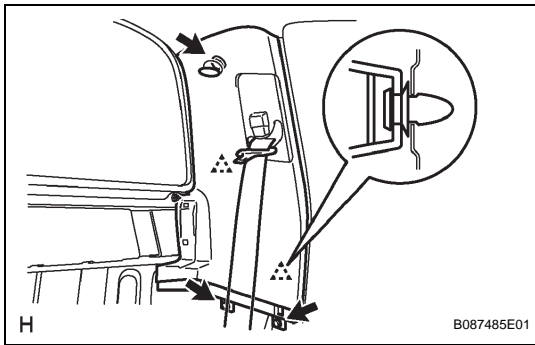


9. INSTALL QUARTER INSIDE TRIM BOARD LH

- Engage the 2 clips and install the quarter trim board.
- Tighten the 3 screws.

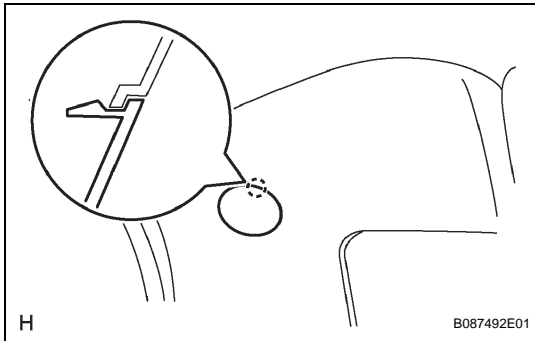

- Engage the claw and close the cover.

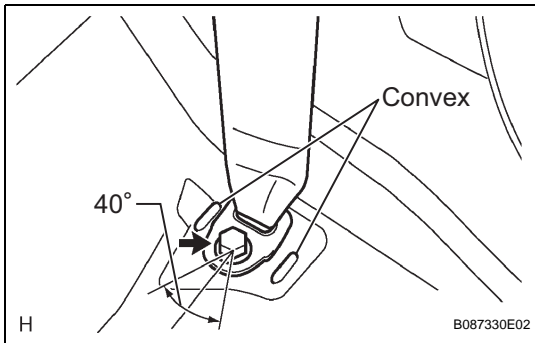


- for LH Side and Separate Seat Type RH Side:

- Install the floor anchor of the front seat outer belt with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

NOTICE:

- Make sure that the floor anchor of the front seat outer belt is oriented in the correct direction when installing.
- Be careful not to place the floor anchor of the front seat outer belt over the convex areas of the floor panel.

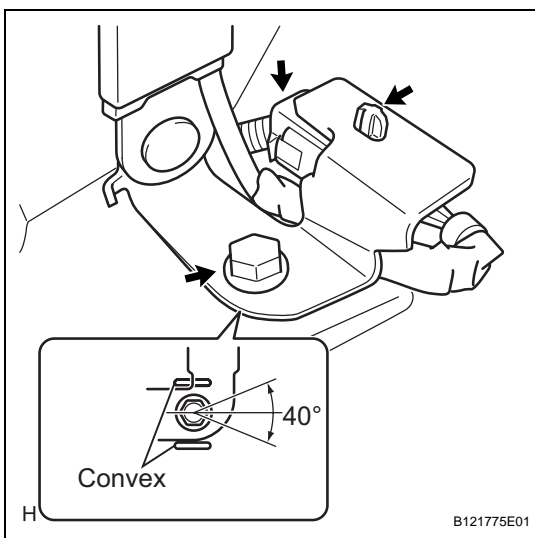

- for Bench Seat Type RH Side:

- Install the wiring harness clamp.
- Connect the belt tension sensor connector.
- Install the floor anchor of the front seat outer belt with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)


NOTICE:

- Make sure that the floor anchor of the front seat outer belt is oriented in the correct direction when installing.
- Be careful not to place the floor anchor of the front seat outer belt over the convex areas of the floor panel.

10. INSTALL QUARTER INSIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the quarter inside trim board LH.

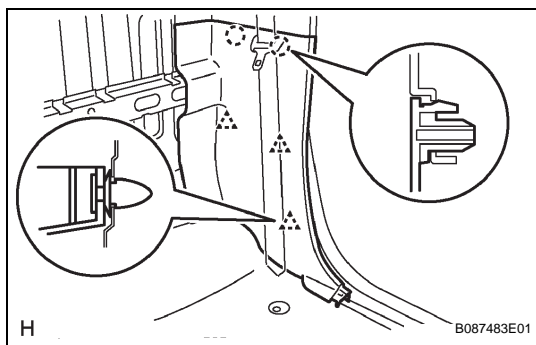
**11. INSTALL QUARTER TRIM LOWER PANEL LH**

- (a) Engage the 2 claws and 3 clips, and install the quarter trim lower panel.

12. INSTALL QUARTER TRIM LOWER PANEL RH


HINT:

Follow the same procedures as for the quarter trim lower panel LH.

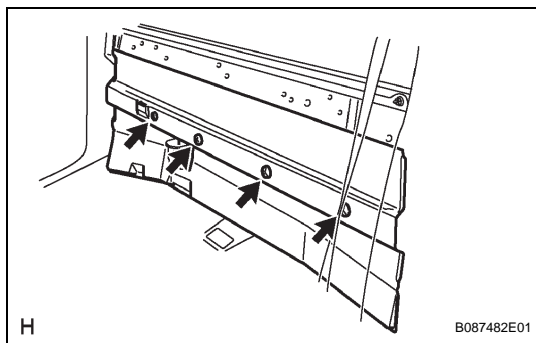
**13. INSTALL BACK PANEL TRIM COVER (for Separate Seat Type)**

- (a) Install the back panel trim with the 4 clips.


IR

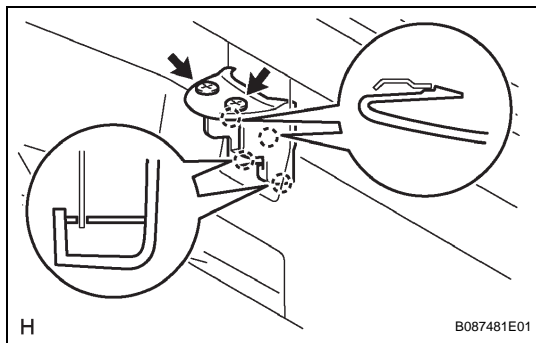**14. INSTALL BACK PANEL TRIM COVER (for Separate Seat Type)**

- (a) Engage the 4 claws and install the back panel trim cover.
(b) Install the 2 clips.

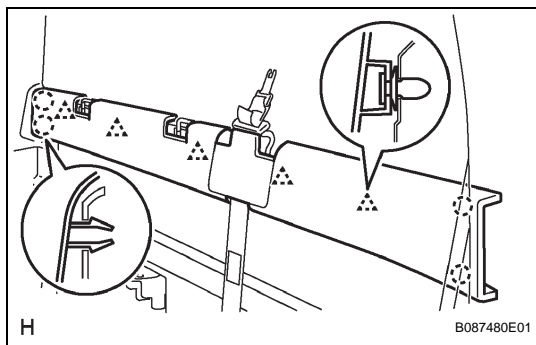15. INSTALL JACK ASSEMBLY (for Separate Seat Type)**16. INSTALL BACK PANEL UPPER GARNISH**

- (a) Engage the 4 claws and 5 clips, and install the back panel upper garnish.

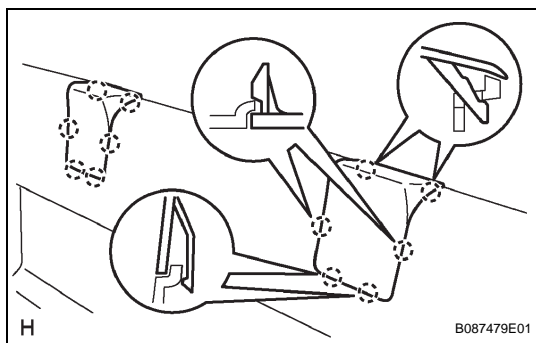
**17. INSTALL BACK PANEL TRIM COVER**

- (a) for Separate Seat Type and Bench Seat Type:

- (1) Engage the 6 claws and install the back panel trim cover.

HINT:

Follow the same procedures as for the opposite side (for Bench Seat Type).

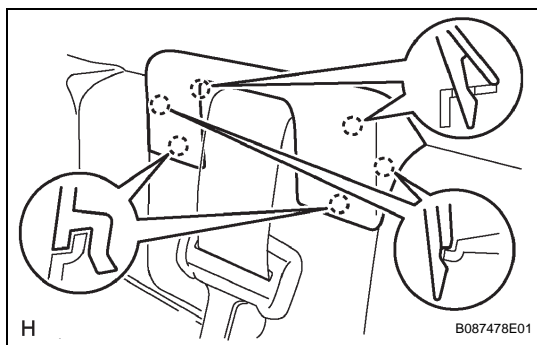

(b) for Bench Seat Type:

- (1) Engage the 6 claws and install the back panel trim cover.


18. **INSTALL INSTRUMENT PANEL SUB-ASSEMBLY** (See page [IP-18](#))
19. **CONNECT PASSENGER AIRBAG CONNECTOR**
20. **INSTALL INSTRUMENT SIDE PANEL** (See page [IP-20](#))
21. **INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY** (See page [IP-20](#))
22. **INSTALL INSTRUMENT LOWER PANEL** (See page [IP-20](#))
23. **INSTALL INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY** (See page [IP-20](#))
24. **INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-20](#))
25. **INSTALL INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY** (See page [IP-21](#))
26. **INSTALL COMBINATION METER ASSEMBLY** (See page [IP-21](#))
27. **INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY** (See page [IP-21](#))
28. **INSTALL INSTRUMENT LOWER PANEL FINISH PANEL** (See page [IP-22](#))
29. **CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY** (See page [ED-8](#))
30. **INSTALL RADIO RECEIVER ASSEMBLY** (See page [AV-70](#))
31. **INSTALL AIR CONDITIONING CONTROL ASSEMBLY** (See page [IP-22](#))
32. **INSTALL FRONT CONSOLE BOX**
 - (a) for Automatic Transmission on Separate Seat Type:
 - (1) Install the front console box (See page [IP-24](#)).
 - (b) for Automatic Transmission on Bench Seat Type:
 - (1) Install the front console box (See page [IP-23](#)).
 - (c) for Manual Transmission on Separate Seat Type:
 - (1) Install the front console box (See page [IP-23](#)).
 - (d) for Manual Transmission on Bench Seat Type:
 - (1) Install the front console box (See page [IP-22](#)).
33. **INSTALL INSTRUMENT PANEL CUP HOLDER TRAY** (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
34. **INSTALL REAR CONSOLE BOX ASSEMBLY** (for Separate Seat Type) (See page [IP-24](#))

35. INSTALL REAR CONSOLE UPPER PANEL SUB-ASSEMBLY


- (a) for Automatic Transmission on Separate Seat Type:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).
- (b) for Manual Transmission on Separate Seat Type:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).

36. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-25](#))**37. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-25](#))****38. INSTALL FRONT PILLAR GARNISH LH**

- (a) for LH Side:
 - (1) Install the 3 wire harness clamps.

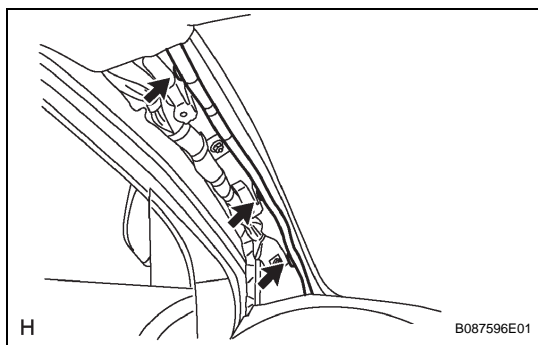

- (b) Engage the claw and clip, and install the front pillar garnish.
- (c) Tighten the 2 screws.

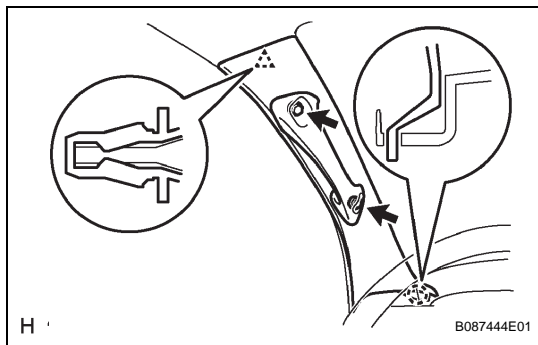



- (d) Engage the 2 claws and install the assist grip plug.

39. INSTALL FRONT PILLAR GARNISH RH

HINT:

Follow the same procedures as for the front pillar garnish LH.

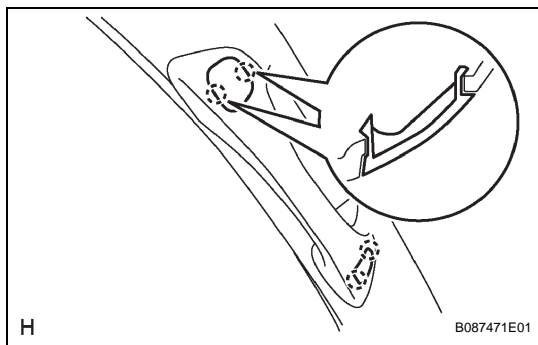

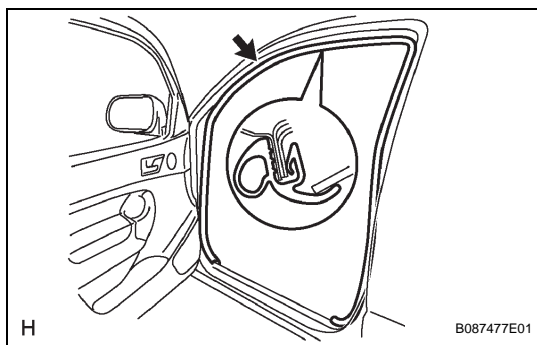


40. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

(a) Install the front door opening trim weatherstrip.

41. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the front door opening trim weatherstrip LH.

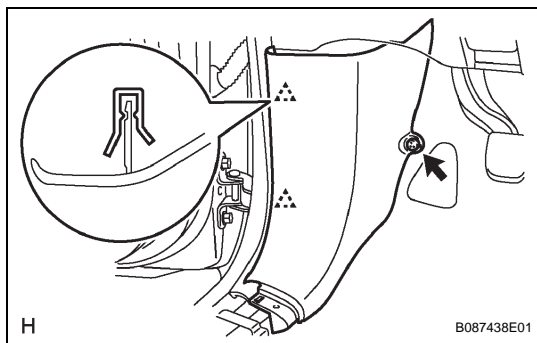

42. INSTALL COWL SIDE TRIM BOARD LH


(a) Engage the 2 clips and install the cowl side trim board.

(b) Install the clip.

43. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the cowl side trim board LH.

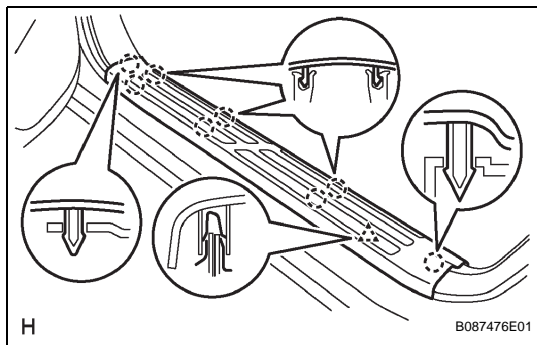

44. INSTALL FRONT DOOR SCUFF PLATE LH

(a) Engage the 8 claws and clip, and install the front door scuff plate.

45. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the front door scuff plate LH.

46. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))

47. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

48. INSPECT SRS WARNING LIGHT

(See page [RS-28](#))