


INSTALLATION

1. INSPECT PROPELLER SHAFT ASSEMBLY

HINT:

When replacing the spider bearing, make sure that the grease fitting assembly hole is facing in the direction shown in the illustration.

Front Side


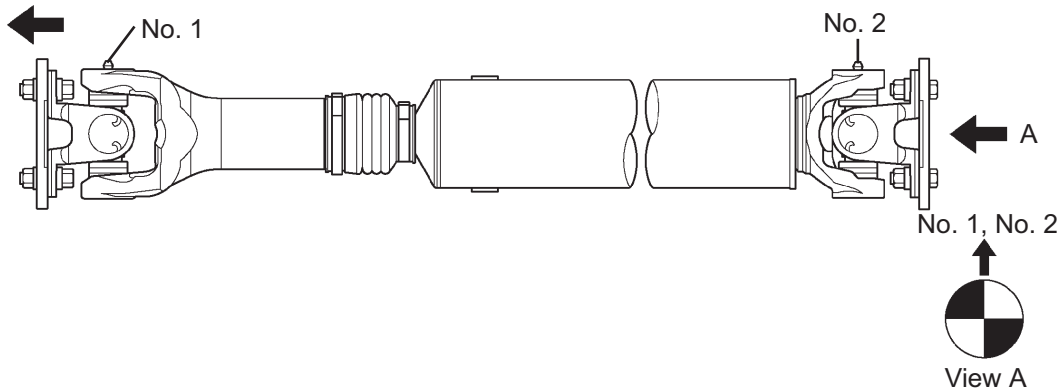


F052213E01

2. INSTALL PROPELLER SHAFT ASSEMBLY

- Align the matchmarks on the yoke and transfer flange.
- Install the propeller shaft with the 4 nuts and 4 washers.

Torque: 88 N*m (899 kgf*cm, 65 ft.*lbf)

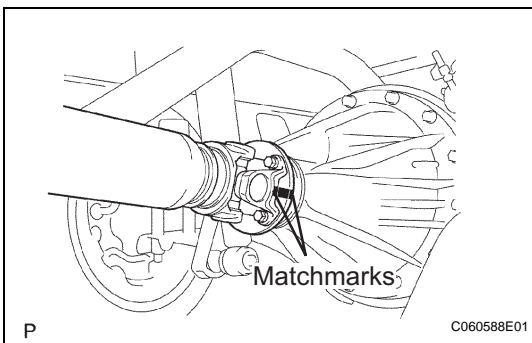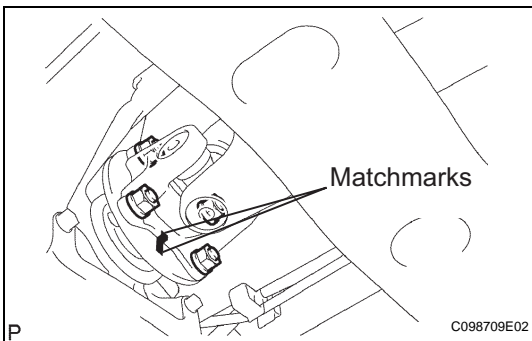

- Align the matchmarks on the yoke and differential flange.
- Install the propeller shaft with the 4 bolts, 4 nuts and 4 washers.

Torque: 88 N*m (899 kgf*cm, 65 ft.*lbf)