



DECELERATION SENSOR (for 4WD and Pre-Runner without VSC)

REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH (for Bench Seat Type) (See page [SB-12](#))
3. REMOVE FRONT SEAT INNER BELT ASSEMBLY RH (for Bench Seat Type) (See page [SB-12](#))
4. REMOVE FRONT SEAT HEADREST ASSEMBLY (for Bench Seat Type) (See page [SE-53](#))
5. REMOVE FRONT SEAT ASSEMBLY (for Bench Seat Type) (See page [SE-53](#))
6. REMOVE SEAT TRACK COVER (for Separate Seat Type) (See page [SE-23](#))
7. REMOVE FRONT SEAT ASSEMBLY (for Separate Seat Type) (See page [SE-23](#))
8. REMOVE FRONT FLOOR FOOTREST (See page [IR-1](#))
9. REMOVE FRONT DOOR SCUFF PLATE (for Regular Cab) (See page [IR-40](#))
10. REMOVE FRONT DOOR SCUFF PLATE (for Access Cab) (See page [IR-40](#))
11. REMOVE FRONT DOOR SCUFF PLATE (for Double Cab) (See page [IR-12](#))
12. REMOVE COWL SIDE TRIM BOARD (for Regular Cab) (See page [IR-40](#))
13. REMOVE COWL SIDE TRIM BOARD (for Access Cab) (See page [IR-40](#))
14. REMOVE COWL SIDE TRIM BOARD (for Double Cab) (See page [IR-12](#))
15. REMOVE SENSOR BRACKET
 - (a) Turn up the floor carpet.
 - (b) Remove the wire harness clamp.
 - (c) Remove the bolt and bracket.

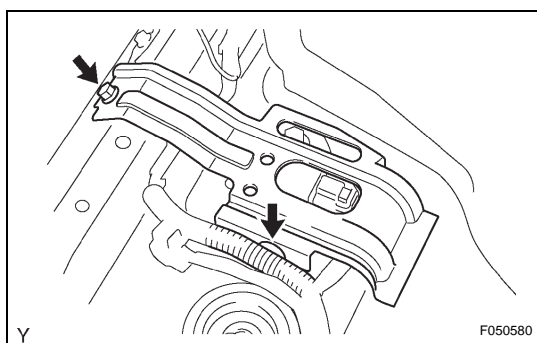

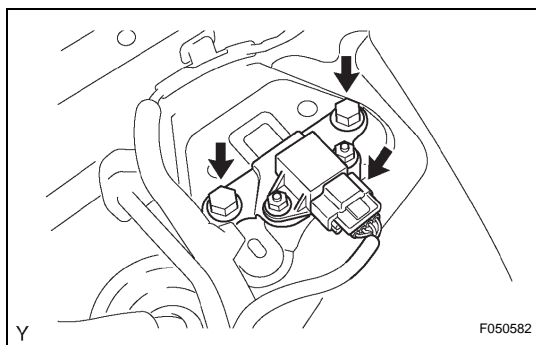

16. REMOVE DECELERATION SENSOR

- (a) Disconnect the deceleration sensor connector.
- (b) Remove the 2 bolts and deceleration sensor.

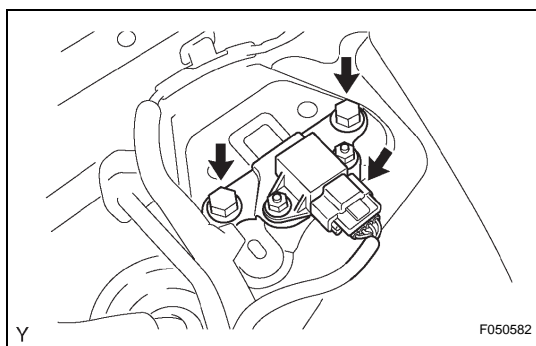

INSTALLATION

1. INSTALL DECELERATION SENSOR


- (a) Install the deceleration sensor with the 2 bolts.

Torque: 12.5 N*m (127 kgf*cm, 9 ft.*lbf)

NOTICE:

Make sure the sensor is at the correct angle when installing.

- (b) Connect the deceleration sensor connector.

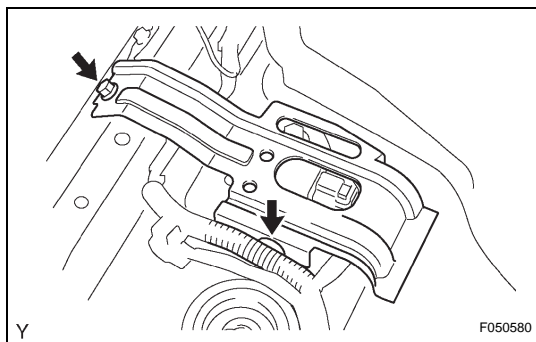

2. INSTALL SENSOR BRACKET

- (a) Install the bracket with the bolt.

Torque: 12.5 N*m (127 kgf*cm, 9 ft.*lbf)

- (b) Install the wire harness clamp.

3. INSTALL COWL SIDE TRIM BOARD (for Regular Cab) (See page [IR-52](#))

4. INSTALL COWL SIDE TRIM BOARD (for Access Cab) (See page [IR-75](#))

5. INSTALL COWL SIDE TRIM BOARD (for Double Cab) (See page [IR-29](#))

6. INSTALL FRONT DOOR SCUFF PLATE (for Regular Cab) (See page [IR-52](#))

7. INSTALL FRONT DOOR SCUFF PLATE (for Access Cab) (See page [IR-75](#))

8. INSTALL FRONT DOOR SCUFF PLATE (for Double Cab) (See page [IR-29](#))

9. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))

10. INSTALL FRONT SEAT ASSEMBLY (for Bench Seat Type) (See page [SE-67](#))

11. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Bench Seat Type) (See page [SE-68](#))

12. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH (for Bench Seat Type) (See page [SB-13](#))

13. INSTALL FRONT SEAT INNER BELT ASSEMBLY RH (for Bench Seat Type) (See page [SB-14](#))

14. INSTALL FRONT SEAT ASSEMBLY (for Separate Seat Type) (See page [SE-34](#))

- 15. INSTALL SEAT TRACK COVER (for Separate Seat Type) (See page [SE-34](#))**
- 16. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
(See page [IN-5](#))
- 17. CHECK ABS SENSOR SIGNAL**
(See page [BC-7](#))