


REMOVAL


HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY (w/o Power Door Lock) (See page [ED-34](#))**
3. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (w/ Power Door Lock) (See page [ED-13](#))**
4. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-34](#))**
5. **REMOVE FRONT DOOR TRIM PANEL ASSEMBLY LH (See page [ED-35](#))**
6. **REMOVE FRONT NO. 1 SPEAKER ASSEMBLY**
 - (a) Disconnect the connector.
 - (b) Remove the 4 screws and the front No. 1 speaker assembly.

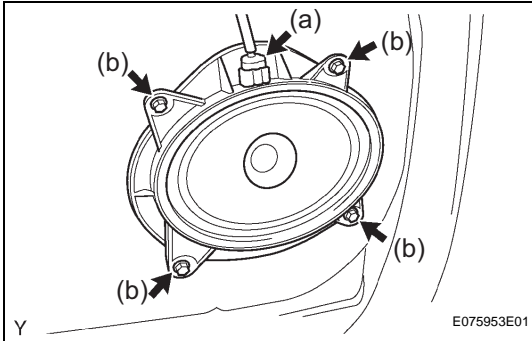

AV

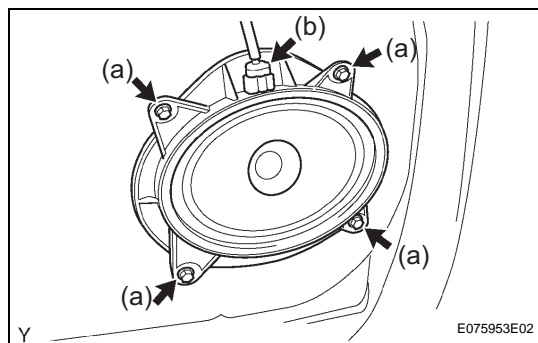

INSTALLATION

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

1. INSTALL FRONT NO. 1 SPEAKER ASSEMBLY

- (a) Install the front No. 1 speaker assembly with the 4 screws.
- (b) Connect the connector.

2. INSTALL FRONT DOOR TRIM PANEL ASSEMBLY LH (See page [ED-48](#))

3. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-49](#))

4. INSTALL POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (w/ Power Door Lock) (See page [ED-30](#))

5. INSTALL FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY (w/o Power Door Lock) (See page [ED-49](#))

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)