


CURTAIN SHIELD AIRBAG ASSEMBLY


COMPONENTS

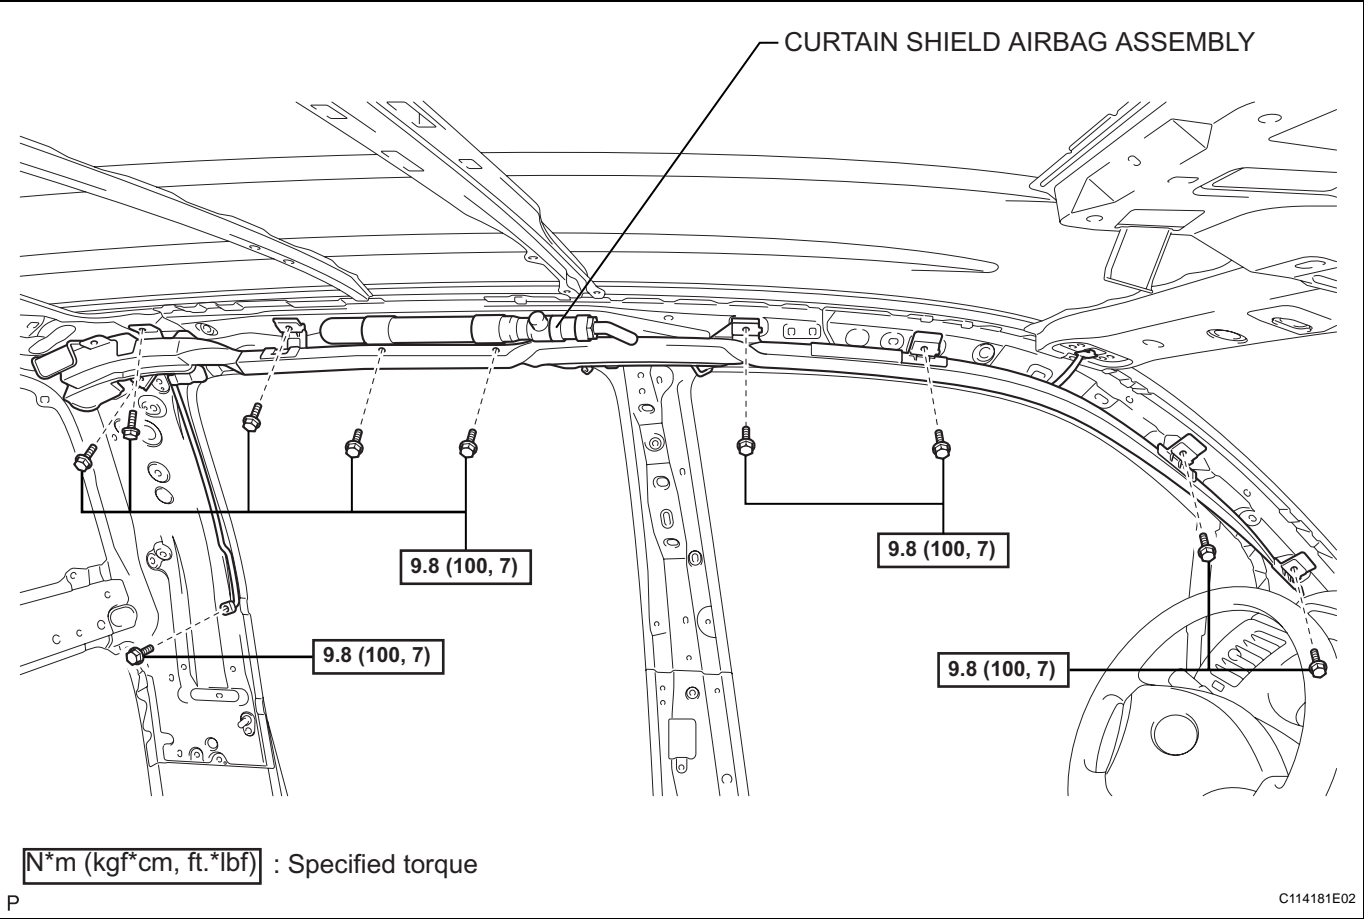

ON-VEHICLE INSPECTION


1. INSPECT CURTAIN SHIELD AIRBAG ASSEMBLY (for Vehicle not Involved in Collision)

- (a) Perform a diagnostic system check (see page [RS-37](#)).
- (b) With the curtain shield airbag assembly installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front pillar garnish or roof headlining assembly with a new one: Cuts, minute cracks or marked discoloration on the front pillar garnish or roof headlining assembly around the curtain shield airbag assembly.

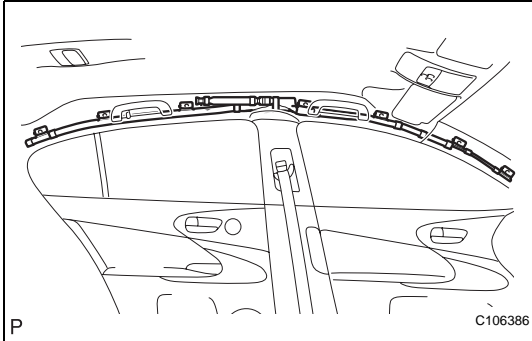

2. INSPECT CURTAIN SHIELD AIRBAG ASSEMBLY (for Vehicle Involved in Collision and Airbag not Deployed)

- (a) Perform a diagnostic system check (see page [RS-37](#)).
- (b) With the curtain shield airbag assembly removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the curtain shield airbag assembly with a new one:
 - Cuts, minute cracks or marked discoloration on the curtain shield airbag assembly.
 - Cracks or other damage to the connectors.

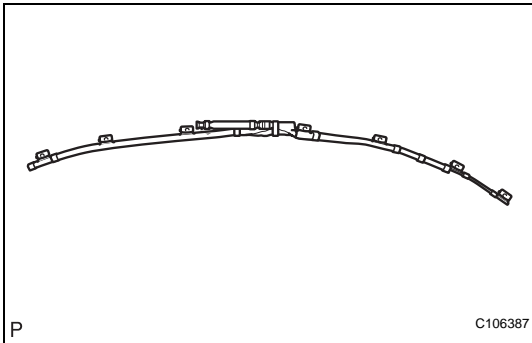

CAUTION:

For removal and installation procedures of the curtain shield airbag assembly. Be sure to follow the correct procedure.