

REMOVAL

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (w/ Front Seat Side Airbag) (See page [RS-1](#)).

1. REMOVE CABLE FROM NEGATIVE BATTERY TERMINAL



Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working (w/ Front Seat Side Airbag).

2. REMOVE SEAT TRACK COVER

HINT:

Follow the same procedures as for the opposite side.

- (a) Disengage the 2 claws and remove the seat track cover.

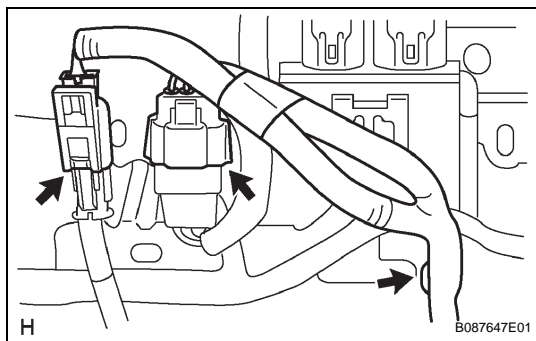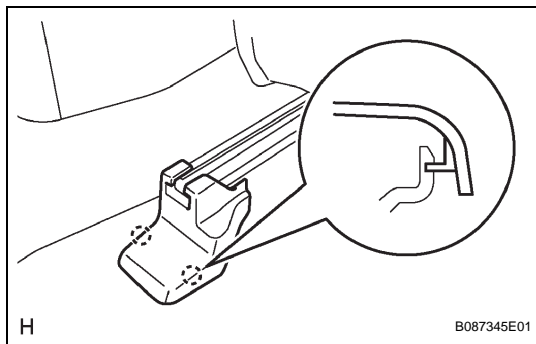

3. REMOVE FRONT SEAT ASSEMBLY

- (a) Disconnect the connector.
- (b) w/ Front Seat Side Airbag:
 - (1) Disconnect the connector.
- (c) Using a clip remover, remove the wire harness clamp.

- (d) Remove the 4 bolts and front seat.




DISASSEMBLY

CAUTION:

Wear protective gloves. Sharp surface on the front seat with adjuster frame could cause injuries to your hands.


1. REMOVE FRONT SEAT HEADREST ASSEMBLY

- Disengage the lock button of the front seat headrest support and remove the front seat headrest.

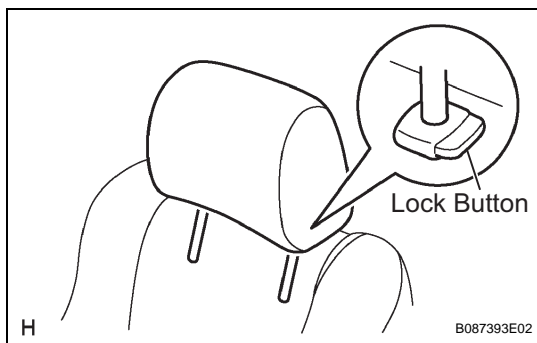


2. REMOVE FRONT SEAT INNER BELT ASSEMBLY

- Disconnect the seat wire connector.
- Using a clip remover, remove the connector clamp.
- Remove the wire harness clamp.
- Remove the nut and front seat inner belt.

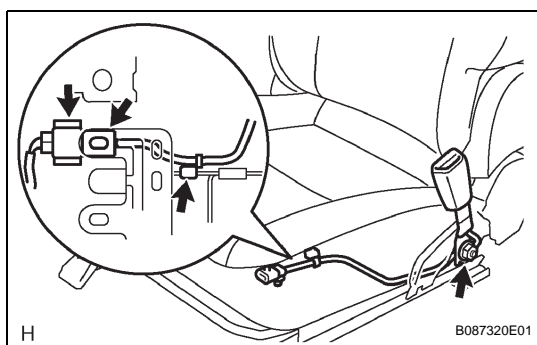


3. REMOVE FRONT SEAT CUSHION INNER SHIELD


- Remove the screw.
- Disengage the claw and clip, and remove the front seat cushion shield inner.

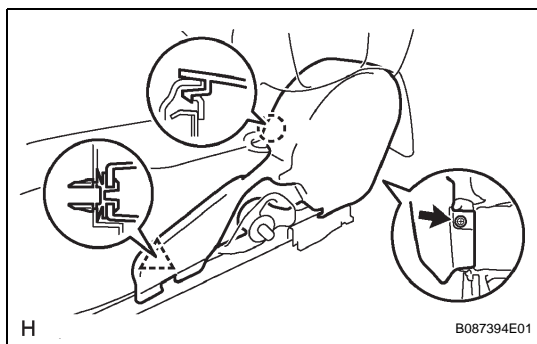


4. REMOVE RECLINING ADJUSTER RELEASE HANDLE

- Using a screwdriver with its tip taped in protective tape, disengage the claw and remove the reclining adjuster release handle.

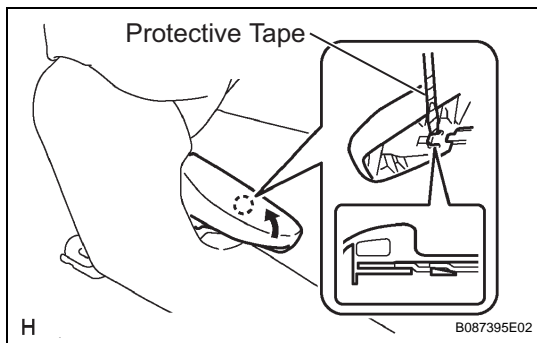


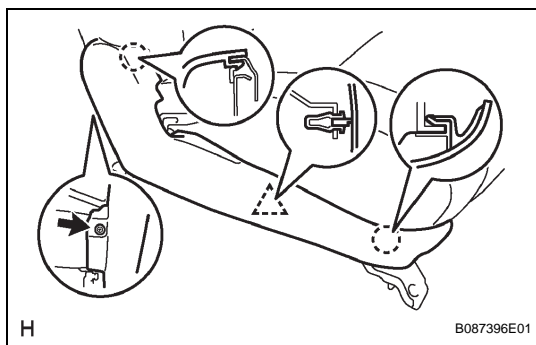**5. REMOVE FRONT SEAT CUSHION SHIELD**

- (a) Remove the screw.
- (b) Disengage the 2 claws and clip, and remove the front seat cushion shield.

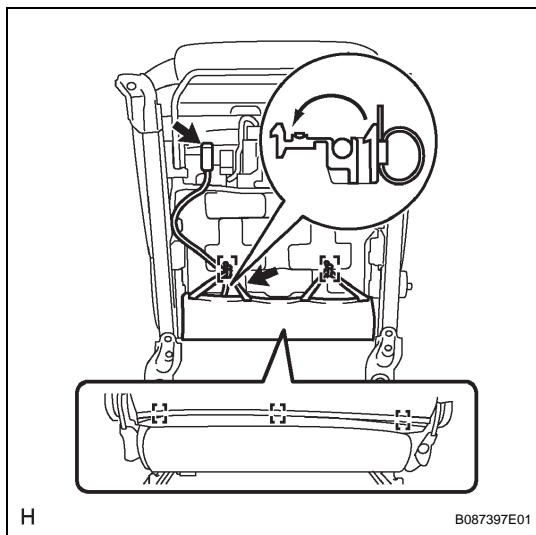**6. REMOVE FRONT SEAT HEADREST SUPPORT**


- (a) w/ Front Seat Side Airbag:
 - (1) Using a clip remover, remove the connector clamp.
 - (2) Remove the wire harness clamp.
- (b) Remove the 5 hog rings.

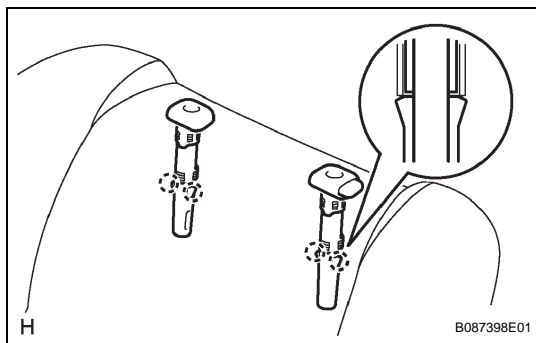


- (c) Disengage the 2 claws and remove the front seat headrest support.

HINT:

Follow the same procedures as for the opposite side.

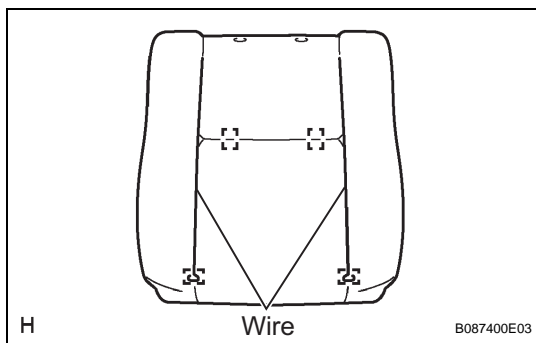
**7. REMOVE FRONT SEAT BACK COVER**

- (a) Remove the 2 hog rings.
- (b) Remove the 2 wires.

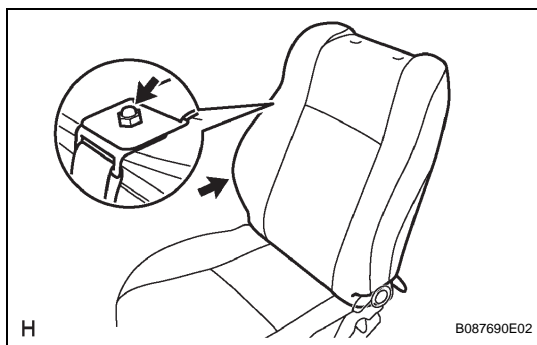


- (c) w/ Front Seat Side Airbag:
 - (1) Remove the nut and strap.
- (d) Remove the 2 hog rings and front seat back cover.
- (e) Remove the front seat back pad from the front seat frame adjuster.

8. REMOVE FRONT SEAT CUSHION COVER

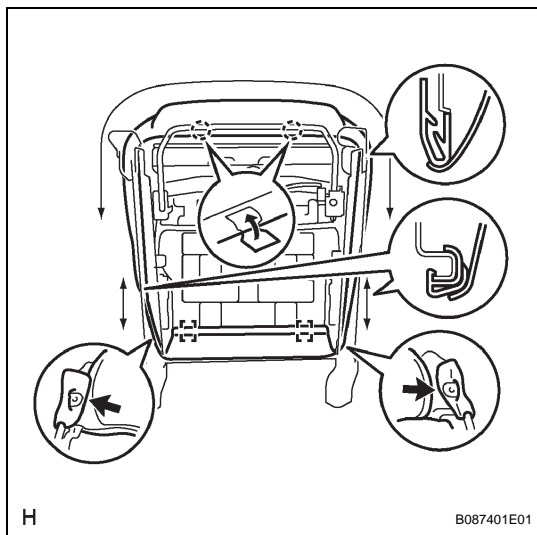


- (a) Remove the front seat cushion cover from the front seat frame adjuster.
- (b) Remove the 2 hog rings.
- (c) Disengage the 2 claws and 3 hooks, and remove the front seat cushion pad together with the front seat cushion cover.

SE

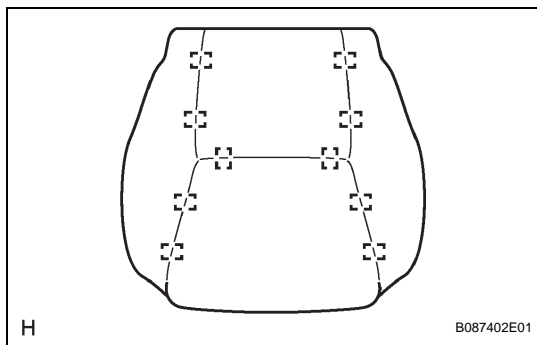

- (d) Remove the 10 hog rings and front seat cushion cover.

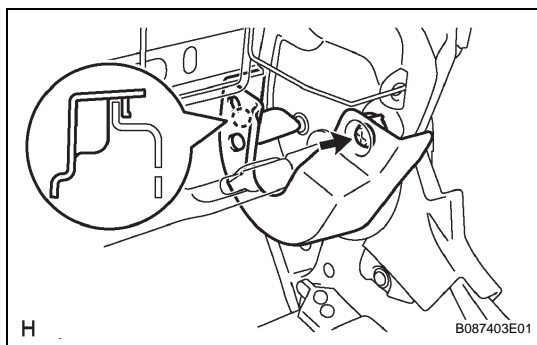


9. REMOVE RECLINING ADJUSTER INSIDE COVER LH

- (a) Remove the screw.
- (b) Disengage the claw and remove the reclining adjuster inside cover.

10. REMOVE RECLINING ADJUSTER INSIDE COVER RH

HINT:

Follow the same procedures as for the reclining adjuster inside cover LH.

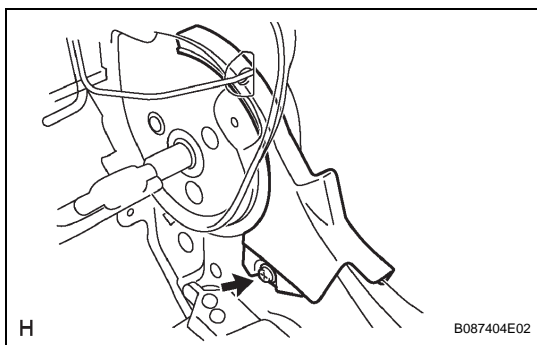
**11. REMOVE RECLINING ADJUSTER OUTSIDE COVER LH**

- (a) Remove the screw and reclining adjuster outside cover.


12. REMOVE RECLINING ADJUSTER OUTSIDE COVER RH

HINT:

Follow the same procedures as for the reclining adjuster outside cover LH.

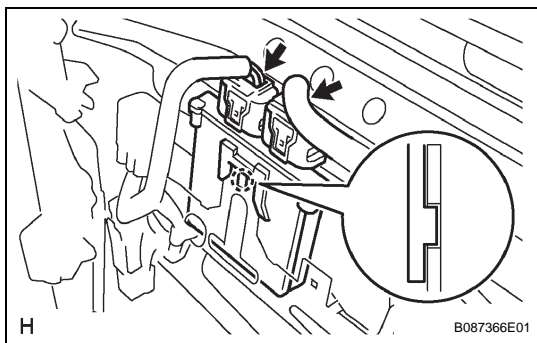**13. REMOVE OCCUPANT CLASSIFICATION ECU**

- (a) Disconnect the 2 connectors.
(b) Disengage the claw and remove the occupant classification ECU.

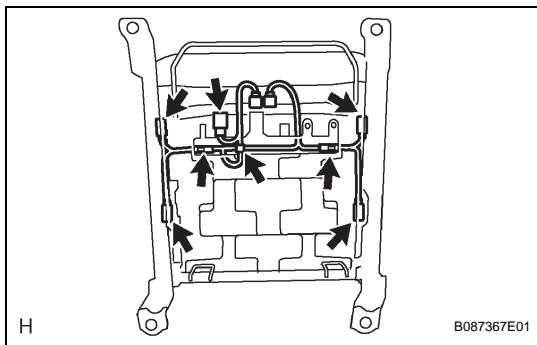**14. REMOVE SEAT WIRE**

- (a) Disconnect the 4 connectors.
(b) Using a clip remover, remove the 3 wire harness clamps.