


INSTALLATION



1. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY

- (a) Install the rear seat back hinge with the 2 bolts.
Torque: 18 N*m (185 kgf*cm, 14 ft.*lbf)

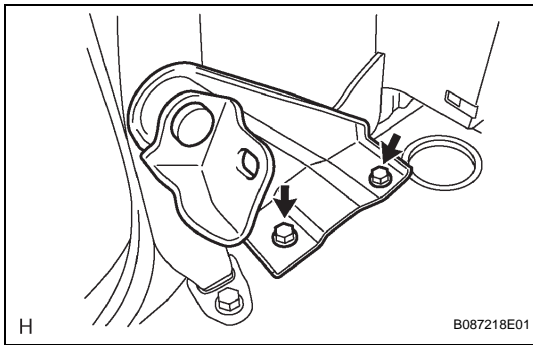

2. INSTALL REAR SEAT BACK ASSEMBLY

- (a) Install the rear seat back with the 2 bolts.
Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)

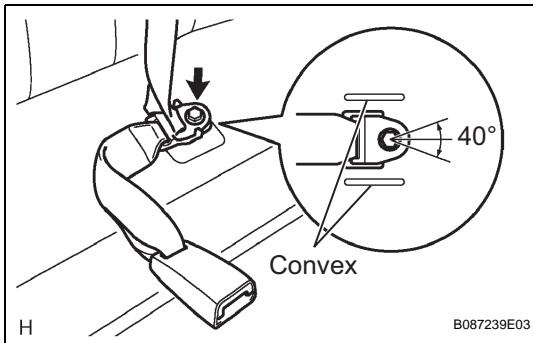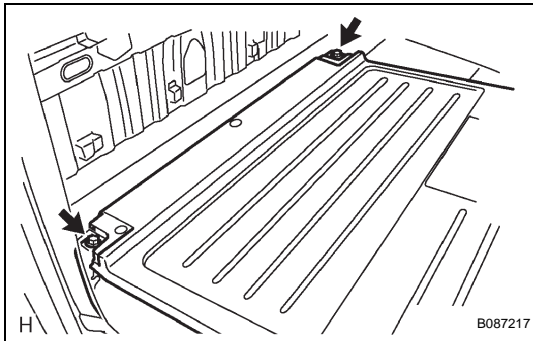

- (b) Install the rear seat belt inner and rear seat belt outer center of the floor anchor with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

NOTICE:


- Make sure that the rear seat inner belt and floor anchor of the rear center seat outer belt are oriented in the correct direction when installing.
- Be careful not to place the rear seat inner belt (and floor anchor of the rear center seat outer belt) over the convex areas of the floor panel.

3. INSTALL REAR SEAT BACK HINGE COVER

HINT:

Follow the same procedures as for the opposite side.

- (a) Lock the 3 claws and install the rear seat back hinge cover.

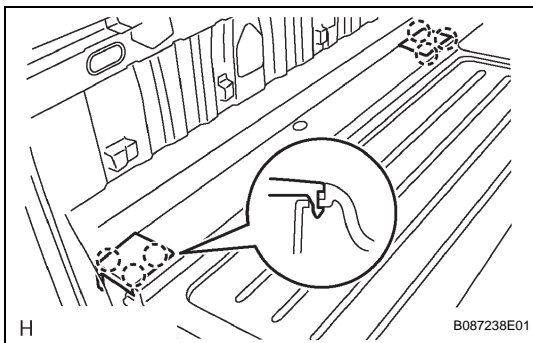

4. INSTALL REAR SEAT CUSHION ASSEMBLY

- (a) Install the rear seat cushion with the 2 bolts.
Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)

