
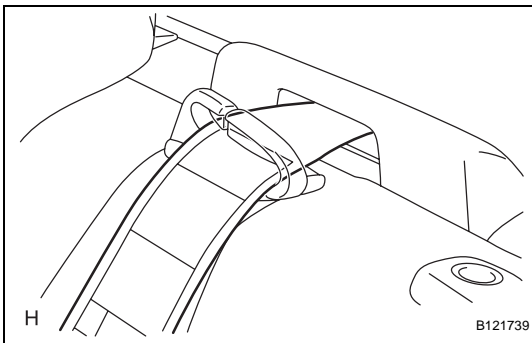



REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT SEAT INNER BELT ASSEMBLY LH**
(See page [SB-12](#))
3. **REMOVE FRONT SEAT INNER BELT ASSEMBLY RH**
(See page [SB-12](#))
4. **REMOVE FRONT SEAT HEADREST ASSEMBLY**
 - (a) Push in the 2 lock buttons of the 2 front seat headrest supports and remove the 2 front seat headrests.

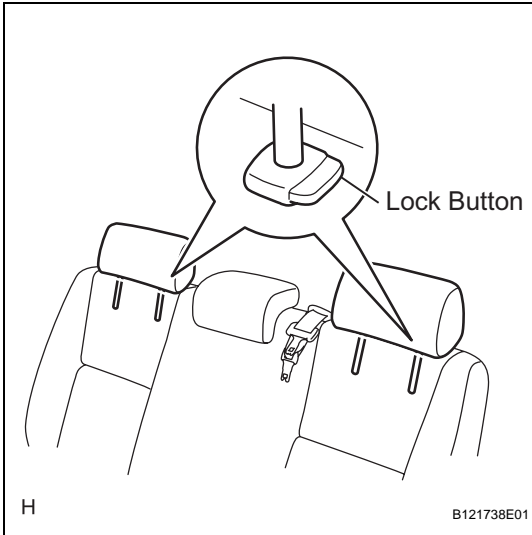


5. **REMOVE FRONT SEAT ASSEMBLY**
 - (a) Remove the belt of the front center seat outer belt from the front center seat outer belt guide.

SE

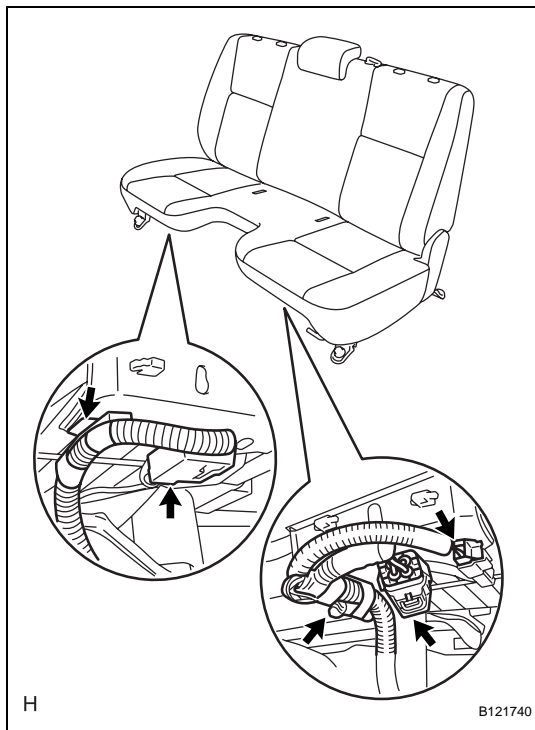

- (b) Disconnect the 3 connectors.
- (c) Using a clip remover, remove the 2 wiring harness clamps.

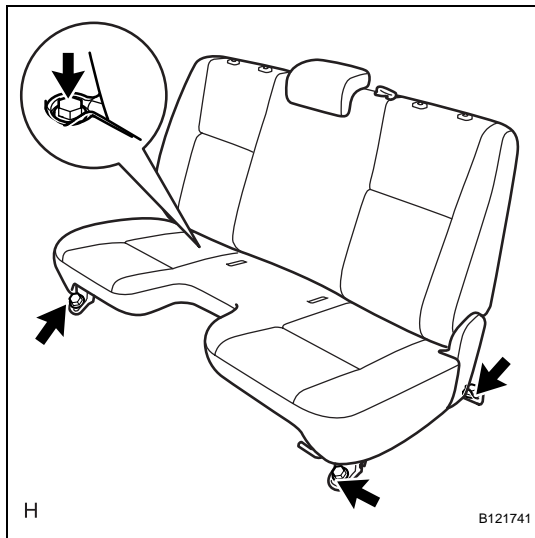

- (d) Remove the 4 bolts and the front seat.