
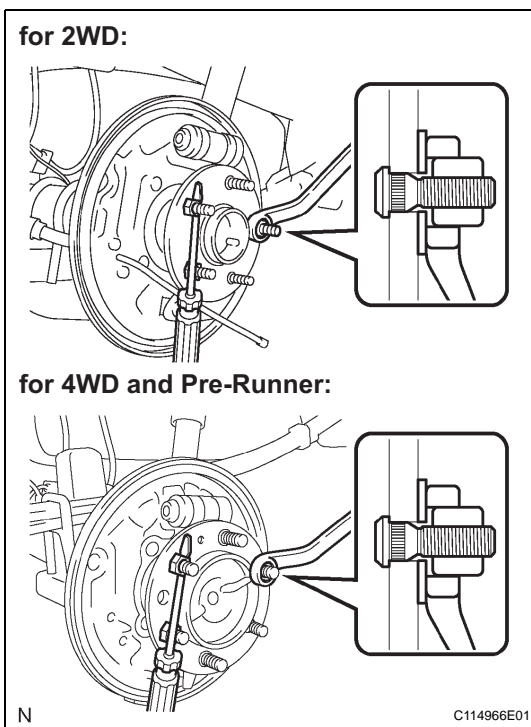


REAR AXLE HUB BOLT

REMOVAL

1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (See page [BR-68](#))
3. REMOVE FRONT BRAKE SHOE (See page [BR-68](#))
4. REMOVE REAR BRAKE SHOE (See page [BR-69](#))
5. REMOVE REAR AXLE HUB BOLT
 - (a) Using SST, remove the hub bolt.
SST 09650-17011

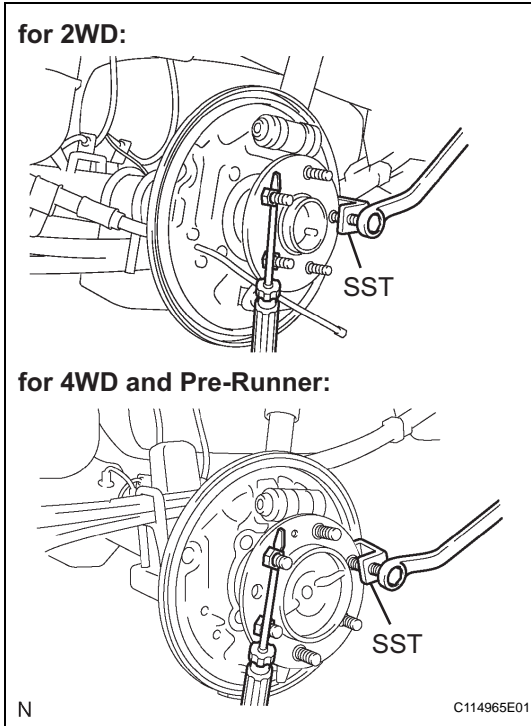

INSTALLATION

1. INSTALL REAR AXLE HUB BOLT
 - (a) Install a new hub bolt through the axle hub.
 - (b) Install the washer plate, as shown in the illustration, through the hub bolt, and install the hub bolt by tightening the hub nut.
2. APPLY HIGH TEMPERATURE GREASE (See page [BR-71](#))
3. INSTALL REAR BRAKE SHOE (See page [BR-71](#))
4. INSTALL FRONT BRAKE SHOE (See page [BR-72](#))
5. INSPECT REAR DRUM BRAKE INSTALLATION (See page [BR-73](#))
6. INSTALL REAR BRAKE DRUM SUB-ASSEMBLY (See page [BR-73](#))
7. ADJUST REAR DRUM BRAKE SHOE CLEARANCE (See page [BR-74](#))
8. INSTALL REAR WHEEL
Torque: 113 N*m (1,152 kgf*cm, 83 ft.*lbf)

9. **INSPECT PARKING BRAKE PEDAL TRAVEL** (for Automatic Transmission) (See page [PB-1](#))
10. **INSPECT PARKING BRAKE LEVER TRAVEL** (for Manual Transmission) (See page [PB-1](#))
11. **ADJUST PARKING BRAKE PEDAL TRAVEL** (for Automatic Transmission) (See page [PB-2](#))
12. **ADJUST PARKING BRAKE LEVER TRAVEL** (for Manual Transmission) (See page [PB-2](#))