
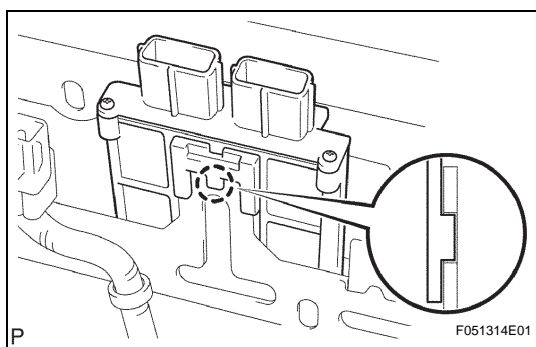


REMOVAL

1. **PRECAUTION**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE FRONT SEAT ASSEMBLY RH**
4. **REMOVE OCCUPANT CLASSIFICATION ECU**
 - (a) Disconnect the connector from the occupant classification ECU.

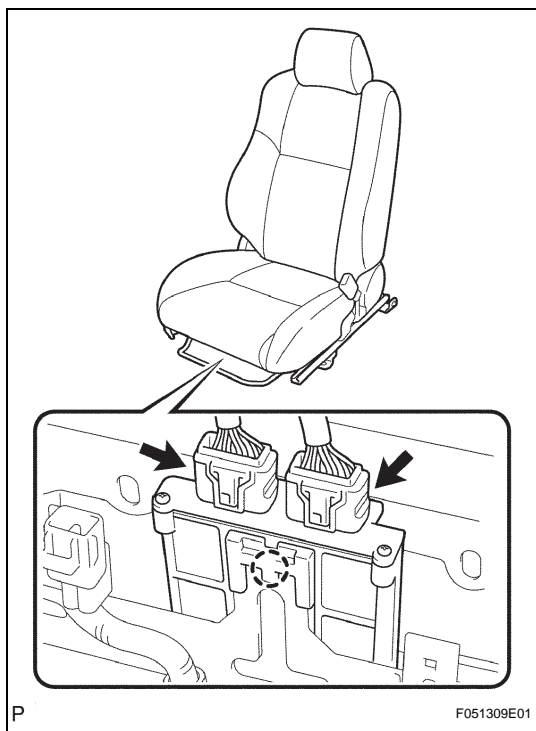

- (b) Disengage the claw and remove the occupant classification ECU.

INSTALLATION

1. INSTALL OCCUPANT CLASSIFICATION ECU

- (a) Check that the ignition switch is OFF.
- (b) Check that the cable is disconnected from the battery negative (-) terminal is disconnected.

CAUTION:

After removing the cable from the terminal, wait for at least 90 seconds before starting the operation.

- (c) Engage the claw and install the occupant classification ECU.

NOTICE:

- If the occupant classification ECU has been dropped, or there are cracks, dents or other defects in the case or connector, replace it with a new one.
 - When installing the occupant classification ECU, make sure that the SRS wiring does not interfere with any other parts and that it is not pinched between other parts.
- (d) Connect the connector to the occupant classification ECU.

2. INSTALL FRONT SEAT ASSEMBLY RH

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

4. OCCUPANT CLASSIFICATION ECU INITIALIZATION

5. INSPECT SRS WARNING LIGHT

(See page [RS-28](#))