


2. REMOVE BACK COVER

- (a) Engage the 2 claws and install the back cover.
- (b) Install the 3 screws.

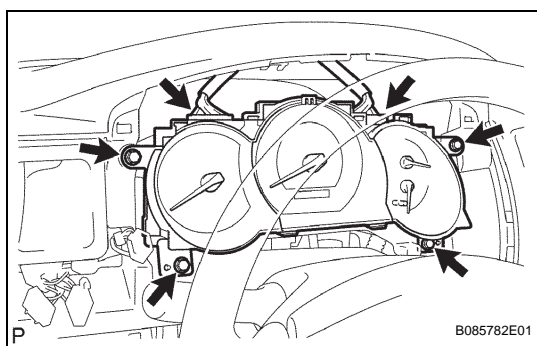

INSTALLATION

1. INSTALL COMBINATION METER ASSEMBLY

- (a) Connect the 2 connectors.
- (b) Install the combination meter assembly with the 4 screws.

Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

2. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

3. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL (See page [IP-22](#))

4. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-8](#))

5. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-25](#))

6. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-25](#))

7. INSTALL COWL SIDE TRIM BOARD LH (for Regular Cab) (See page [IR-52](#))

8. INSTALL COWL SIDE TRIM BOARD LH (for Access Cab) (See page [IR-75](#))

9. INSTALL COWL SIDE TRIM BOARD LH (for Double Cab) (See page [IR-29](#))

10. INSTALL FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page [IR-52](#))

11. INSTALL FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-75](#))

12. INSTALL FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-29](#))

13. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))

14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)