




AV

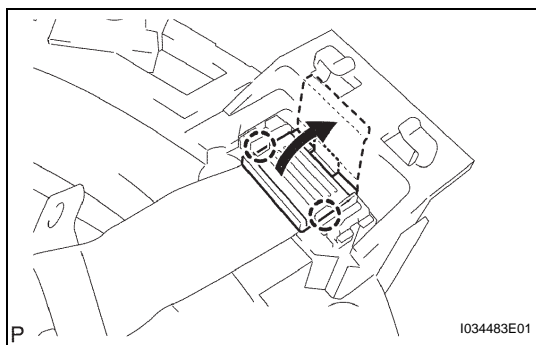

- (e) Disengage the 2 claws and open the latch on the top of the connector as shown in the illustration.

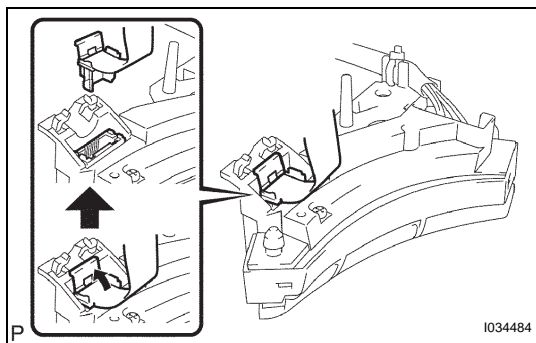


- (f) Pull out the connector while pinching the latch with fingers and disconnect the steering pad switch cable from the steering pad switch LH.

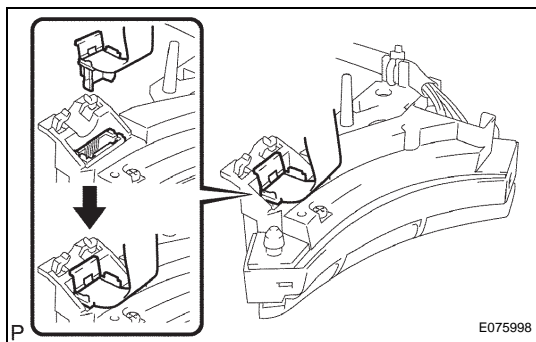


INSTALLATION

1. INSTALL STEERING PAD SWITCH LH


- (a) Install the steering pad switch cable onto the steering pad switch LH while holding the connector cover.

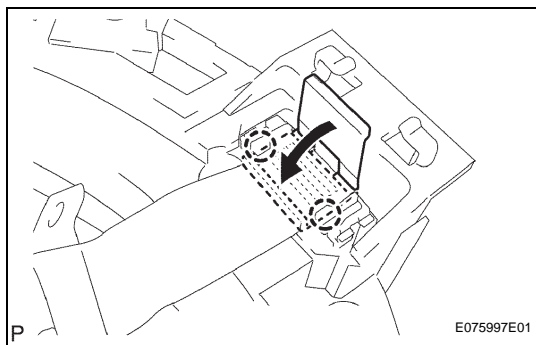


- (b) Hold the connector cover down to engage the 2 claws as shown in the illustration.

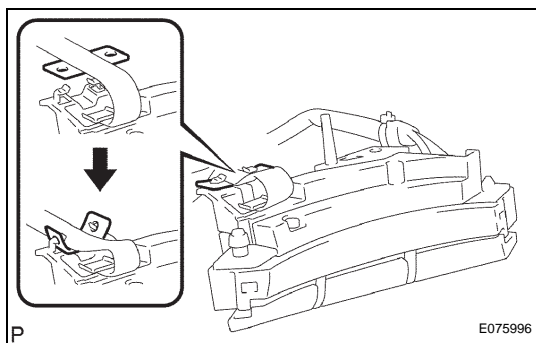

- (c) Install the tab of the steering pad switch cable onto the steering pad switch LH as shown in the illustration.

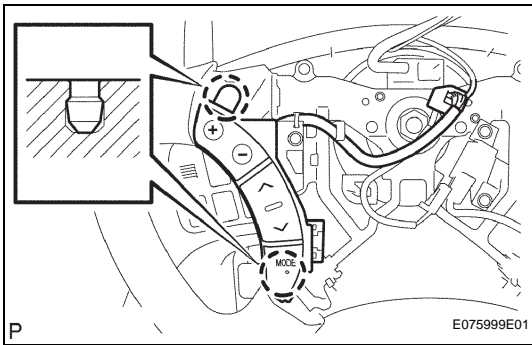

- (d) Engage the 2 pins and install the steering pad switch LH.

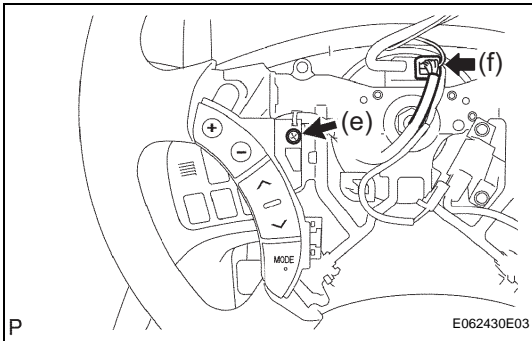

- (e) Install the screw.
(f) Connect the connector.

2. **INSTALL HORN BUTTON ASSEMBLY** (See page [RS-558](#))
3. **INSTALL NO. 3 LOWER STEERING WHEEL COVER** (See page [SR-18](#))
4. **INSTALL NO. 2 LOWER STEERING WHEEL COVER** (See page [SR-18](#))
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
6. **INSPECT HORN BUTTON ASSEMBLY** (See page [RS-557](#))
7. **INSPECT SRS WARNING LIGHT** (See page [SR-18](#))