


REMOVAL

1. REMOVE REAR SEAT CUSHION ASSEMBLY

- (a) Remove the 2 bolts and rear seat cushion.

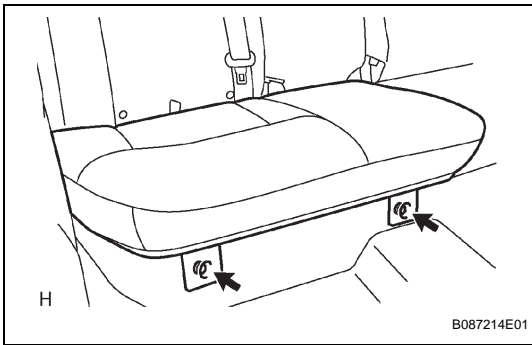


2. REMOVE REAR SEAT BACK HINGE COVER

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 3 claws and remove the rear seat back hinge cover.


HINT:

Follow the same procedures as for the opposite side.

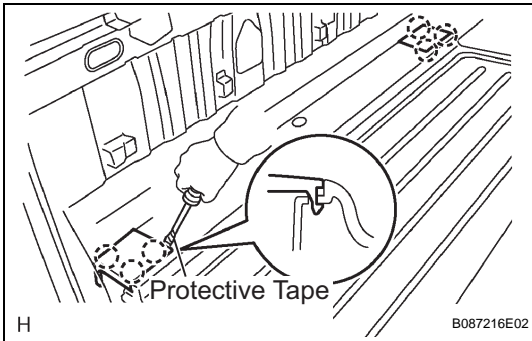


3. REMOVE REAR SEAT BACK ASSEMBLY

- (a) Remove the bolt, rear seat belt outer center and floor anchor of the rear seat belt inner.

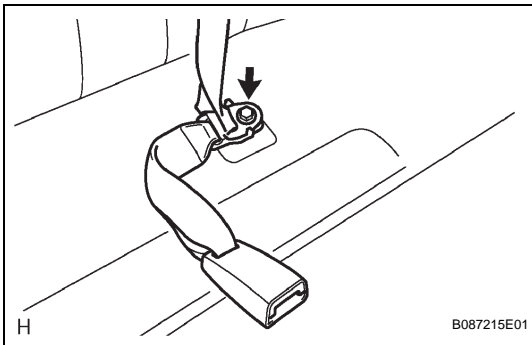


- (b) Remove the 2 bolts and rear seat back.

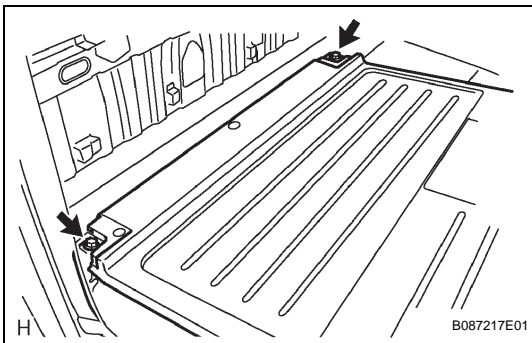

4. REMOVE REAR SEAT BACK HINGE SUB-ASSEMBLY

- (a) Remove the 2 bolts and rear seat back hinge.

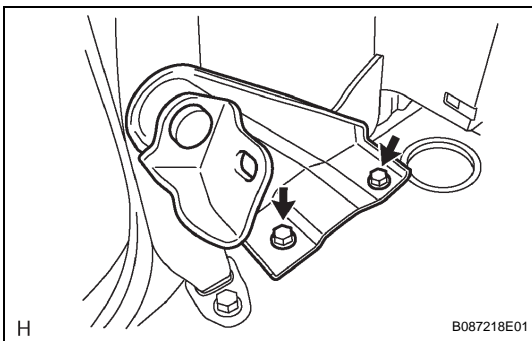


DISASSEMBLY

CAUTION:

Wear protective gloves. Sharp surface on the rear seat back frame could cause injuries to your hands.


1. REMOVE REAR SEAT CUSHION BAND

- (a) Remove the screw and rear seat cushion band.

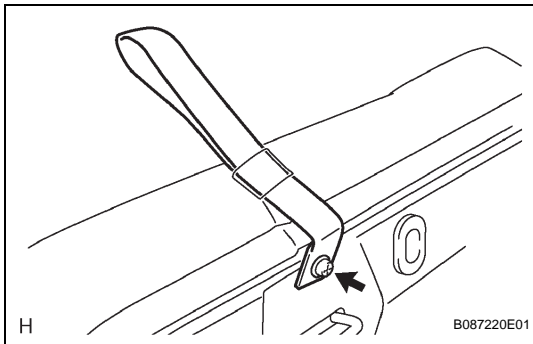**2. REMOVE REAR SEAT HEADREST HOLDER****HINT:**


Follow the same procedures as for the opposite side.

- (a) Disengage the 2 claws and remove the rear seat headrest holder.

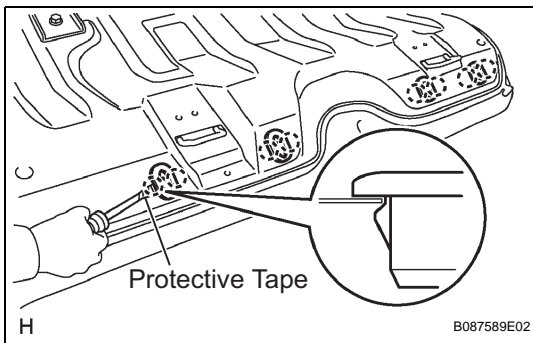
**3. REMOVE REAR SEAT CUSHION HINGE SUB-ASSEMBLY****HINT:**


Follow the same procedures as for the opposite side.

- (a) Remove the bolt and rear seat cushion hinge.

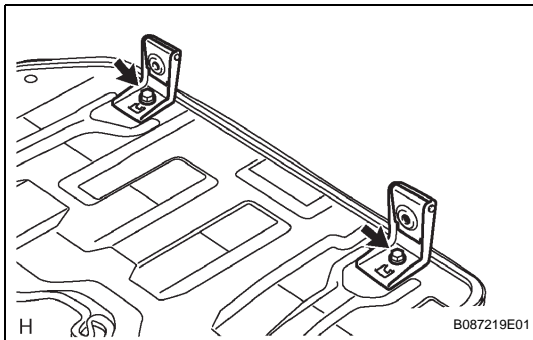**4. REMOVE REAR SEAT CUSHION FRAME SUB-ASSEMBLY**


- (a) Remove the hog ring.
(b) Disengage the hook and remove the rear seat cushion frame.

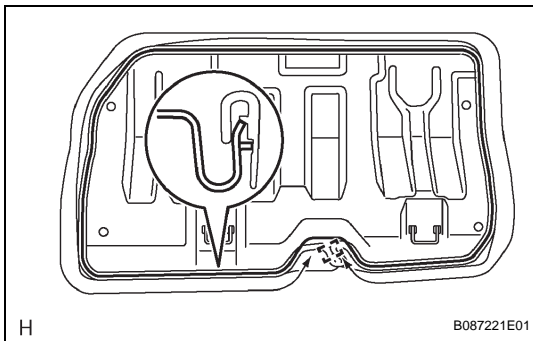

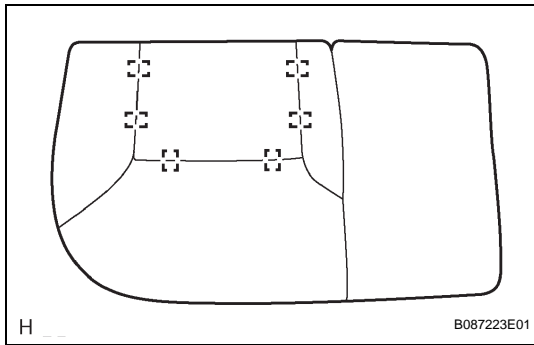


5. REMOVE REAR SEAT CUSHION COVER

- (a) Remove the 6 hog rings and rear seat cushion cover.

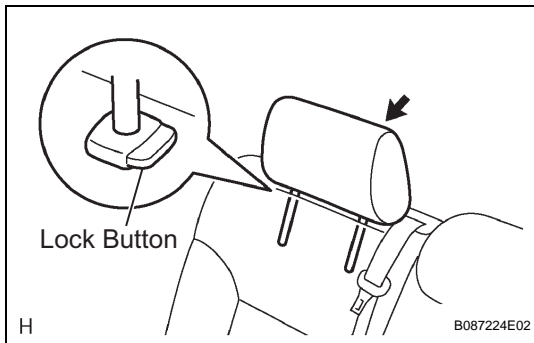


6. REMOVE REAR SEAT HEADREST ASSEMBLY

- (a) Disengage the lock button of the rear seat headrest support and remove the rear seat headrest.

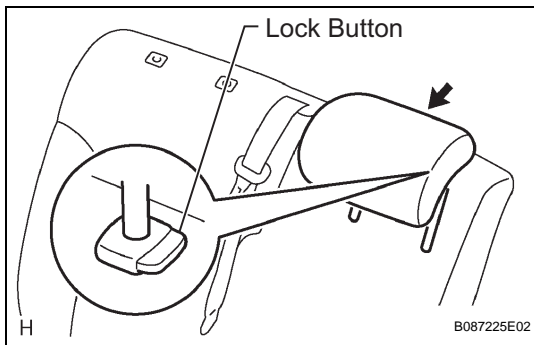


7. REMOVE REAR CENTER SEAT HEADREST ASSEMBLY

- (a) Disengage the lock button of the rear seat headrest support and remove the rear seat headrest center.

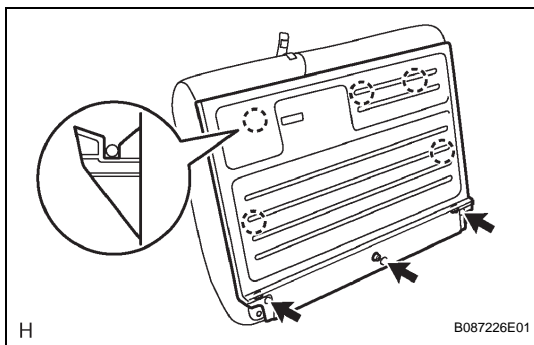

8. REMOVE REAR SEAT BACK BOARD SUB-ASSEMBLY

- (a) Remove the 3 screws.
- (b) Disengage the 5 claws and remove the rear seat back board.

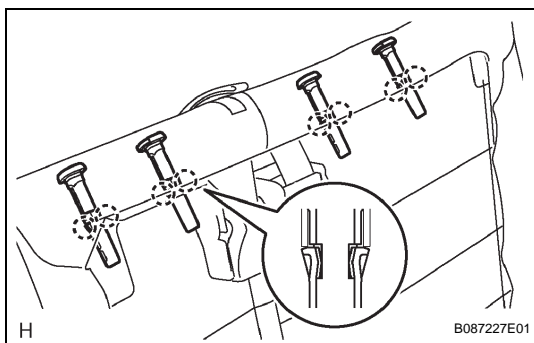


9. REMOVE REAR SEAT HEADREST SUPPORT


HINT:

Follow the same procedures as for the opposite side.


- (a) Disengage the 2 claws and remove the front seat headrest support.

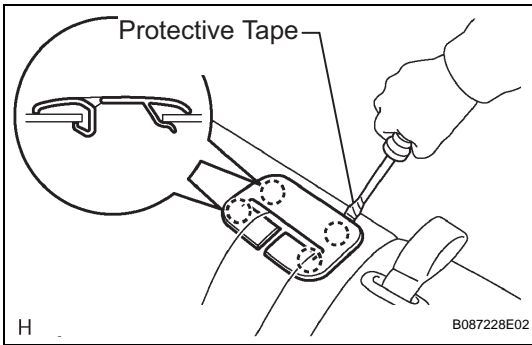**10. REMOVE REAR SEAT SHOULDER BELT COVER**


- (a) Using a screwdriver with its tip taped with protective tape, disengage the 4 claws and remove the rear seat shoulder belt cover.

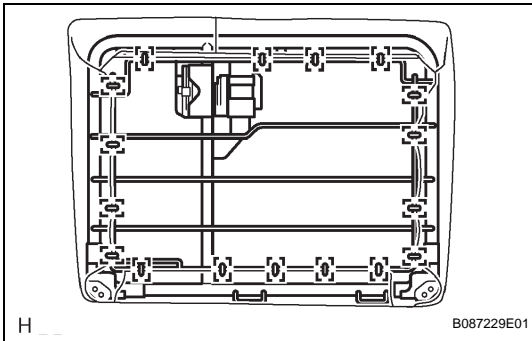**11. REMOVE REAR SEAT BACK FRAME SUB-ASSEMBLY**


- (a) Remove the 17 hog rings.
- (b) Remove the rear seat back spring from the rear seat back pad.

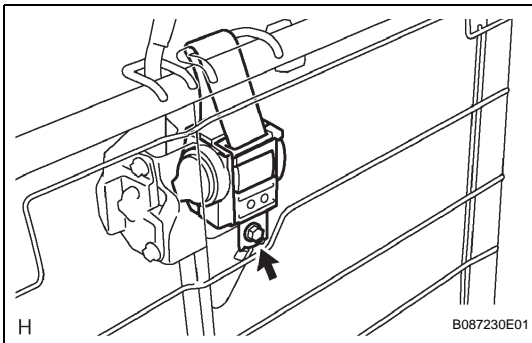**12. REMOVE REAR CENTER SEAT OUTER BELT ASSEMBLY**


- (a) Insert the belt through the hole into the rear seat back frame.
- (b) Remove the bolt and rear seat belt outer center.

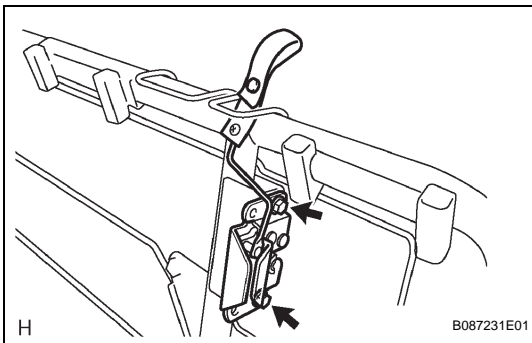**13. REMOVE REAR SEAT BACK LOCK ASSEMBLY**

- (a) Remove the 2 bolts and rear seat back lock.

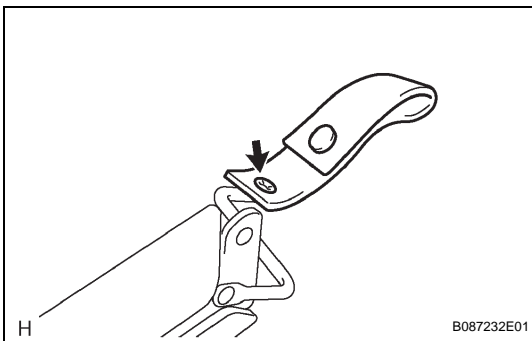**14. REMOVE REAR SEAT LOCK HANDLE**

- (a) Remove the screw and rear seat lock handle.

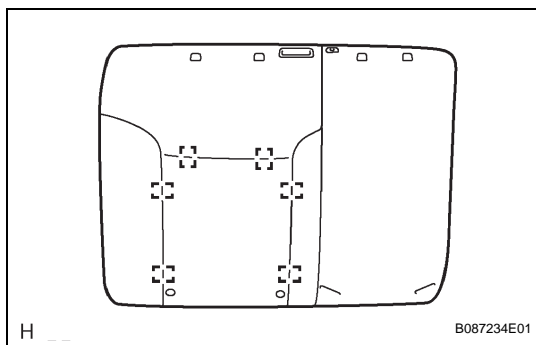**15. REMOVE REAR SEAT BACK COVER**

- (a) Remove the 6 hog rings and rear seat back cover.