



- (c) Disengage the clip and disconnect the parking brake cable from the parking brake equalizer.


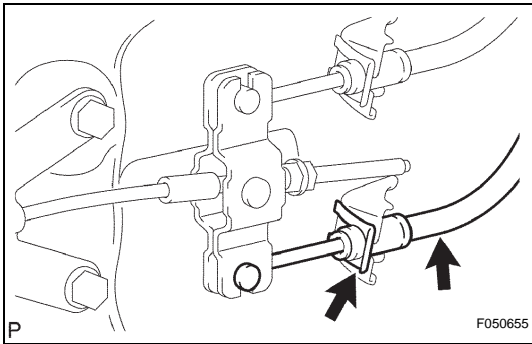




PB

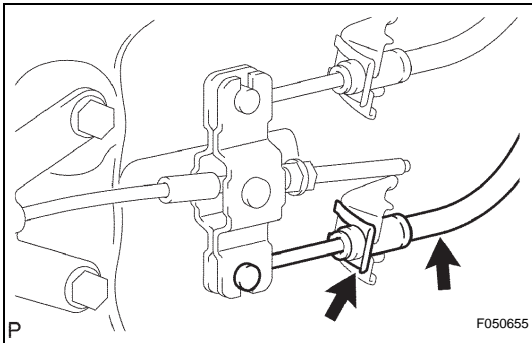

INSTALLATION

1. **INSTALL PARKING BRAKE CABLE ASSEMBLY NO. 3**
 - (a) Install the parking brake cable with the clip onto the parking brake equalizer.
 - (b) Install the parking brake cable with the 4 bolts.
Torque: 13 N*m (127 kgf*cm, 9 ft.*lbf)

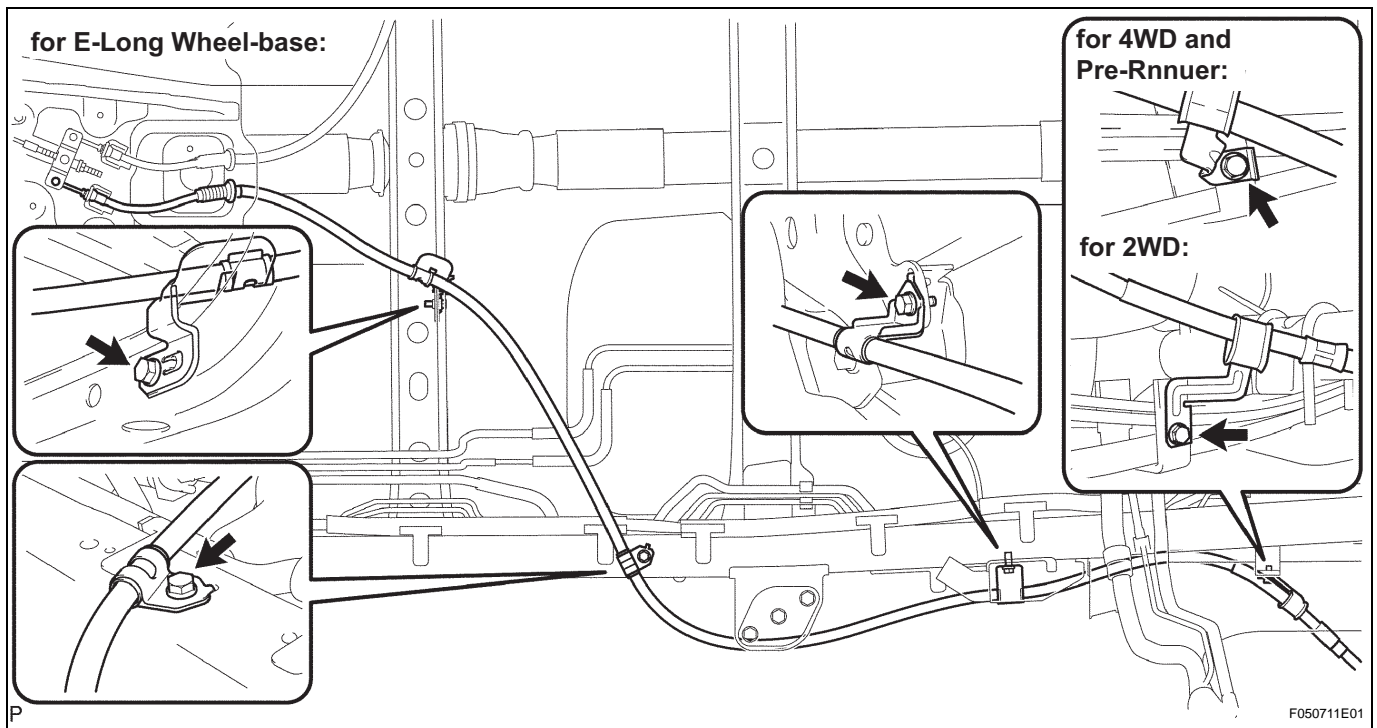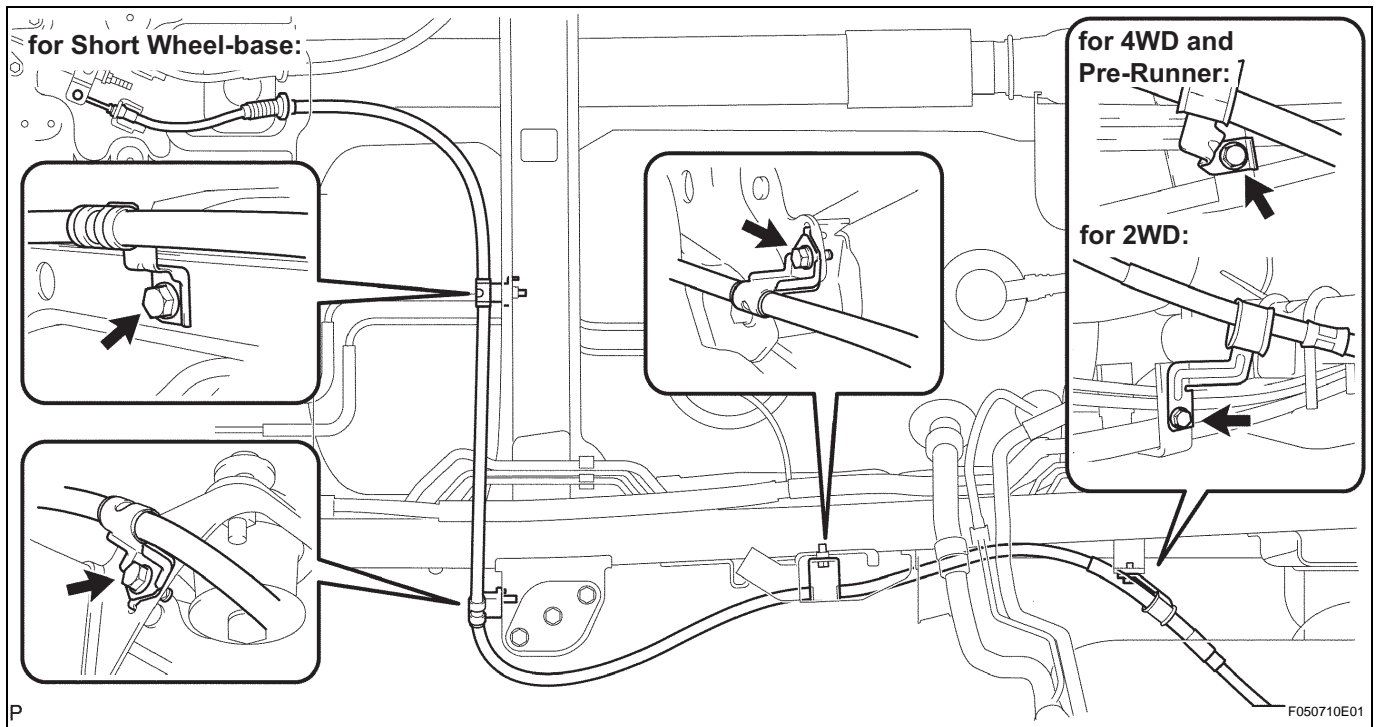


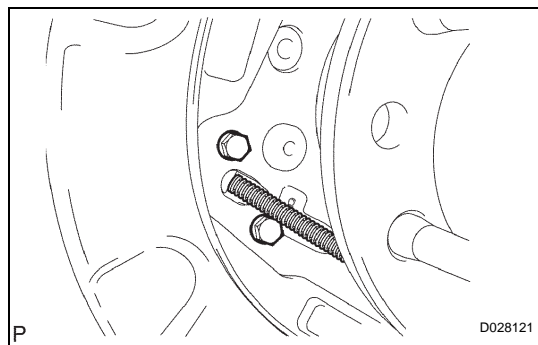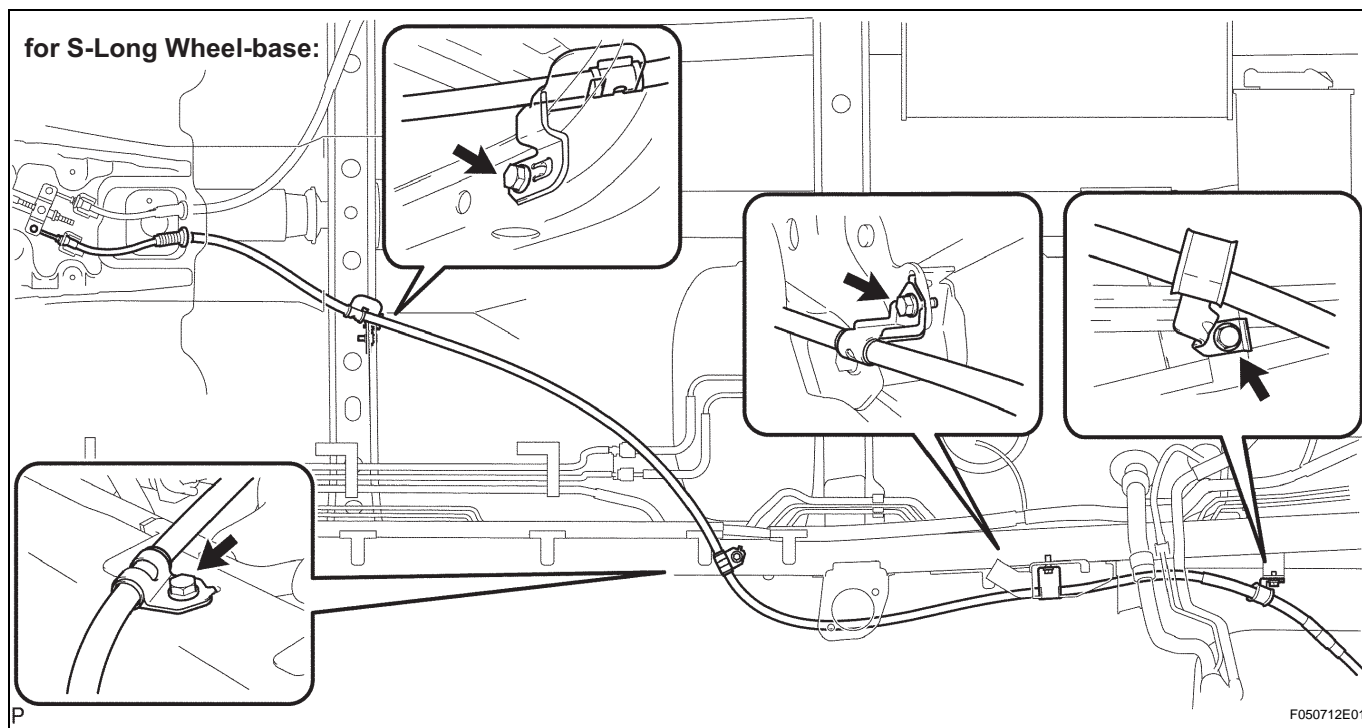

- (c) Install the parking brake cable with the 2 bolts onto the backing plate.

Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)

PB

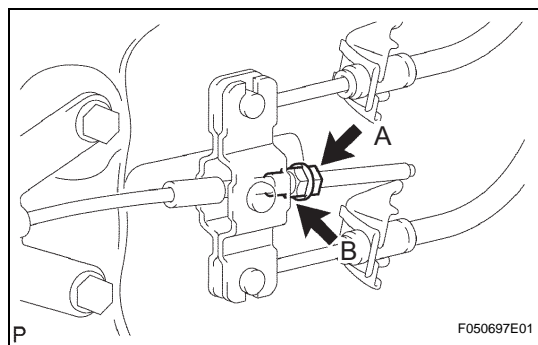

2. INSTALL PARKING BRAKE CABLE ASSEMBLY NO. 1 (for Automatic Transmission)



- Install the parking brake cable and provisionally tighten the adjusting nut B and lock nut A.
- Install the parking brake cable with the 4 nuts A, 2 clamps B, 2 bolts C.

Torque: Nut A

6.0 N*m (61 kgf*cm, 53 in.*lbf)

Bolt C


13 N*m (127 kgf*cm, 9 ft.*lbf)

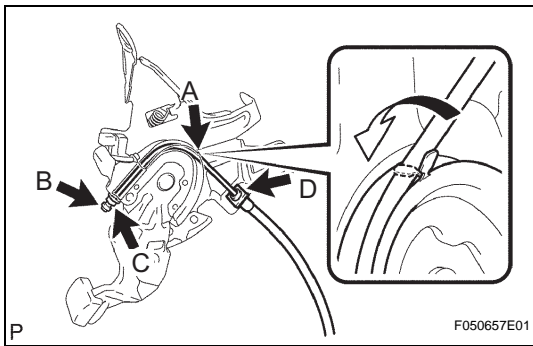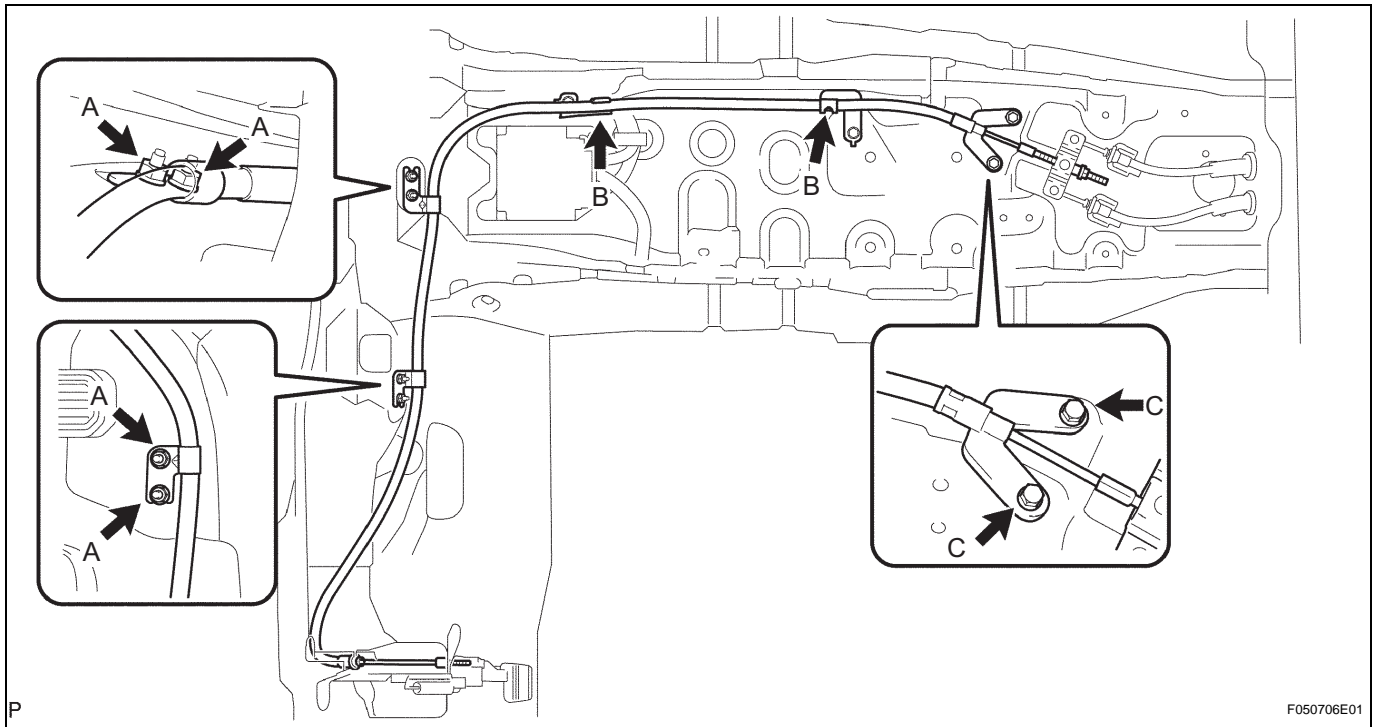

- (c) Install the parking brake cable with the clip D, adjusting nut C and lock nut B onto the parking brake control pedal.

Torque: 13 N*m (127 kgf*cm, 9 ft.*lbf)

- (d) Bend the claw A.

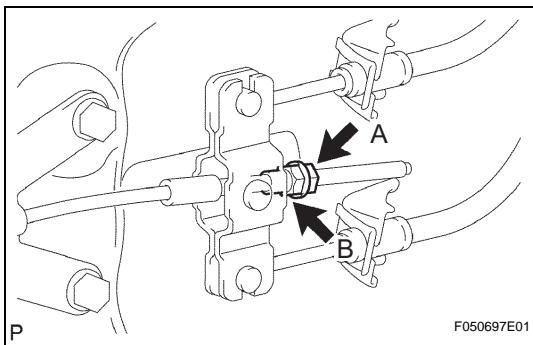

3. INSTALL PARKING BRAKE CABLE ASSEMBLY NO. 1 (for Manual Transmission)



- (a) Install the parking brake cable and provisionally tighten the adjusting B nut and lock nut A.
- (b) Install the parking brake cable with the 2 nuts A, 2 clamps B and 2 bolts C.

Torque: Nut A

6.0 N*m (61 kgf*cm, 53 in.*lbf)

Bolt C

13 N*m (127 kgf*cm, 9 ft.*lbf)

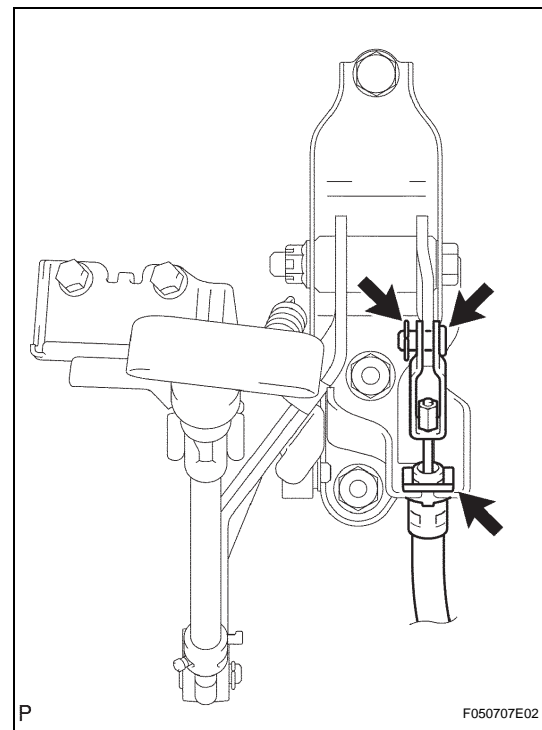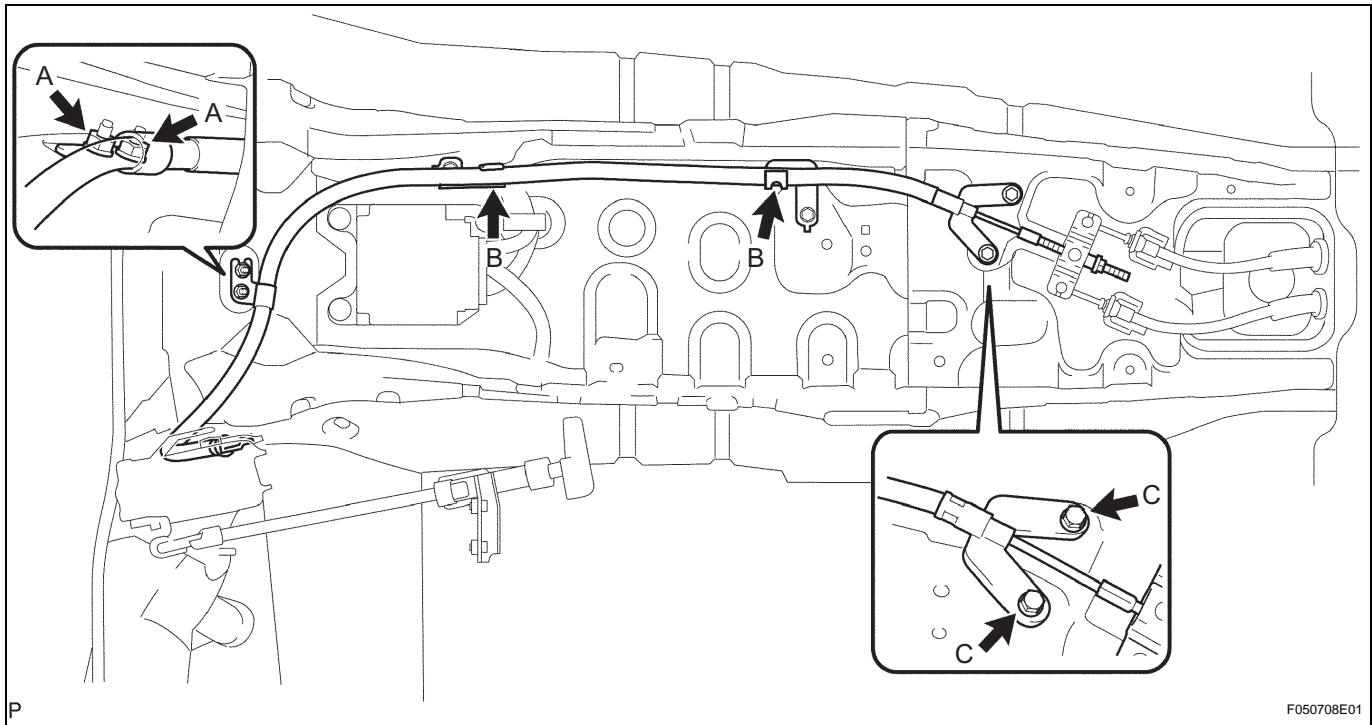

(c) Install the parking brake cable onto the parking brake lever with the clip.

(d) Install the sleeve with the pin and clip.

4. **APPLY HIGH TEMPERATURE GREASE** (See page [BR-71](#))
5. **INSTALL REAR BRAKE SHOE** (See page [BR-71](#))
6. **INSTALL FRONT BRAKE SHOE** (See page [BR-72](#))
7. **INSPECT REAR DRUM BRAKE INSTALLATION** (See page [BR-73](#))
8. **INSTALL REAR BRAKE DRUM SUB-ASSEMBLY** (See page [BR-73](#))
9. **ADJUST REAR DRUM BRAKE SHOE CLEARANCE** (See page [BR-74](#))
10. **INSTALL REAR WHEEL**
Torque: 113 N*m (1,152 kgf*cm, 83 ft.*lbf)
11. **INSTALL PARKING BRAKE CABLE JOINT PROTECTOR** (for Bench Seat Type) (See page [PB-2](#))
12. **INSTALL VOLTAGE INVERTER ASSEMBLY** (w/ Voltage Inverter) (See page [AV-105](#))
13. **INSTALL CENTER AIRBAG SENSOR ASSEMBLY** (See page [RS-603](#))
14. **INSTALL FRONT CONSOLE BOX** (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
15. **INSTALL FRONT CONSOLE BOX** (for Manual Transmission on Separate Seat Type) (See page [IP-23](#))

16. **INSTALL FRONT CONSOLE BOX** (for Automatic Transmission on Bench Seat Type) (See page [IP-23](#))
17. **INSTALL FRONT CONSOLE BOX** (for Manual Transmission on Bench Seat Type) (See page [IP-22](#))
18. **INSTALL INSTRUMENT PANEL CUP HOLDER TRAY** (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
19. **INSTALL REAR CONSOLE BOX ASSEMBLY** (for Separate Seat Type) (See page [IP-24](#))
20. **INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY** (for Automatic Transmission on Separate Seat Type) (See page [IP-25](#))
21. **INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY** (for Manual Transmission on Separate Seat Type) (See page [IP-25](#))
22. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
(See page [IN-5](#))
23. **INSPECT SRS WARNING LIGHT**
(See page [RS-28](#))
24. **INSPECT PARKING BRAKE PEDAL TRAVEL** (for Automatic Transmission) (See page [PB-1](#))
25. **INSPECT PARKING BRAKE LEVER TRAVEL** (for Manual Transmission) (See page [PB-1](#))
26. **ADJUST PARKING BRAKE PEDAL TRAVEL** (for Automatic Transmission) (See page [PB-2](#))
27. **ADJUST PARKING BRAKE LEVER TRAVEL** (for Manual Transmission) (See page [PB-2](#))