

REPAIR

HINT:

- Use the same procedures for the RH and LH.
- The procedures listed below are for the LH side.
- If the area where the headlight unit LH is installed is damaged, the repairs listed below can be performed inexpensively through the use of a repair use bracket. This may only be done if the headlight assembly LH itself is not damaged.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE RADIATOR GRILLE (See page ET-4)**
3. **REMOVE FRONT BUMPER COVER (See page ET-4)**
4. **REMOVE FRONT BUMPER FILLER (See page ET-6)**
5. **REMOVE HEADLIGHT ASSEMBLY (See page LI-4)**
6. **INSTALL HEADLIGHT PROTECTOR UPPER RETAINER**


HINT:

- If the installation area of the LH headlight assembly is damaged, use the supply bracket for low-cost repair.
- Ensure that the LH headlight assembly is not damaged.

- (a) Cut off the portion indicated by the shaded portion in the illustration and smooth the surface with sandpaper.

NOTICE:

After cutting off the shaded portion, place the LH headlight protector upper retainer LH against the bosses and gradually file away the shaded portion until installation is possible.

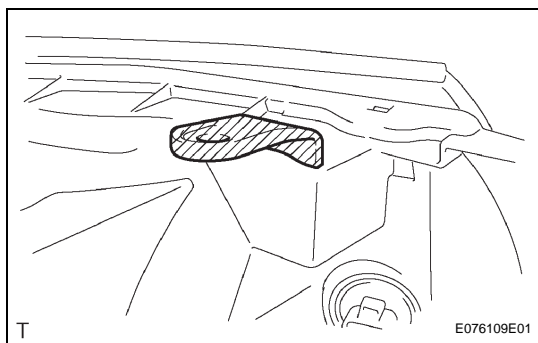



- (b) Install the headlight protector upper retainer LH with the 2 screws.

7. **INSTALL HEADLIGHT PROTECTOR LOWER RETAINER**

HINT:

- If the installation area of the LH headlight assembly is damaged, use the supply bracket for low-cost repair.
- Ensure that the LH headlight assembly is not damaged.

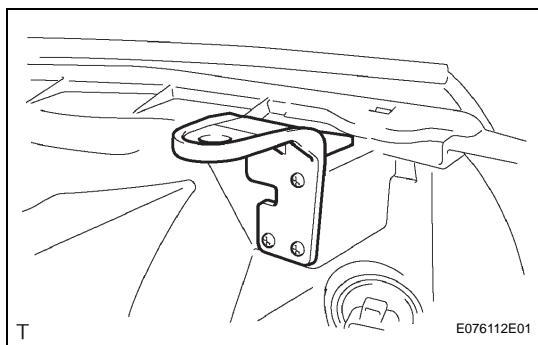


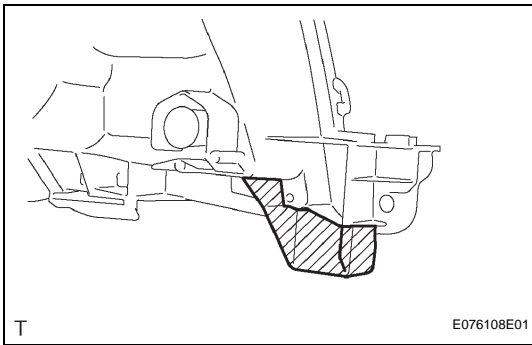

- (a) Cut off the portion indicated by the shaded portion in the illustration and smooth the surface with sandpaper.

NOTICE:


After cutting off the shaded portion, place the headlight protector lower retainer LH against the bosses and gradually file away the shaded portion until installation is possible.

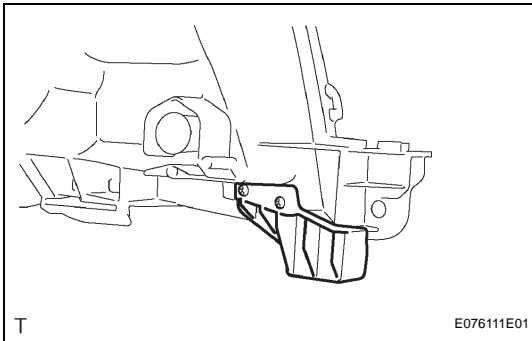

- (b) Install the headlight protector lower retainer LH with the 2 screws.

8. INSTALL HEADLIGHT LOWER BRACKET**HINT:**


- If the installation area of the LH headlight assembly is damaged, use the supply bracket for low-cost repair.
- Make sure that the LH headlight assembly is not damaged.

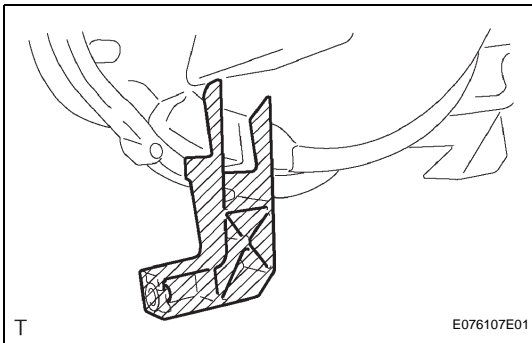

- (a) Cut off the portion indicated by the shaded portion in the illustration and smooth the surface with sandpaper.

NOTICE:

After cutting off the shaded portion, place the headlight lower bracket LH against the bosses and gradually file away the shaded portion until installation is possible.

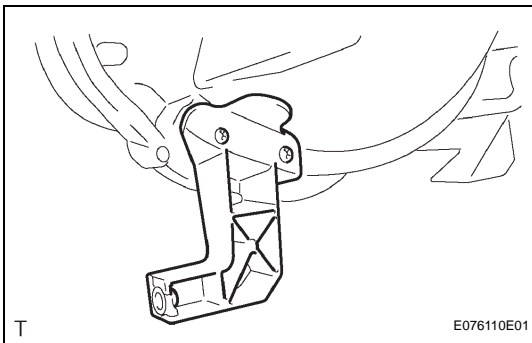

- (b) Install the headlight lower bracket LH with the 2 screws.

9. INSTALL HEADLIGHT ASSEMBLY**10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

11. INSTALL FRONT BUMPER FILLER (See page [ET-9](#))**12. INSTALL FRONT BUMPER COVER (See page [ET-11](#))****13. INSTALL RADIATOR GRILLE (See page [ET-11](#))****14. VEHICLE PREPARATION FOR HEADLIGHT AIM ADJUSTMENT (See page [LI-5](#))****15. PREPARE FOR HEADLIGHT AIMING (for Using a Tester) (See page [LI-5](#))****16. PREPARE FOR HEADLIGHT AIMING (for Using a Screen) (See page [LI-5](#))****17. HEADLIGHT AIMING INSPECTION (See page [LI-7](#))****18. HEADLIGHT AIMING ADJUSTMENT (See page [LI-9](#))**