


# RADIO SETTING CONDENSER (for 2TR-FE)

## COMPONENTS



AV

### RADIO SETTING CONDENSER



ENGINE TYPE: 1GR-FE

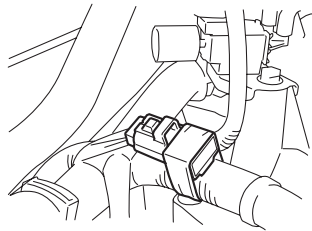

ENGINE TYPE: 2TR-FE

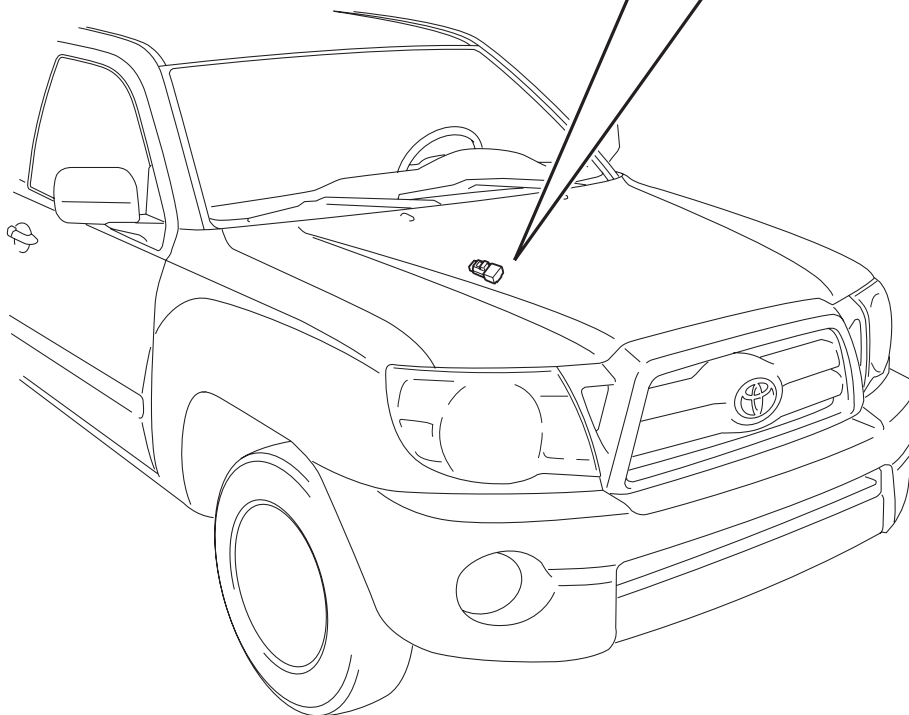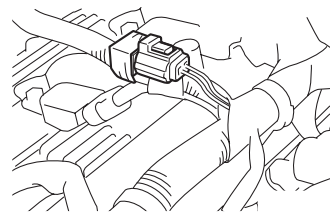

AV

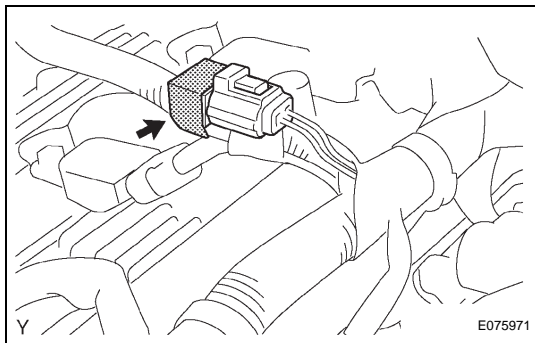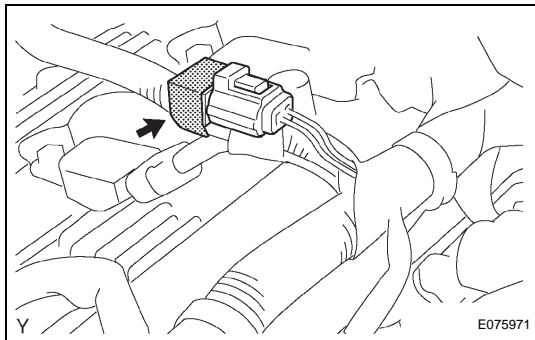

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE AIR CLEANER ASSEMBLY** (See page [ES-452](#))
3. **REMOVE RADIO SETTING CONDENSER**
  - (a) Disconnect the connector.
  - (b) Remove the tape and the radio setting condenser.

## INSTALLATION

1. **INSTALL RADIO SETTING CONDENSER**
  - (a) Disconnect the connector.
  - (b) Remove the tape and the radio setting condenser.
2. **INSTALL AIR CLEANER ASSEMBLY** (See page [ES-455](#))
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**  
Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)