




# OUTER REAR VIEW MIRROR

## COMPONENTS

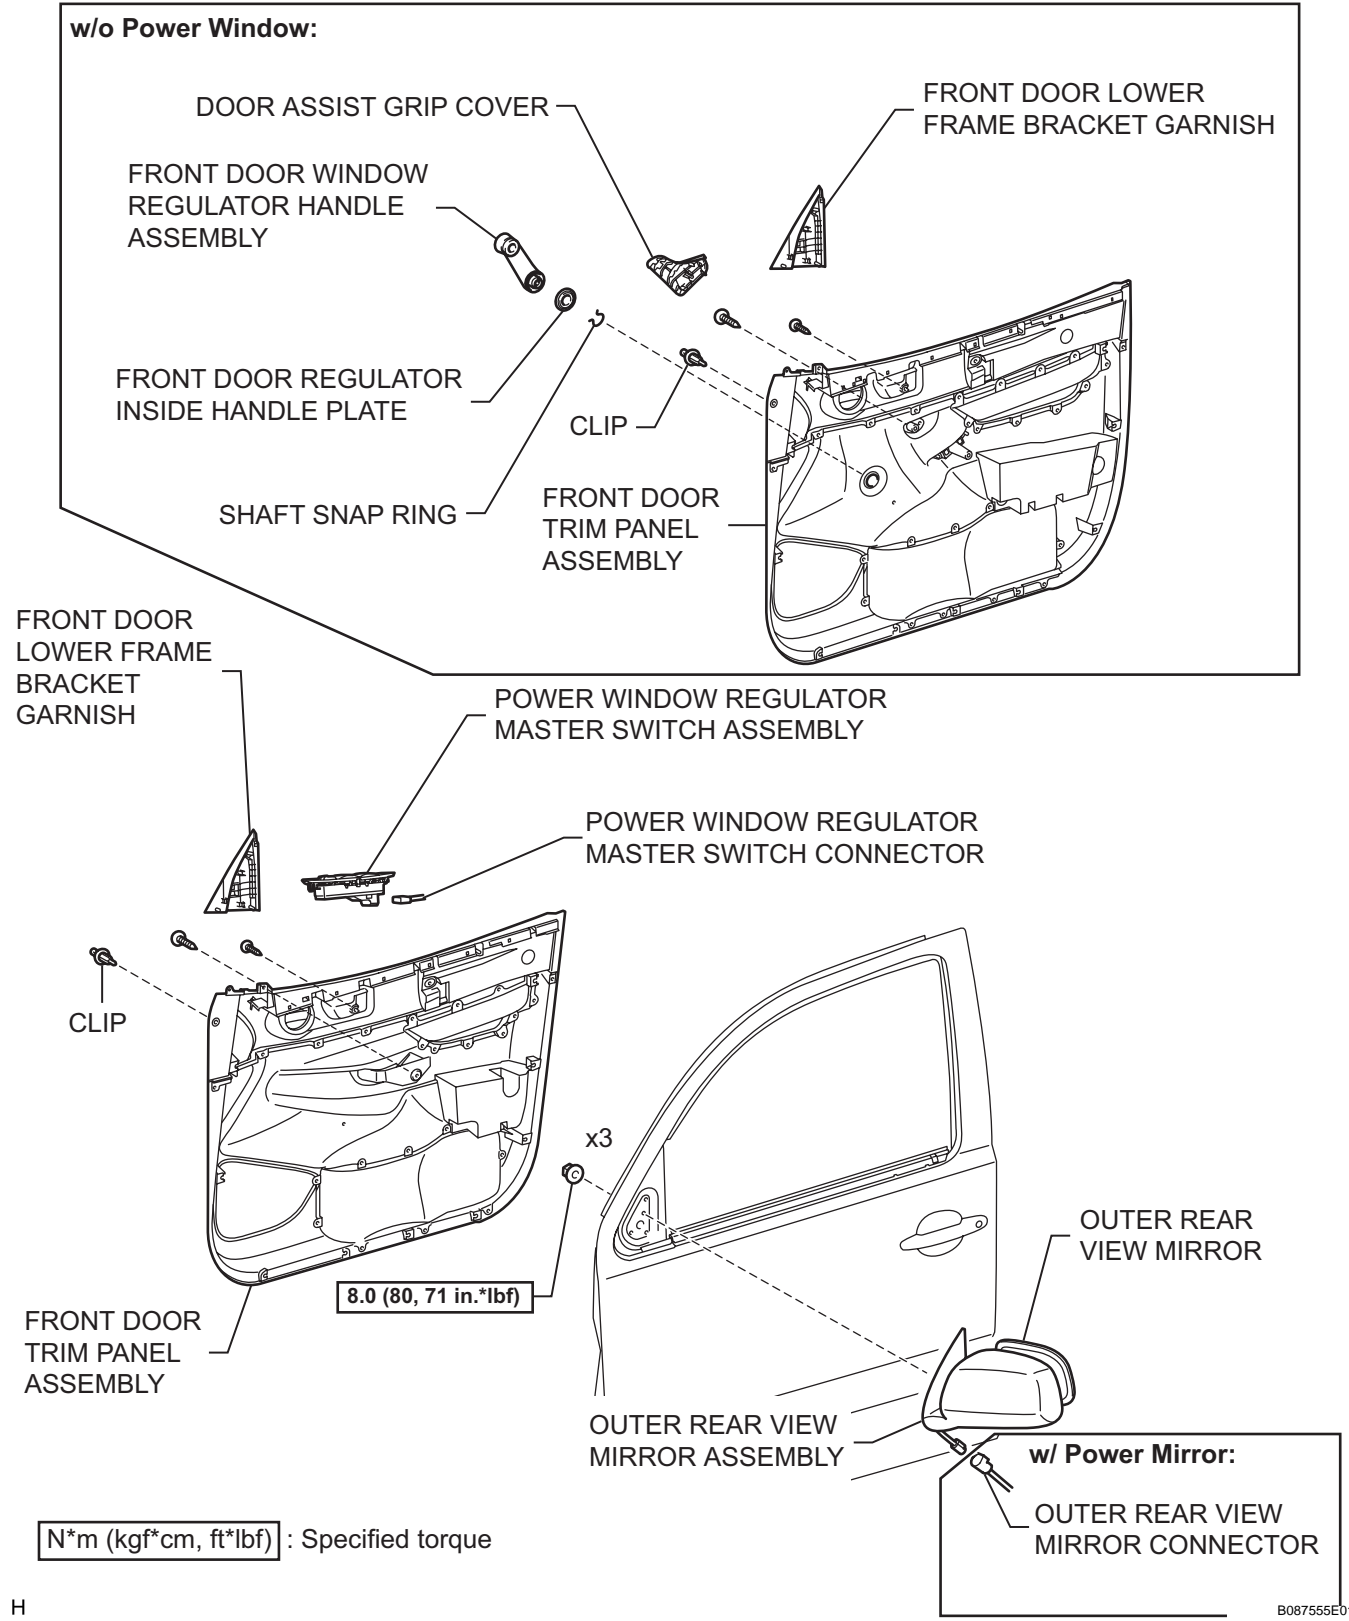

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH (w/ Power Window)** (See page [ED-13](#))
3. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH (w/o Power Window)** (See page [ED-34](#))
4. **REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY** (See page [ED-34](#))
5. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (for Double Cab)** (See page [ED-13](#))
6. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (for Access Cab)** (See page [ED-13](#))
7. **REMOVE FRONT DOOR TRIM PANEL ASSEMBLY (w/ Power Window)** (See page [ED-14](#))
8. **REMOVE FRONT DOOR TRIM PANEL ASSEMBLY (w/o Power Window)** (See page [ED-35](#))
9. **REMOVE OUTER REAR VIEW MIRROR ASSEMBLY**
  - (a) Disconnect the outer rear view mirror connector (w/ Power mirror).
  - (b) Remove the 3 nuts.
  - (c) Disengage the claw and remove the outer rear view mirror.

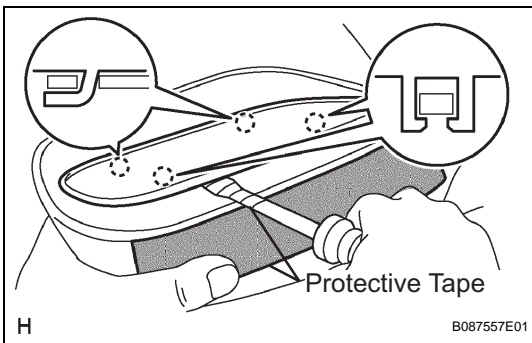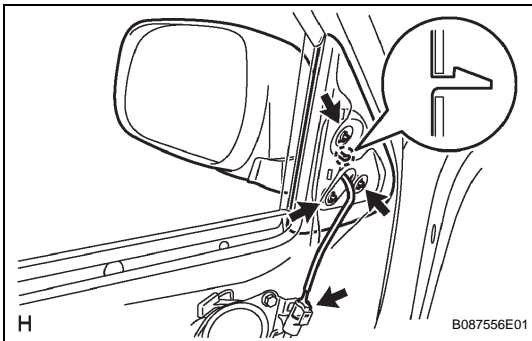

10. **REMOVE OUTER REAR VIEW MIRROR**
  - (a) Apply protective tape to the outer circumference of the outer rear view mirror, as shown in the illustration.
  - (b) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws.
  - (c) Disengage the 2 claws and remove the outer rear view mirror.