



REAR SEAT OUTER BELT ASSEMBLY (for Double Cab)


COMPONENTS

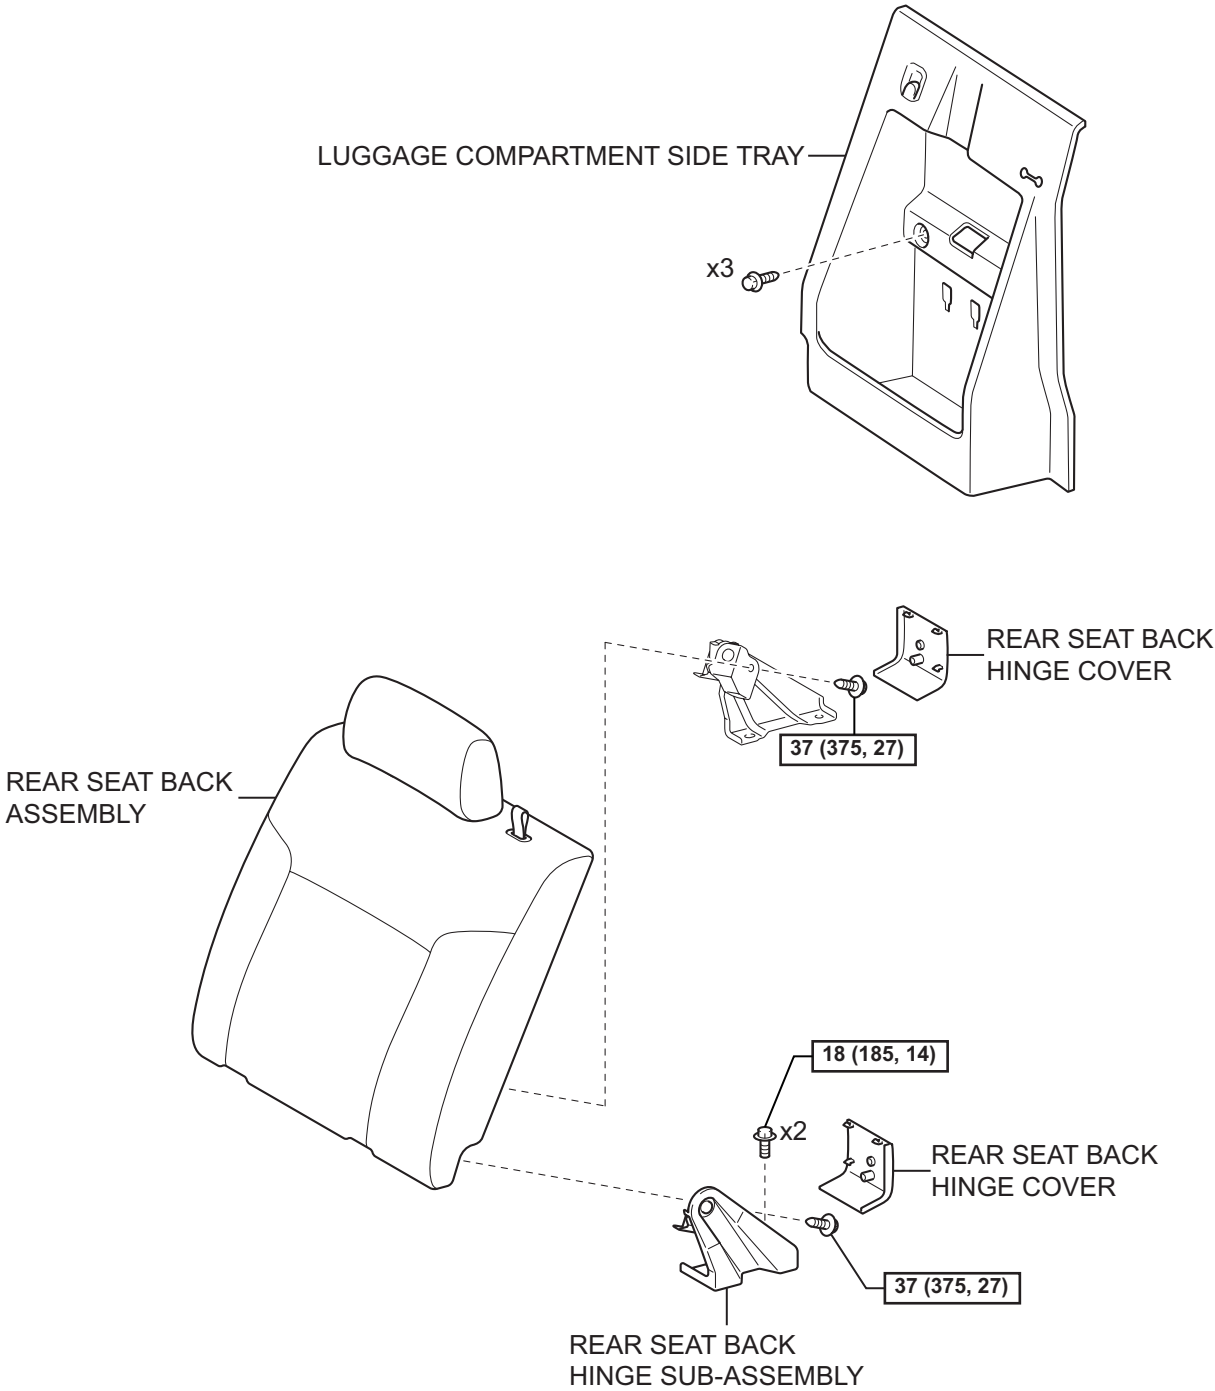

N*m (kgf*cm, ft*lb) : Specified torque

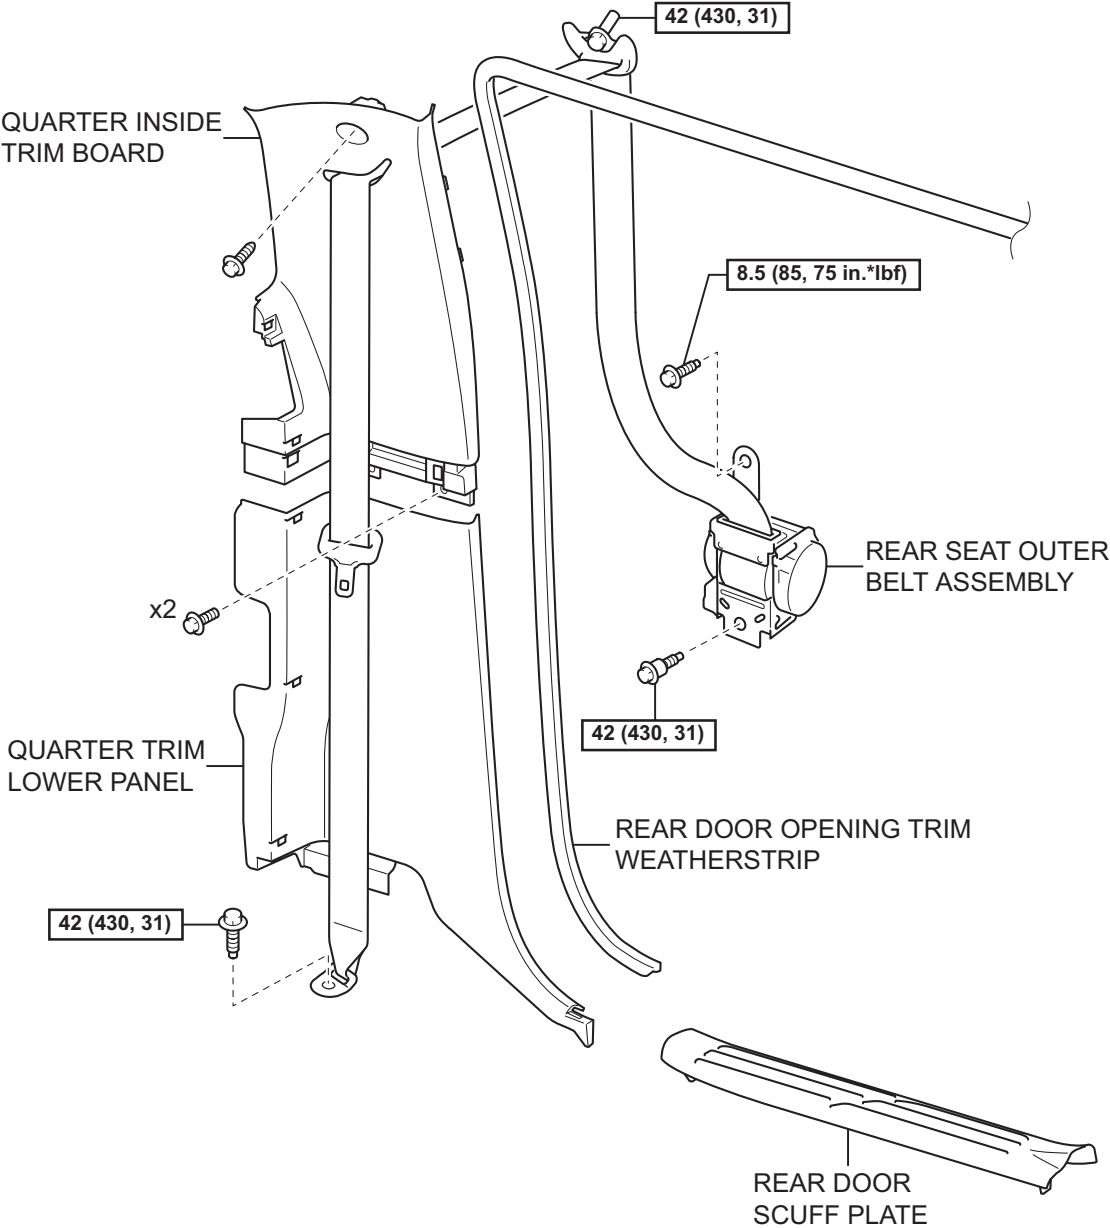

N*m (kgf*cm, ft*lb) : Specified torque

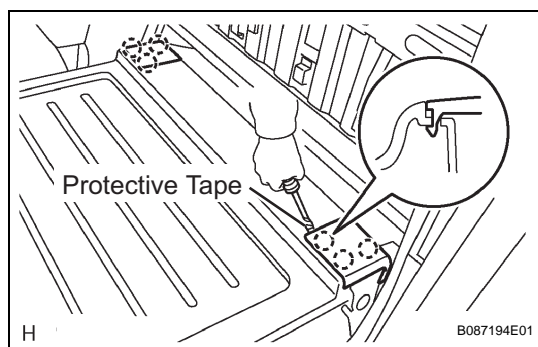

REMOVAL

1. REMOVE REAR SEAT BACK HINGE COVER

HINT:

Follow the same procedure as for the opposite side.

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 3 claws and remove the rear seat back hinge cover.

2. REMOVE REAR SEAT BACK ASSEMBLY (See page [SE-71](#))

3. REMOVE REAR SEAT BACK HINGE SUB-ASSEMBLY (See page [SE-71](#))

4. REMOVE REAR DOOR SCUFF PLATE (See page [IR-13](#))

5. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP




- (a) Separate the rear door opening trim weatherstrip to the extent which allows the removal of the quarter trim lower panel and quarter inside trim board.

6. REMOVE LUGGAGE COMPARTMENT SIDE TRAY (See page [IR-16](#))


7. REMOVE QUARTER TRIM LOWER PANEL (See page [IR-17](#))

8. REMOVE QUARTER INSIDE TRIM BOARD

- (a) Remove the bolt and remove the floor anchor of the rear seat outer belt.

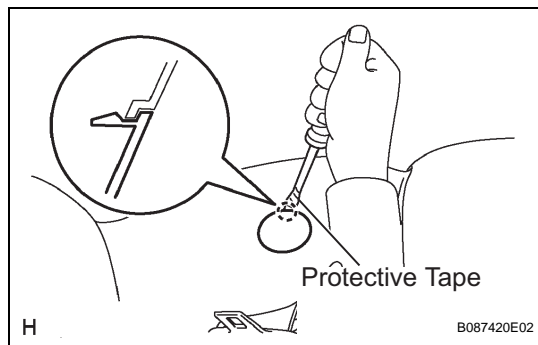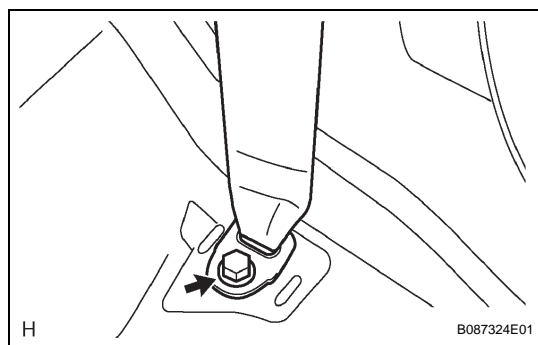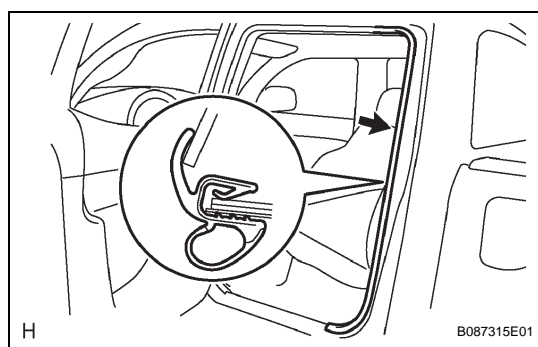

- (b) Using a screwdriver with its tip taped in protective tape, disengage the claw and open the cover.

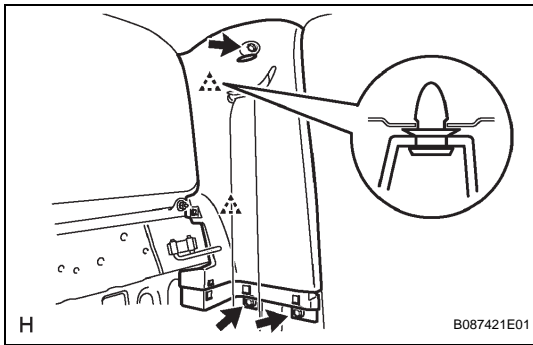


- (c) Remove the 3 screws.
- (d) Disengage the 2 clips and remove the quarter inside trim board.


9. REMOVE REAR SEAT OUTER BELT ASSEMBLY



- (a) Remove the bolt and shoulder anchor.

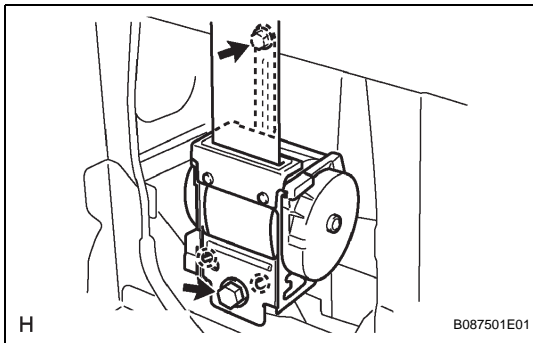

- (b) Remove the 2 bolts and retractor.

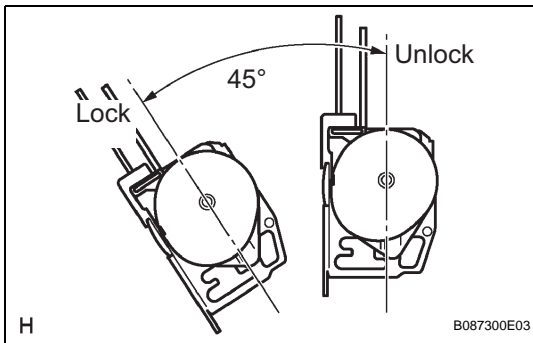

INSTALLATION

1. INSTALL REAR SEAT OUTER BELT ASSEMBLY

- (a) Check the amount of inclination required to lock the retractor.
 - (1) Gently incline the retractor from its initial position. Check that the belt does not lock when the retractor is inclined 15° or less in any directions. Also check that the belt locks when inclination of the retractor is 45° or more.

NOTICE:

Do not disassemble the retractor.

If operation is not as specified, replace the rear seat outer belt.