

## REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE SEAT TRACK COVER LH (for Double Cab) (See page [SE-23](#))
3. REMOVE SEAT TRACK COVER RH (for Double Cab) (See page [SE-38](#))
4. REMOVE FRONT SEAT ASSEMBLY LH (for Double Cab) (See page [SE-23](#))
5. REMOVE FRONT SEAT ASSEMBLY RH (for Double Cab) (See page [SE-38](#))
6. REMOVE REAR SEAT CUSHION ASSEMBLY LH (for Double Cab) (See page [SE-71](#))
7. REMOVE REAR SEAT CUSHION ASSEMBLY RH (for Double Cab) (See page [SE-82](#))
8. REMOVE REAR SEAT BACK HINGE COVER (for Double Cab) (See page [IR-12](#))
9. REMOVE REAR SEAT BACK ASSEMBLY LH (for Double Cab) (See page [SE-71](#))
10. REMOVE REAR SEAT BACK ASSEMBLY RH (for Double Cab) (See page [SE-82](#))
11. REMOVE REAR SEAT BACK HINGE SUB-ASSEMBLY LH (for Double Cab) (See page [SE-71](#))
12. REMOVE REAR SEAT BACK HINGE SUB-ASSEMBLY RH (for Double Cab) (See page [SE-82](#))
13. REMOVE REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY (for Double Cab) (See page [SE-71](#))
14. REMOVE LUGGAGE COMPARTMENT SIDE TRAY LH (for Double Cab) (See page [IR-16](#))
15. REMOVE LUGGAGE COMPARTMENT SIDE TRAY RH (for Double Cab) (See page [IR-16](#))
16. REMOVE BACK PANEL TRIM COVER (for Regular Cab) (See page [IR-42](#))
17. REMOVE BACK PANEL TRIM COVER (for Access Cab) (See page [IR-64](#))
18. REMOVE BACK PANEL UPPER GARNISH (for Regular Cab) (See page [IR-43](#))
19. REMOVE JACK ASSEMBLY (for Regular Cab on Separate Seat Type)
20. REMOVE BACK PANEL TRIM COVER (for Regular Cab on Separate Seat Type) (See page [IR-43](#))
21. REMOVE REAR SEAT INNER BELT ASSEMBLY (for Access Cab) (See page [IR-64](#))


22. REMOVE BACK PANEL TRIM (for Regular Cab on Separate Seat Type) (See page [IR-43](#))
23. REMOVE BACK PANEL TRIM (for Access Cab) (See page [IR-64](#))
24. REMOVE FRONT FLOOR FOOTREST (See page [IR-1](#))
25. REMOVE FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-12](#))
26. REMOVE FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page [IR-40](#))
27. REMOVE FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-61](#))
28. REMOVE FRONT DOOR SCUFF PLATE RH (for Double Cab) (See page [IR-12](#))
29. REMOVE FRONT DOOR SCUFF PLATE RH (for Regular Cab) (See page [IR-40](#))
30. REMOVE FRONT DOOR SCUFF PLATE RH (for Access Cab) (See page [IR-61](#))
31. REMOVE REAR DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-13](#))
32. REMOVE REAR DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-61](#))
33. REMOVE REAR DOOR SCUFF PLATE RH (for Double Cab) (See page [IR-13](#))
34. REMOVE REAR DOOR SCUFF PLATE RH (for Access Cab) (See page [IR-61](#))
35. REMOVE COWL SIDE TRIM BOARD LH (for Double Cab) (See page [IR-12](#))
36. REMOVE COWL SIDE TRIM BOARD LH (for Regular Cab) (See page [IR-40](#))
37. REMOVE COWL SIDE TRIM BOARD LH (for Access Cab) (See page [IR-61](#))
38. REMOVE COWL SIDE TRIM BOARD RH (for Double Cab) (See page [IR-12](#))
39. REMOVE COWL SIDE TRIM BOARD RH (for Regular Cab) (See page [IR-40](#))
40. REMOVE COWL SIDE TRIM BOARD RH (for Access Cab) (See page [IR-61](#))
41. REMOVE ROOF SIDE INNER GARNISH COVER LH (for Access Cab) (See page [IR-62](#))
42. REMOVE ROOF SIDE INNER GARNISH COVER RH (for Access Cab) (See page [IR-62](#))
43. REMOVE ROOF SIDE INNER GARNISH CAP LH (for Access Cab) (See page [IR-62](#))

44. REMOVE ROOF SIDE INNER GARNISH CAP RH (for Access Cab) (See page [IR-62](#))
45. REMOVE ROOF SIDE INNER GARNISH LH (for Access Cab) (See page [IR-65](#))
46. REMOVE ROOF SIDE INNER GARNISH RH (for Access Cab) (See page [IR-65](#))
47. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Double Cab) (See page [IR-13](#))
48. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Regular Cab) (See page [IR-40](#))
49. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Access Cab) (See page [IR-62](#))
50. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Double Cab) (See page [IR-13](#))
51. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Regular Cab) (See page [IR-40](#))
52. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Access Cab) (See page [IR-62](#))
53. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH (for Double Cab) (See page [IR-13](#))
54. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (for Double Cab) (See page [IR-13](#))
55. REMOVE FRONT PILLAR GARNISH LH (for Double Cab) (See page [IR-13](#))
56. REMOVE FRONT PILLAR GARNISH LH (for Regular Cab) (See page [IR-41](#))
57. REMOVE FRONT PILLAR GARNISH LH (for Access Cab) (See page [IR-62](#))
58. REMOVE FRONT PILLAR GARNISH RH (for Double Cab) (See page [IR-14](#))
59. REMOVE FRONT PILLAR GARNISH RH (for Regular Cab) (See page [IR-41](#))
60. REMOVE FRONT PILLAR GARNISH RH (for Access Cab) (See page [IR-63](#))
61. REMOVE LAP BELT OUTER ANCHOR COVER (for Double Cab) (See page [IR-15](#))
62. REMOVE CENTER PILLAR LOWER GARNISH LH (for Double Cab) (See page [IR-15](#))

63. REMOVE CENTER PILLAR LOWER GARNISH RH (for Double Cab) (See page [IR-16](#))
64. REMOVE CENTER PILLAR UPPER GARNISH LH (for Double Cab) (See page [IR-16](#))
65. REMOVE CENTER PILLAR UPPER GARNISH RH (for Double Cab) (See page [IR-16](#))
66. REMOVE QUARTER TRIM LOWER PANEL LH (for Double Cab) (See page [IR-17](#))
67. REMOVE QUARTER TRIM LOWER PANEL LH (for Regular Cab) (See page [IR-43](#))
68. REMOVE QUARTER TRIM LOWER PANEL LH (for Access Cab) (See page [IR-65](#))
69. REMOVE QUARTER TRIM LOWER PANEL RH (for Double Cab) (See page [IR-17](#))
70. REMOVE QUARTER TRIM LOWER PANEL RH (for Regular Cab) (See page [IR-43](#))
71. REMOVE QUARTER TRIM LOWER PANEL RH (for Access Cab) (See page [IR-65](#))
72. REMOVE QUARTER INSIDE TRIM BOARD LH (for Double Cab) (See page [IR-17](#))
73. REMOVE QUARTER INSIDE TRIM BOARD LH (for Regular Cab) (See page [IR-44](#))
74. REMOVE QUARTER INSIDE TRIM BOARD LH (for Access Cab) (See page [IR-65](#))
75. REMOVE QUARTER INSIDE TRIM BOARD RH (for Double Cab) (See page [IR-17](#))
76. REMOVE QUARTER INSIDE TRIM BOARD RH (for Regular Cab) (See page [IR-44](#))
77. REMOVE QUARTER INSIDE TRIM BOARD RH (for Access Cab) (See page [IR-65](#))
78. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror) (See page [IR-11](#))
79. REMOVE ROOM LIGHT ASSEMBLY (for Double Cab) (See page [IR-17](#))
80. REMOVE ROOM LIGHT ASSEMBLY (for Regular Cab) (See page [IR-44](#))
81. REMOVE ROOM LIGHT ASSEMBLY (for Access Cab) (See page [IR-66](#))
82. REMOVE ROOF CONSOLE BOX ASSEMBLY (for Double Cab) (See page [IR-18](#))
83. REMOVE ROOF CONSOLE BOX ASSEMBLY (for Access Cab) (See page [IR-66](#))
84. REMOVE ASSIST GRIP SUB-ASSEMBLY (for Double Cab) (See page [IR-18](#))

85. REMOVE ASSIST GRIP PLUG (for Double Cab) (See page [IR-19](#))
86. REMOVE VISOR ASSEMBLY LH (for Double Cab) (See page [IR-19](#))
87. REMOVE VISOR ASSEMBLY LH (for Regular Cab) (See page [IR-45](#))
88. REMOVE VISOR ASSEMBLY LH (for Access Cab) (See page [IR-67](#))
89. REMOVE VISOR ASSEMBLY RH (for Double Cab) (See page [IR-19](#))
90. REMOVE VISOR ASSEMBLY RH (for Regular Cab) (See page [IR-45](#))
91. REMOVE VISOR ASSEMBLY RH (for Access Cab) (See page [IR-67](#))
92. REMOVE VISOR HOLDER (for Double Cab) (See page [IR-19](#))
93. REMOVE VISOR HOLDER (for Regular Cab) (See page [IR-45](#))
94. REMOVE VISOR HOLDER (for Access Cab) (See page [IR-67](#))
95. REMOVE COAT HOOK (for Regular Cab) (See page [IR-45](#))
96. REMOVE COAT HOOK (for Access Cab) (See page [IR-67](#))
97. REMOVE COAT HOOK (for Double Cab) (See page [IR-20](#))
98. SEPARATE ROOF HEADLINING ASSEMBLY (for Regular Cab)
99. SEPARATE ROOF HEADLINING ASSEMBLY (for Double Cab)
100. SEPARATE ROOF HEADLINING ASSEMBLY (for Access Cab)
101. REMOVE TIRE PRESSURE WARNING RECEIVER
  - (a) Disconnect the connector.
  - (b) Remove the nut and the tire pressure warning receiver.

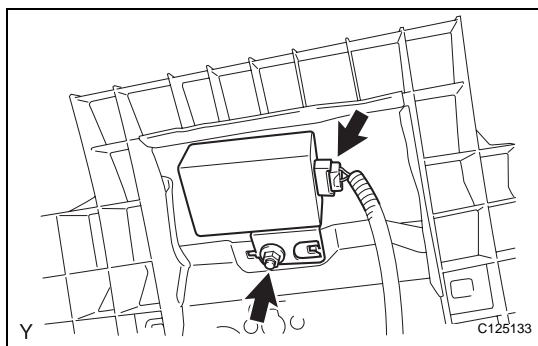

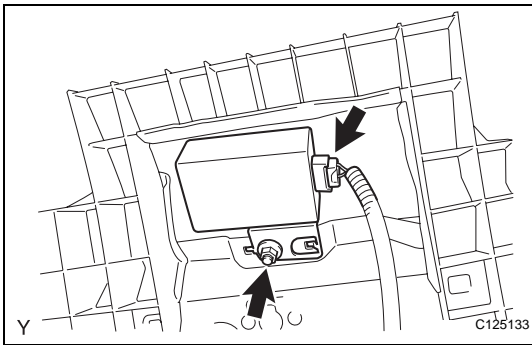

## INSTALLATION

1. **INSTALL TIRE PRESSURE WARNING RECEIVER**
  - (a) Install the tire pressure warning receiver with the nut.  
**Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)**
  - (b) Connect the connector.
2. **INSTALL ROOF HEADLINING ASSEMBLY (for Double Cab)**
3. **INSTALL ROOF HEADLINING ASSEMBLY (for Regular Cab)**
4. **INSTALL ROOF HEADLINING ASSEMBLY (for Access Cab)**
5. **INSTALL COAT HOOK (for Double Cab) (See page [IR-22](#))**
6. **INSTALL COAT HOOK (for Regular Cab) (See page [IR-47](#))**
7. **INSTALL COAT HOOK (for Access Cab) (See page [IR-69](#))**
8. **INSTALL VISOR HOLDER (for Double Cab) (See page [IR-22](#))**
9. **INSTALL VISOR HOLDER (for Regular Cab) (See page [IR-47](#))**
10. **INSTALL VISOR HOLDER (for Access Cab) (See page [IR-70](#))**
11. **INSTALL VISOR ASSEMBLY LH (for Double Cab) (See page [IR-22](#))**
12. **INSTALL VISOR ASSEMBLY LH (for Regular Cab) (See page [IR-48](#))**
13. **INSTALL VISOR ASSEMBLY LH (for Access Cab) (See page [IR-70](#))**
14. **INSTALL VISOR ASSEMBLY RH (for Double Cab) (See page [IR-22](#))**
15. **INSTALL VISOR ASSEMBLY RH (for Regular Cab) (See page [IR-48](#))**
16. **INSTALL VISOR ASSEMBLY RH (for Access Cab) (See page [IR-70](#))**
17. **INSTALL ASSIST GRIP PLUG (for Double Cab) (See page [IR-23](#))**
18. **INSTALL ASSIST GRIP SUB-ASSEMBLY (for Double Cab) (See page [IR-23](#))**
19. **INSTALL ROOF CONSOLE BOX ASSEMBLY (for Double Cab) (See page [IR-23](#))**
20. **INSTALL ROOF CONSOLE BOX ASSEMBLY (for Access Cab) (See page [IR-70](#))**

21. INSTALL ROOM LIGHT ASSEMBLY (for Double Cab)  
(See page [IR-24](#))
22. INSTALL ROOM LIGHT ASSEMBLY (for Regular Cab)  
(See page [IR-48](#))
23. INSTALL ROOM LIGHT ASSEMBLY (for Access Cab)  
(See page [IR-71](#))
24. INSTALL INNER REAR VIEW MIRROR ASSEMBLY  
(w/ EC Mirror) (See page [IR-30](#))
25. INSTALL QUARTER INSIDE TRIM BOARD LH (for  
Double Cab) (See page [IR-24](#))
26. INSTALL QUARTER INSIDE TRIM BOARD LH (for  
Regular Cab) (See page [IR-48](#))
27. INSTALL QUARTER INSIDE TRIM BOARD LH (for  
Access Cab) (See page [IR-71](#))
28. INSTALL QUARTER INSIDE TRIM BOARD RH (for  
Double Cab) (See page [IR-25](#))
29. INSTALL QUARTER INSIDE TRIM BOARD RH (for  
Regular Cab) (See page [IR-49](#))
30. INSTALL QUARTER INSIDE TRIM BOARD RH (for  
Access Cab) (See page [IR-71](#))
31. INSTALL QUARTER TRIM LOWER PANEL LH (for  
Double Cab) (See page [IR-25](#))
32. INSTALL QUARTER TRIM LOWER PANEL LH (for  
Regular Cab) (See page [IR-49](#))
33. INSTALL QUARTER TRIM LOWER PANEL LH (for  
Access Cab) (See page [IR-72](#))
34. INSTALL QUARTER TRIM LOWER PANEL RH (for  
Double Cab) (See page [IR-25](#))
35. INSTALL QUARTER TRIM LOWER PANEL RH (for  
Regular Cab) (See page [IR-49](#))
36. INSTALL QUARTER TRIM LOWER PANEL RH (for  
Access Cab) (See page [IR-72](#))
37. INSTALL CENTER PILLAR UPPER GARNISH LH (for  
Double Cab) (See page [IR-26](#))
38. INSTALL CENTER PILLAR UPPER GARNISH RH (for  
Double Cab) (See page [IR-26](#))
39. INSTALL CENTER PILLAR LOWER GARNISH LH (for  
Double Cab) (See page [IR-26](#))
40. INSTALL CENTER PILLAR LOWER GARNISH RH (for  
Double Cab) (See page [IR-26](#))
41. INSTALL LAP BELT OUTER ANCHOR COVER (for  
Double Cab) (See page [IR-27](#))
42. INSTALL FRONT PILLAR GARNISH LH (for Double  
Cab) (See page [IR-28](#))

43. INSTALL FRONT PILLAR GARNISH LH (for Regular Cab) (See page [IR-51](#))
44. INSTALL FRONT PILLAR GARNISH LH (for Access Cab) (See page [IR-74](#))
45. INSTALL FRONT PILLAR GARNISH RH (for Double Cab) (See page [IR-28](#))
46. INSTALL FRONT PILLAR GARNISH RH (for Regular Cab) (See page [IR-52](#))
47. INSTALL FRONT PILLAR GARNISH RH (for Access Cab) (See page [IR-74](#))
48. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH (for Double Cab) (See page [IR-28](#))
49. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH (for Double Cab) (See page [IR-28](#))
50. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Double Cab) (See page [IR-29](#))
51. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Regular Cab) (See page [IR-52](#))
52. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Access Cab) (See page [IR-74](#))
53. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Double Cab) (See page [IR-29](#))
54. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Regular Cab) (See page [IR-52](#))
55. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Access Cab) (See page [IR-74](#))
56. INSTALL ROOF SIDE INNER GARNISH LH (for Access Cab) (See page [IR-71](#))
57. INSTALL ROOF SIDE INNER GARNISH RH (for Access Cab) (See page [IR-71](#))
58. INSTALL ROOF SIDE INNER GARNISH CAP LH (for Access Cab) (See page [IR-75](#))
59. INSTALL ROOF SIDE INNER GARNISH CAP RH (for Access Cab) (See page [IR-75](#))
60. INSTALL ROOF SIDE INNER GARNISH COVER LH (for Access Cab) (See page [IR-75](#))
61. INSTALL ROOF SIDE INNER GARNISH COVER RH (for Access Cab) (See page [IR-75](#))



62. INSTALL COWL SIDE TRIM BOARD LH (for Double Cab) (See page [IR-29](#))
63. INSTALL COWL SIDE TRIM BOARD LH (for Regular Cab) (See page [IR-52](#))
64. INSTALL COWL SIDE TRIM BOARD LH (for Access Cab) (See page [IR-75](#))
65. INSTALL COWL SIDE TRIM BOARD RH (for Double Cab) (See page [IR-29](#))
66. INSTALL COWL SIDE TRIM BOARD RH (for Regular Cab) (See page [IR-52](#))
67. INSTALL COWL SIDE TRIM BOARD RH (for Access Cab) (See page [IR-75](#))
68. INSTALL REAR DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-29](#))
69. INSTALL REAR DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-75](#))
70. INSTALL REAR DOOR SCUFF PLATE RH (for Double Cab) (See page [IR-29](#))
71. INSTALL REAR DOOR SCUFF PLATE RH (for Access Cab) (See page [IR-75](#))
72. INSTALL FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-29](#))
73. INSTALL FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page [IR-52](#))
74. INSTALL FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-75](#))
75. INSTALL FRONT DOOR SCUFF PLATE RH (for Double Cab) (See page [IR-29](#))
76. INSTALL FRONT DOOR SCUFF PLATE RH (for Regular Cab) (See page [IR-52](#))
77. INSTALL FRONT DOOR SCUFF PLATE RH (for Access Cab) (See page [IR-75](#))
78. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))
79. INSTALL BACK PANEL TRIM (for Regular Cab on Separate Seat Type) (See page [IR-49](#))
80. INSTALL BACK PANEL TRIM (for Access Cab) (See page [IR-72](#))
81. INSTALL REAR SEAT INNER BELT ASSEMBLY (for Access Cab) (See page [IR-72](#))
82. INSTALL BACK PANEL TRIM COVER (for Regular Cab on Separate Seat Type) (See page [IR-50](#))
83. INSTALL JACK ASSEMBLY (for Regular Cab on Separate Seat Type)

84. INSTALL BACK PANEL UPPER GARNISH (for Regular Cab) (See page [IR-50](#))
85. INSTALL BACK PANEL TRIM COVER (for Regular Cab) (See page [IR-50](#))
86. INSTALL BACK PANEL TRIM COVER (for Access Cab) (See page [IR-73](#))
87. INSTALL LUGGAGE COMPARTMENT SIDE TRAY RH (for Double Cab) (See page [IR-25](#))
88. INSTALL LUGGAGE COMPARTMENT SIDE TRAY LH (for Double Cab) (See page [IR-26](#))
89. INSTALL REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY (for Double Cab) (See page [SE-77](#))
90. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY LH (for Double Cab) (See page [SE-77](#))
91. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY RH (for Double Cab) (See page [SE-90](#))
92. INSTALL REAR SEAT BACK ASSEMBLY LH (for Double Cab) (See page [SE-77](#))
93. INSTALL REAR SEAT BACK ASSEMBLY RH (for Double Cab) (See page [SE-90](#))
94. INSTALL REAR SEAT BACK HINGE COVER (for Double Cab) (See page [IR-30](#))
95. INSTALL REAR SEAT CUSHION ASSEMBLY LH (for Double Cab) (See page [SE-78](#))
96. INSTALL REAR SEAT CUSHION ASSEMBLY RH (for Double Cab) (See page [SE-90](#))
97. INSTALL FRONT SEAT ASSEMBLY LH (for Double Cab) (See page [SE-34](#))
98. INSTALL FRONT SEAT ASSEMBLY RH (for Double Cab) (See page [SE-47](#))
99. INSTALL SEAT TRACK COVER LH (for Double Cab) (See page [SE-34](#))
100. INSTALL SEAT TRACK COVER RH (for Double Cab) (See page [SE-48](#))
101. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL  
Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)  
(See page [IN-5](#))