

INSTALLATION

1. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

- (a) Check that the front wheels are facing straight ahead.

2. INSTALL SPIRAL CABLE SUB-ASSEMBLY

- (a) Set the turn signal switch in neutral position.

NOTICE:

Make sure of the neutral position since the pin of the turn signal switch may be snapped.

- (b) Install the spiral cable sub-assembly with the 4 screws.

NOTICE:

When replacing the spiral cable sub-assembly with a new one, remove the lock pin before installing the handle.

- (c) Connect the airbag connector and connector.
- (d) Install the steering column cover with the 3 screws.


3. CENTER SPIRAL CABLE

- (a) Check that the ignition switch is OFF.
- (b) Check that the cable is disconnected from the negative battery terminal.


NOTICE:

Do not start the operation for 90 seconds after disconnecting the cable from the negative battery terminal.

- (c) Turn the cable counterclockwise by hand until it becomes harder to turn.

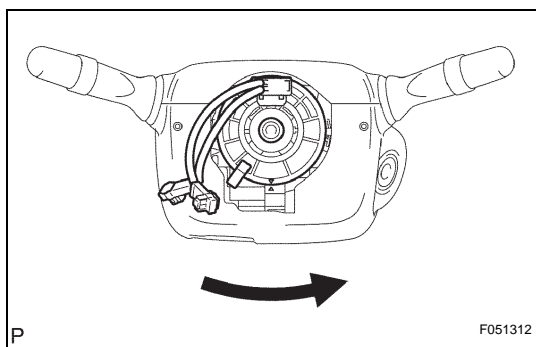

RS

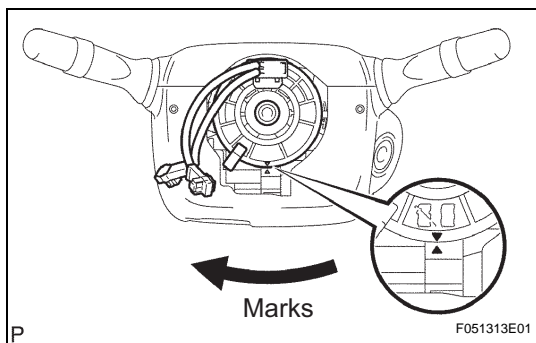

- (d) Turn the cable clockwise about 2.5 turns to align the marks.

HINT:

The cable will rotate about 2.5 turns both left and right from the center.

4. INSTALL UPPER STEERING COLUMN COVER

- (a) Engage the claw, then install the upper steering column cover.

5. INSTALL LOWER STEERING COLUMN COVER

- (a) Engage the 2 claws.
- (b) Install the lower steering column cover with the 2 screws.

6. INSTALL STEERING WHEEL ASSEMBLY (See page [SR-18](#))

7. **INSTALL STEERING PAD** (See page [RS-558](#))
8. **INSTALL NO.3 LOWER STEERING WHEEL COVER**
(See page [SR-18](#))
9. **INSTALL NO.2 LOWER STEERING WHEEL COVER**
(See page [SR-18](#))
10. **CONNECT CABLE TO NEGATIVE BATTERY
TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
11. **INSPECT HORN BUTTON ASSEMBLY**
12. **INSPECT SRS WARNING LIGHT**
(See page [RS-28](#))