


## INSTALLATION

### CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).


#### 1. INSTALL ROOF WIRE

- (a) w/ EC mirror:
  - (1) Install the roof wire with 8 new tapes, as shown in the illustration.
- (b) w/o EC mirror:
  - (1) Install the roof wire with 8 new tapes, as shown in the illustration.

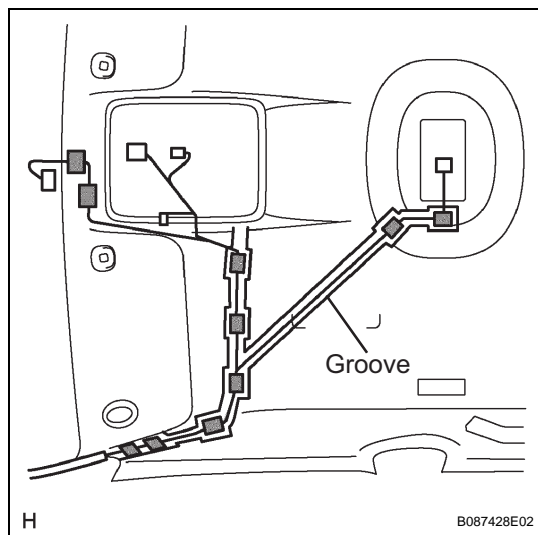


#### 2. INSTALL ROOF HEADLINING PAD


- (a) Install 2 new roof headlining pads onto the roof headlining.

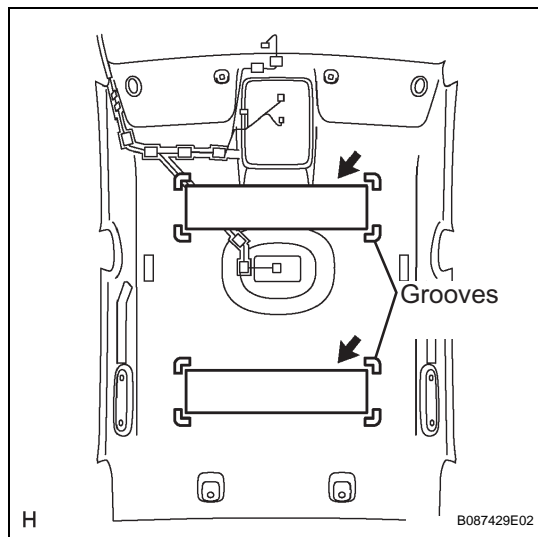


#### 3. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Install the roof headlining into the vehicle.

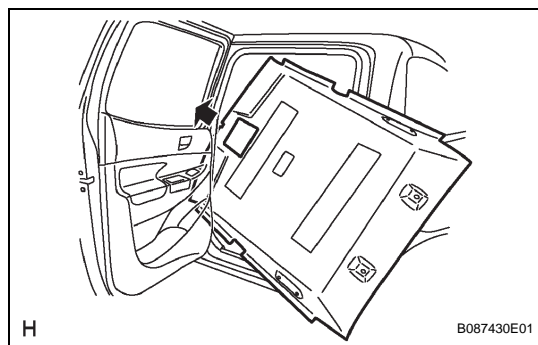

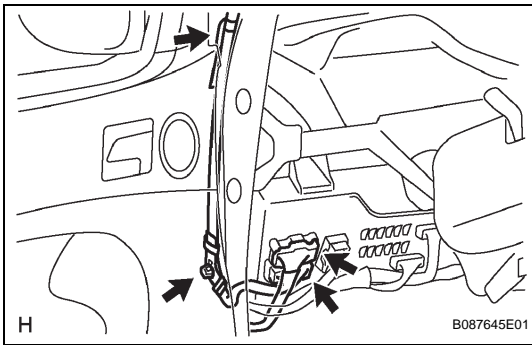

- (b) Install the 2 wire harness clamps.
- (c) Connect the roof wire connector.
- (d) Connect the frame wire connector.

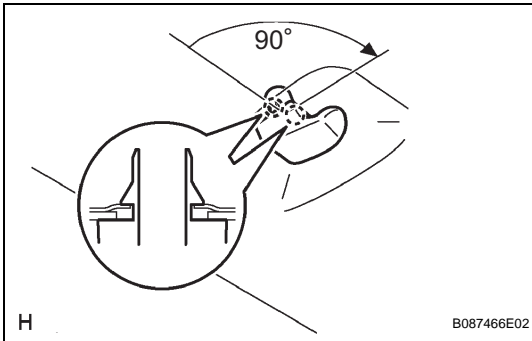


#### 4. INSTALL COAT HOOK

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the coat hook 90° clockwise and install it.

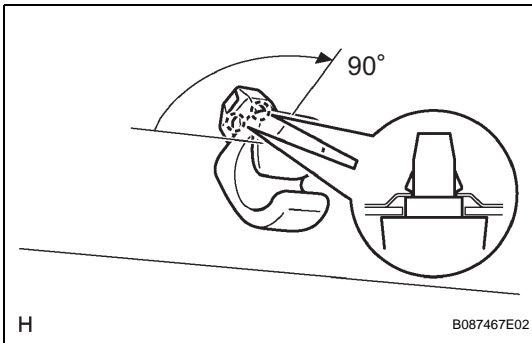


#### 5. INSTALL VISOR HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° clockwise and install it.

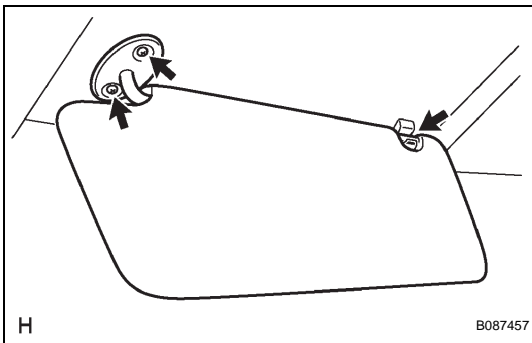


#### 6. INSTALL VISOR ASSEMBLY LH

- (a) Install the visor into the visor holder.
- (b) Tighten the 2 screws.

#### 7. INSTALL VISOR ASSEMBLY RH

HINT:

Follow the same procedures as for the visor assembly LH.

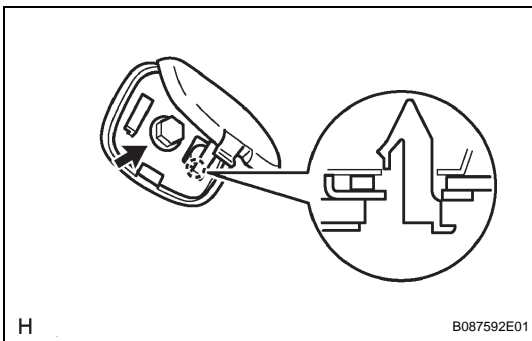


#### 8. INSTALL ASSIST GRIP PLUG (w/ Curtain Shield Airbag)


HINT:

Follow the same procedures as for the opposite side.

- (a) Engage the claw and install the assist grip plug.
- (b) Tighten the screw.

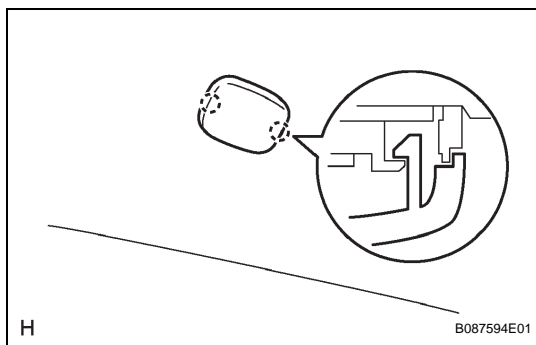

(c) Engage the 2 claws and close the cover.

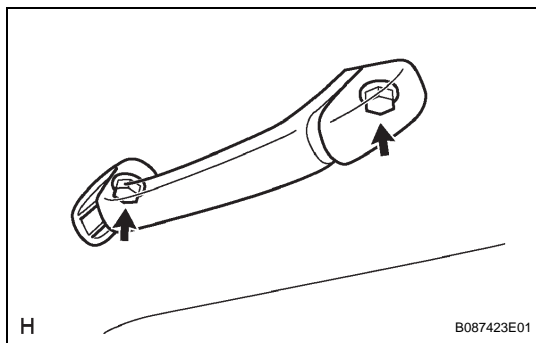


## 9. INSTALL ASSIST GRIP SUB-ASSEMBLY


HINT:

Follow the same procedures as for the opposite side.

(a) Install the assist grip with the 2 screws.

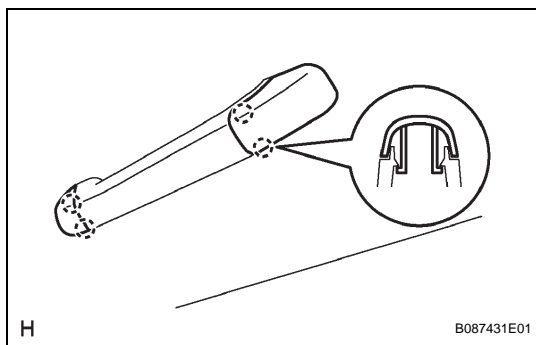


(b) Engage the 2 claws and close the cover.

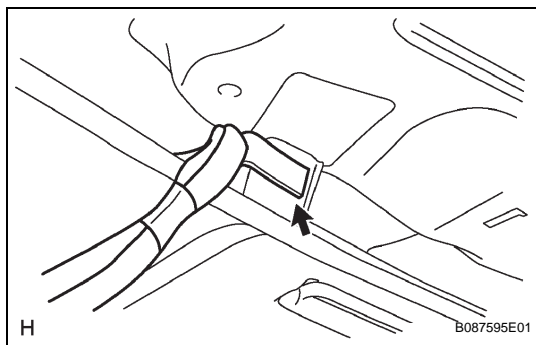


## 10. INSTALL ROOF CONSOLE BOX ASSEMBLY

(a) Install the wire harness clamp.

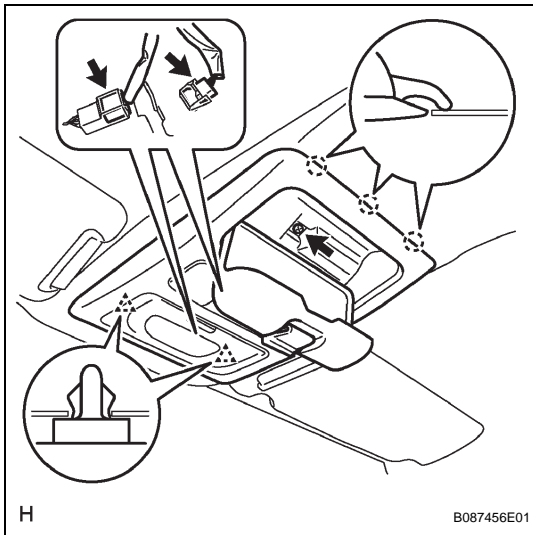


- (b) Connect the accessory meter connector and map lamp connector.
- (c) Engage the 2 clips and 3 claws and install the map lamp.
- (d) Tighten the screw.

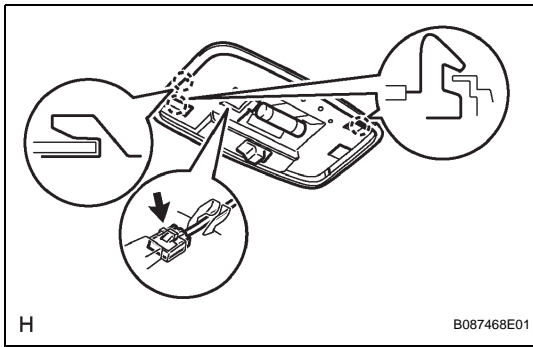


#### 11. INSTALL ROOM LIGHT ASSEMBLY

- (a) Connect the room light connector.
- (b) Engage the 3 claws and install the room light.

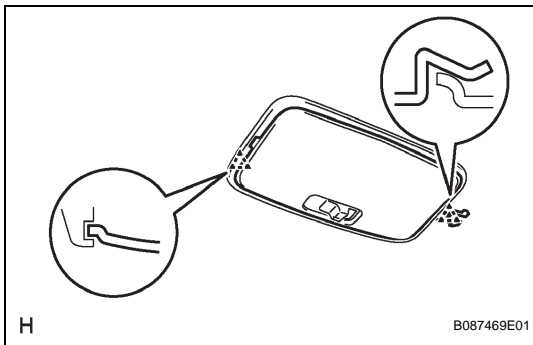


- (c) Engage the 2 claws and install the room light lens.

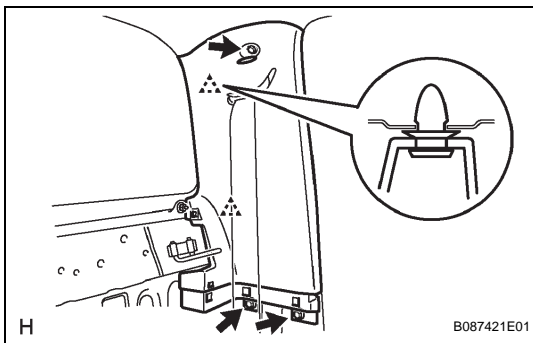


#### 12. INSTALL QUARTER INSIDE TRIM BOARD LH

- (a) Engage the 2 clips and install the quarter inside trim board.
- (b) Tighten the 3 screws.

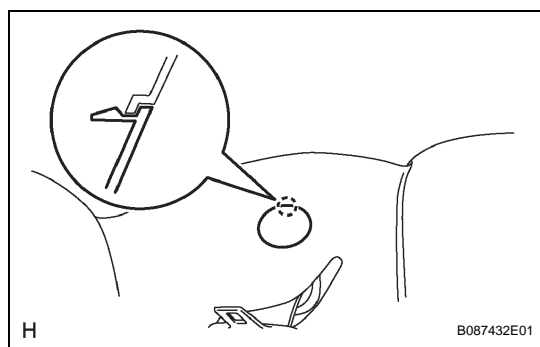

(c) Engage the claw and close the cover.

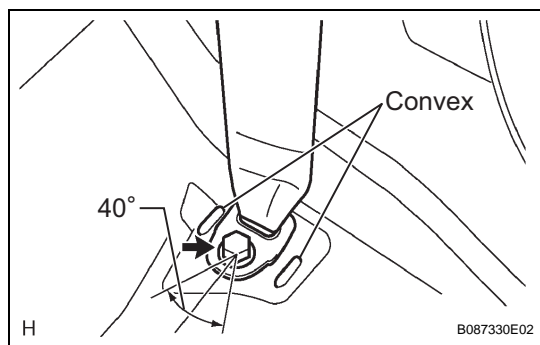

(d) Install the floor anchor of the rear seat belt outer with the bolt.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

**NOTICE:**

- Make sure that the rear seat outer belt is oriented in the correct direction when installing.
- Be careful not to place the rear seat outer belt over the convex areas of the floor panel.

**13. INSTALL QUARTER INSIDE TRIM BOARD RH**

**HINT:**

Follow the same procedures as for the quarter inside trim board LH.



**14. INSTALL QUARTER TRIM LOWER PANEL LH**

(a) Engage the 2 claws and 2 clips, and install the quarter trim lower panel.

**15. INSTALL QUARTER TRIM LOWER PANEL RH**

**HINT:**


Follow the same procedures as for the quarter trim lower panel LH.

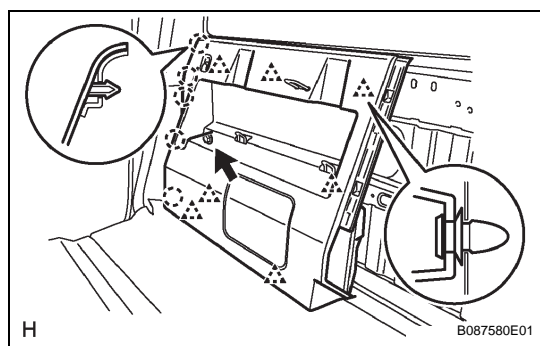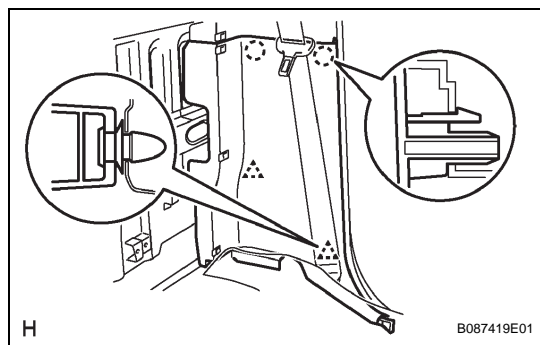

**16. INSTALL LUGGAGE COMPARTMENT SIDE TRAY RH**


(a) w/ Woofer:

- (1) Engage the 5 claws and 7 clips, and install the luggage compartment side tray.
- (2) Tighten the bolt.

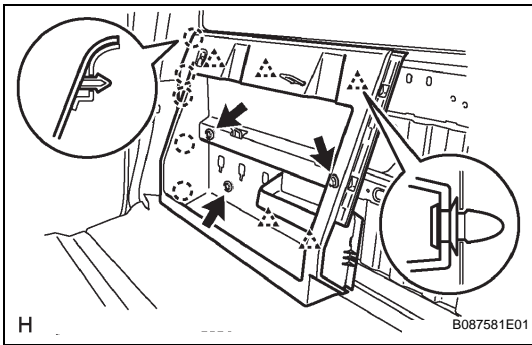


- (b) w/o Woofer:
  - (1) Engage the 5 claws and 5 clips, and install the luggage compartment side tray.
  - (2) Tighten the 3 bolts.

**17. INSTALL REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY (See page SE-77)**

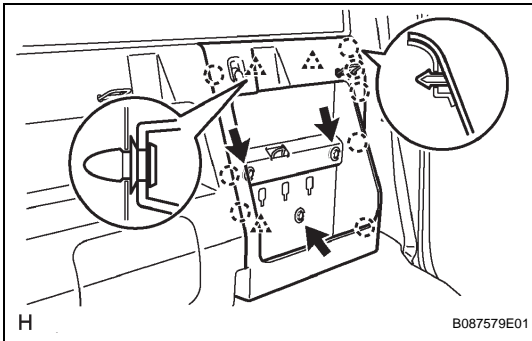

**18. INSTALL LUGGAGE COMPARTMENT SIDE TRAY LH**

- (a) Engage the 8 claws and 3 clips, and install the luggage compartment side tray.
- (b) Tighten the 3 bolts.

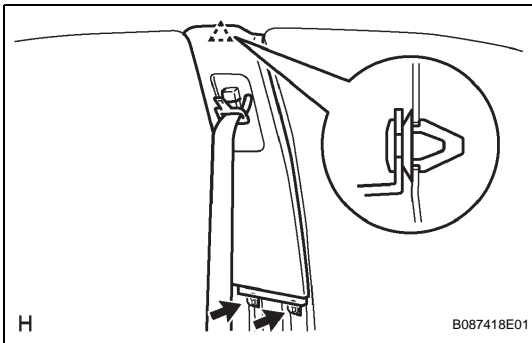


**19. INSTALL CENTER PILLAR UPPER GARNISH LH**

- (a) Engage the clip and install the center pillar upper garnish.
- (b) Tighten the 2 screws.

**20. INSTALL CENTER PILLAR UPPER GARNISH RH**


HINT:

Follow the same procedures as for the center pillar upper garnish LH.

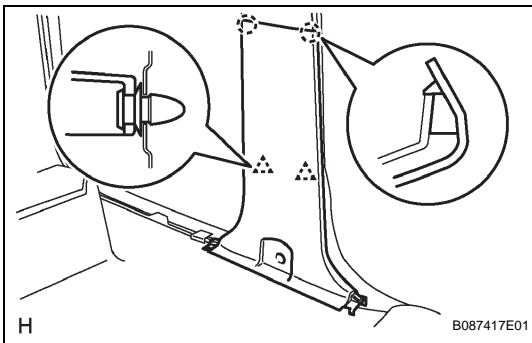

**21. INSTALL CENTER PILLAR LOWER GARNISH LH**

- (a) Engage the 2 claws and 2 clips, and install the center pillar lower garnish.

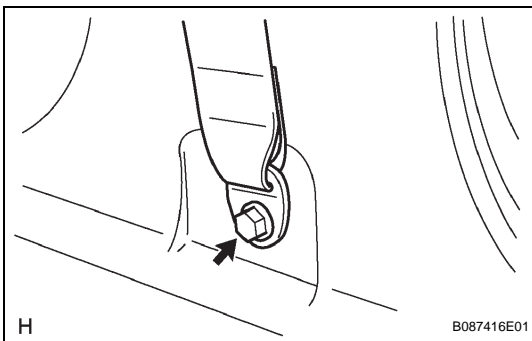


- (b) Install the floor anchor of the front seat outer belt with the bolt.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

**22. INSTALL CENTER PILLAR LOWER GARNISH RH**

HINT:

Follow the same procedures as for the center pillar lower garnish LH.

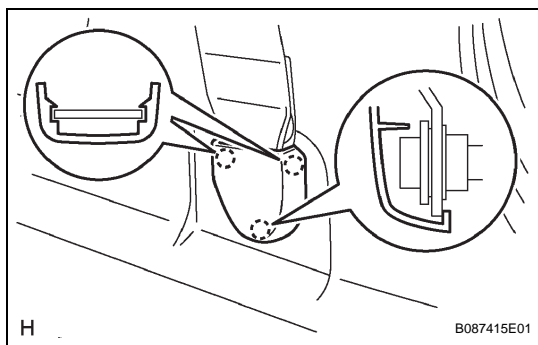

## 23. INSTALL LAP BELT OUTER ANCHOR COVER

### HINT:

Follow the same procedures as for the opposite side.

- (a) Engage the 3 claws and install the lap belt outer anchor cover.

## 24. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-18](#))

## 25. CONNECT PASSENGER AIRBAG CONNECTOR

## 26. INSTALL INSTRUMENT SIDE PANEL (See page [IP-20](#))

## 27. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-20](#))

## 28. INSTALL INSTRUMENT LOWER PANEL (See page [IP-20](#))

## 29. INSTALL INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-20](#))

## 30. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))

## 31. INSTALL INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

## 32. INSTALL COMBINATION METER ASSEMBLY (See page [IP-21](#))

## 33. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

## 34. INSTALL INSTRUMENT LOWER PANEL FINISH PANEL (See page [IP-22](#))

## 35. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-8](#))

## 36. INSTALL RADIO RECEIVER ASSEMBLY (See page [AV-70](#))

## 37. INSTALL AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-22](#))

## 38. INSTALL FRONT CONSOLE BOX

- (a) for Automatic Transmission:

- (1) Install the front console box (See page [IP-24](#)).

- (b) for Manual Transmission:

- (1) Install the front console box (See page [IP-23](#)).

## 39. INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission) (See page [IP-24](#))

## 40. INSTALL REAR CONSOLE BOX ASSEMBLY (See page [IP-24](#))

## 41. INSTALL REAR CONSOLE UPPER PANEL SUB-ASSEMBLY

- (a) for Automatic Transmission:

- (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).

(b) for Manual Transmission:

- (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).

**42. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-25](#))**

**43. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-25](#))**



**44. INSTALL FRONT PILLAR GARNISH LH**

- (a) Install the 3 wire harness clamps (LH side only).



- (b) Engage the claw and clip, and install the front pillar garnish.

- (c) Tighten the 2 screws.

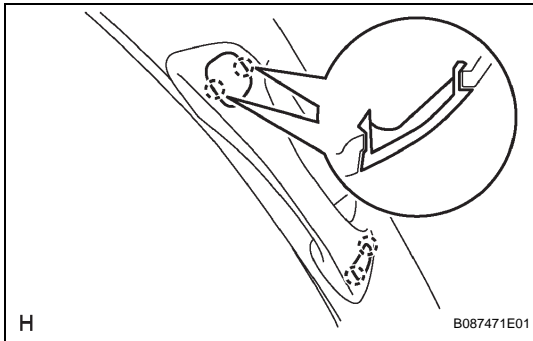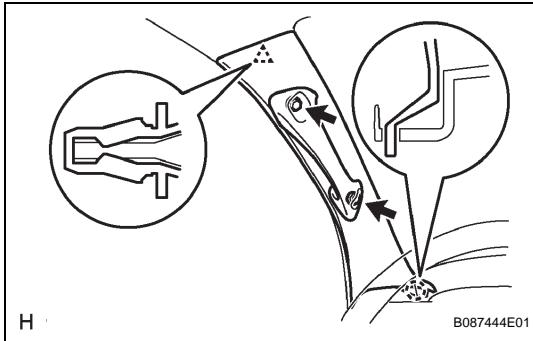

- (d) Engage the 2 claws and install the assist grip plug.


HINT:

Follow the same procedures as for the opposite side.

**45. INSTALL FRONT PILLAR GARNISH RH**

HINT:

Follow the same procedures as for the front pillar garnish LH.

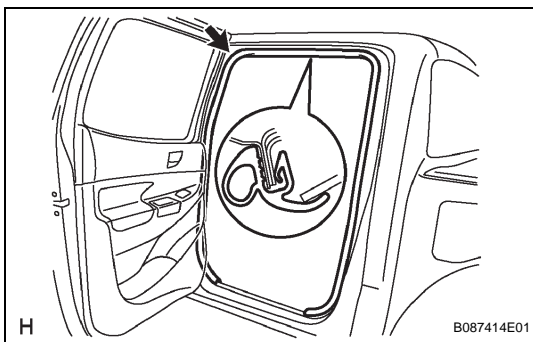

**46. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH**


- (a) Install the rear door opening trim weatherstrip.

**47. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH**

HINT:

Follow the same procedures as for the rear door opening trim weatherstrip.



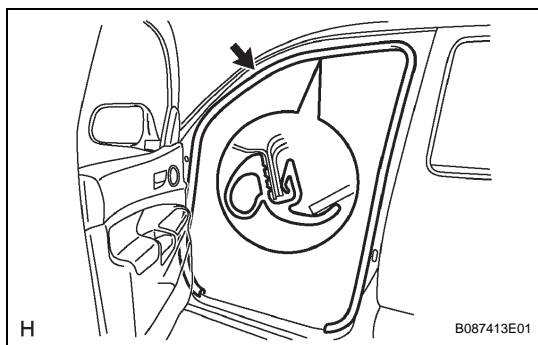


#### 48. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

(a) Install the front door opening trim weatherstrip.

#### 49. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the front door opening trim weatherstrip.

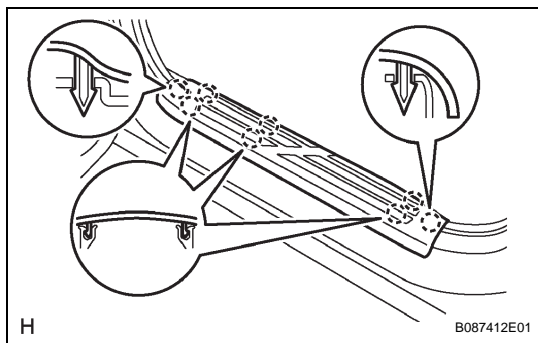


#### 50. INSTALL REAR DOOR SCUFF PLATE LH

(a) Engage the 8 claws and install the rear door scuff plate.

#### 51. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the rear door scuff plate LH.

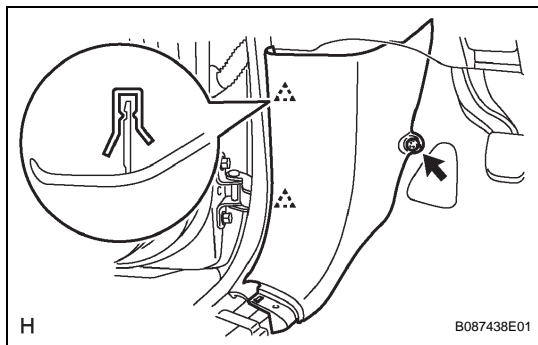

#### 52. INSTALL COWL SIDE TRIM BOARD LH


(a) Engage the 2 clips and install the cowl side trim board.

(b) Install the clip.

#### 53. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the cowl side trim board LH.

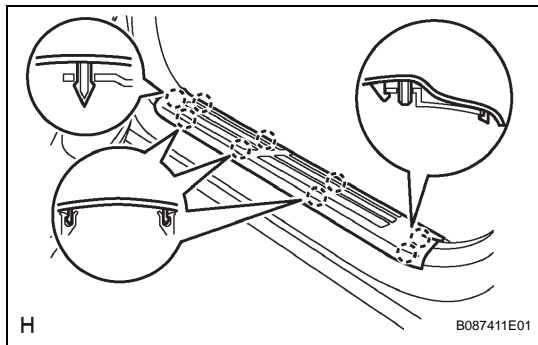

#### 54. INSTALL FRONT DOOR SCUFF PLATE LH

(a) Engage the 9 claws and install the front door scuff plate.

#### 55. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the front door scuff plate LH.

#### 56. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY LH (See page [SE-77](#))

#### 57. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY RH

HINT:

Follow the same procedures as for the rear seat back hinge sub-assembly LH.

#### 58. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))

#### 59. INSTALL REAR SEAT BACK ASSEMBLY LH (See page [SE-77](#))

#### 60. INSTALL REAR SEAT BACK ASSEMBLY RH (See page [SE-90](#))

**61. INSTALL REAR SEAT BACK HINGE COVER**

- (a) for LH Side:
  - (1) Install the rear seat back hinge cover (See page [SE-78](#)).
- (b) for RH Side:
  - (1) Install the rear seat back hinge cover (See page [SE-90](#)).

**62. INSTALL REAR SEAT CUSHION ASSEMBLY LH (See page [SE-78](#))**

**63. INSTALL REAR SEAT CUSHION ASSEMBLY RH (See page [SE-90](#))**

**64. INSTALL FRONT SEAT ASSEMBLY LH (See page [SE-34](#))**

**65. INSTALL FRONT SEAT ASSEMBLY RH**

- (a) for Separate Folding Seat Type:
  - (1) Install the front seat assembly RH (See page [SE-19](#)).
- (b) for Separate Seat Type Front Passenger Side:
  - (1) Install the front seat assembly RH (See page [SE-48](#)).



**66. INSTALL SEAT TRACK COVER LH (See page [SE-34](#))**

**67. INSTALL SEAT TRACK COVER RH**


- (a) for Separate Folding Seat Type:
  - (1) Install the seat track cover RH (See page [SE-19](#)).
- (b) for Separate Seat Type Front Passenger Side:
  - (1) Install the seat track cover RH (See page [SE-48](#)).

**68. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)**

- (a) Engage the 2 claws and install the inner rear view mirror cover.

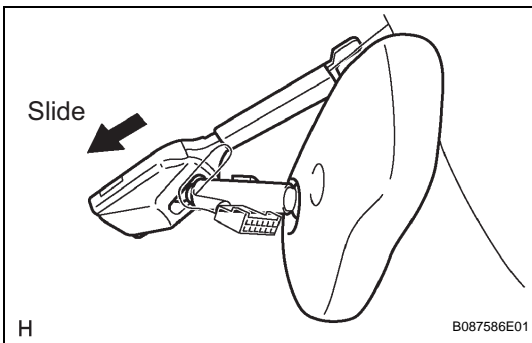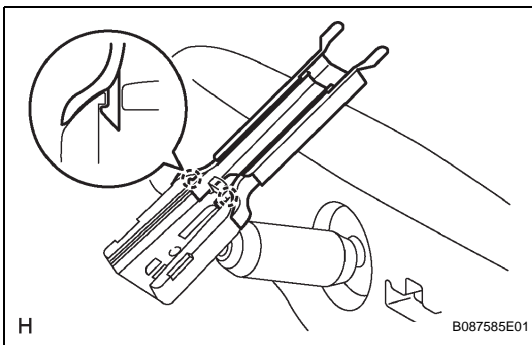

- (b) Slide and install the inner rear view mirror.

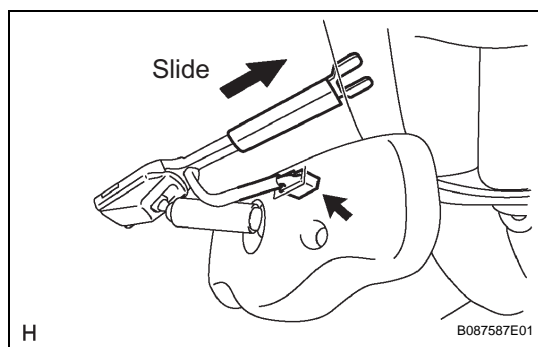

- (c) Slide the inner rear view mirror cover.
- (d) Connect the EC mirror connector.

**69. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**

**70. INSPECT SRS WARNING LIGHT**

(See page [RS-28](#))