

DISASSEMBLY



HINT:

Use the same procedures for the RH and LH sides.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2. REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY

- (a) Pull out the snap ring with a cloth as shown in the illustration, then remove the door window regulator handle assembly.

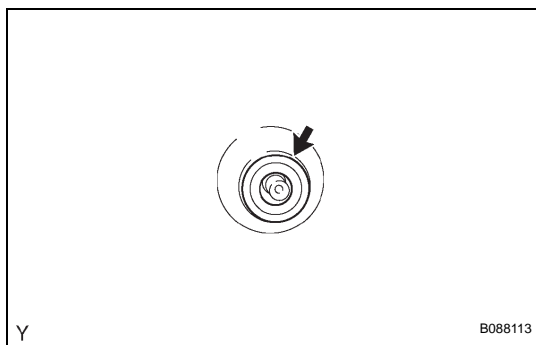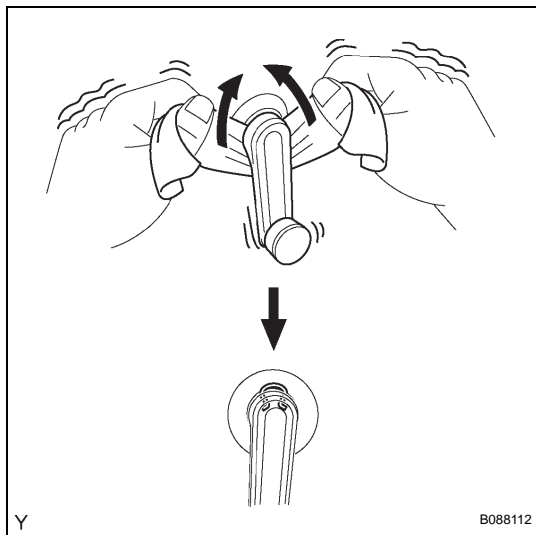


- (b) Remove the window regulator handle plate.


3. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH

- (a) Disengage the 3 clips and remove the front door lower frame bracket garnish LH.

NOTICE:


Confirm that no clips remain on the door panel when the garnish is removed. Transfer any remaining clips to the garnish side before installing.

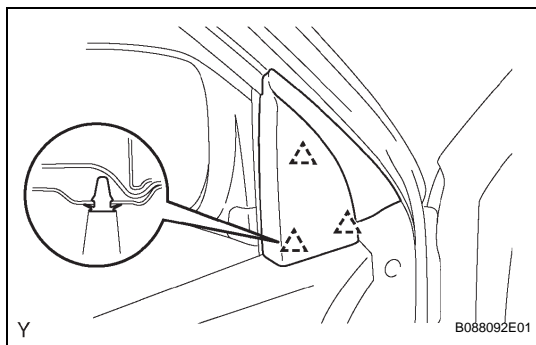

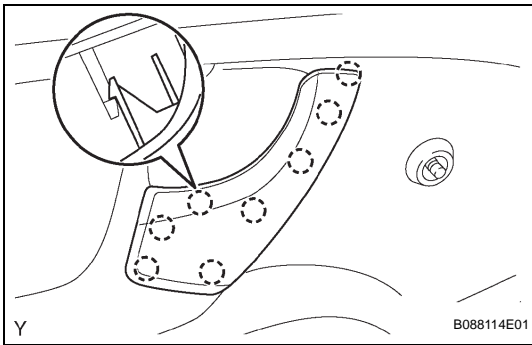


4. REMOVE FRONT DOOR TRIM PANEL ASSEMBLY LH


- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 8 claws and remove the door assist grip cover LH.

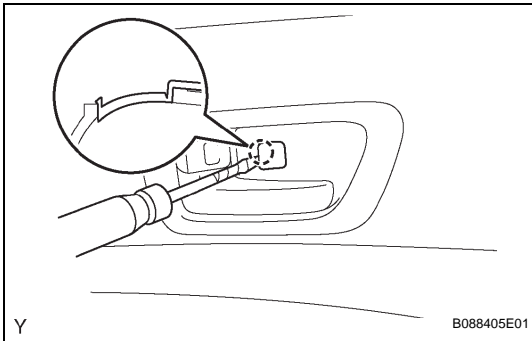

- (b) Using a screwdriver with its tip wrapped in protective tape, open the cover.

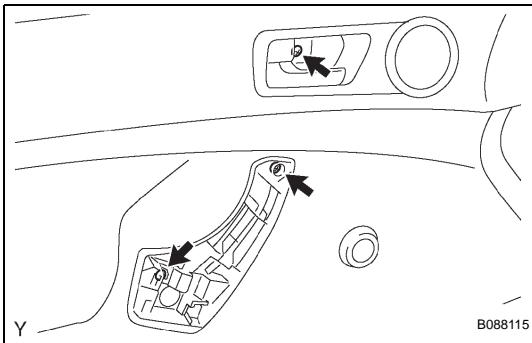

- (c) Remove the 3 screws.

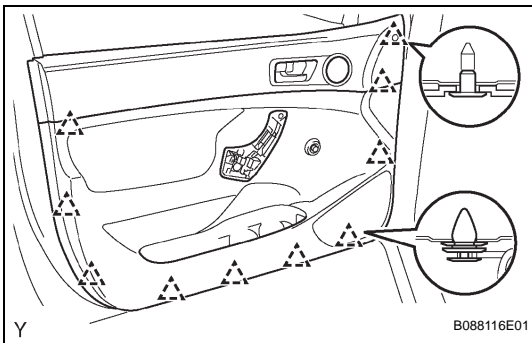

- (d) Disengage the 10 clips and remove the front door trim panel assembly LH.

5. REMOVE FRONT NO. 1 SPEAKER ASSEMBLY


HINT:


- Regular cab (See page [AV-76](#))
- Except regular cab (See page [AV-78](#))

6. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (See page [AV-83](#))

7. REMOVE FRONT NO. 1 SPEAKER BRACKET



- (a) Remove the 3 screws and remove the front No. 1 speaker bracket.

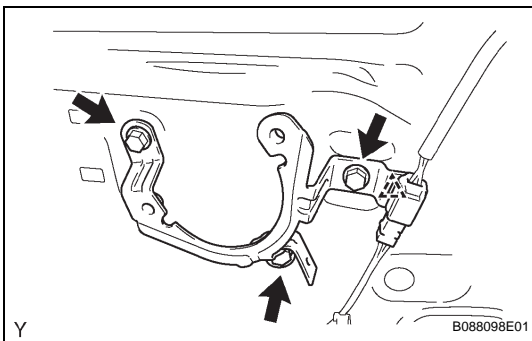

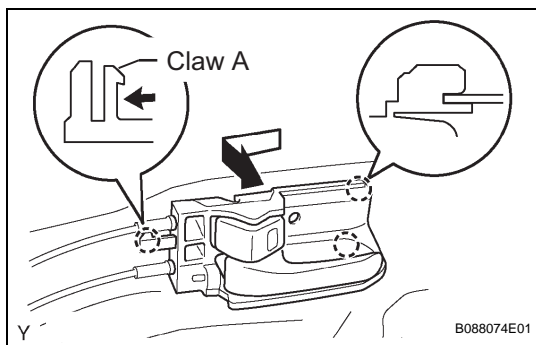

8. REMOVE FRONT DOOR INSIDE HANDLE SUB-ASSEMBLY LH

- Using a screwdriver with its tip wrapped in protective tape, disengage claw A as shown in the illustration.
- Move the front door inside handle sub-assembly LH in the direction indicated by the arrow mark in the illustration. This will release the claw and allow the removal of the front door inside handle sub-assembly LH.
- Disconnect the 2 cables from the front door inside handle sub-assembly LH.

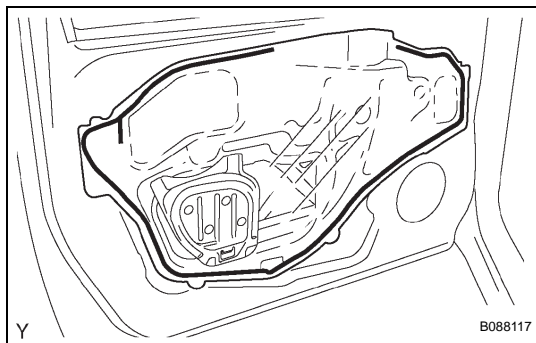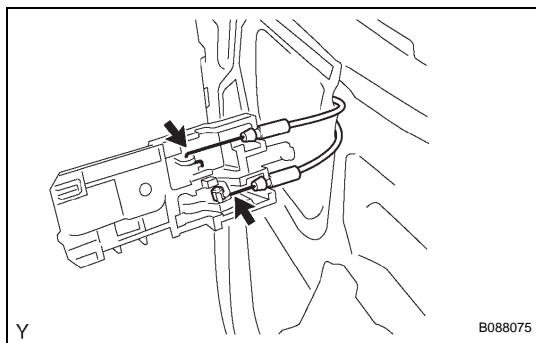

9. REMOVE FRONT DOOR SERVICE HOLE COVER LH


- Remove the front door service hole cover LH.

NOTICE:

Remove the remaining tape on the door side.


10. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [MI-8](#))

11. REMOVE FRONT DOOR BELT MOULDING LH (See page [ET-32](#))

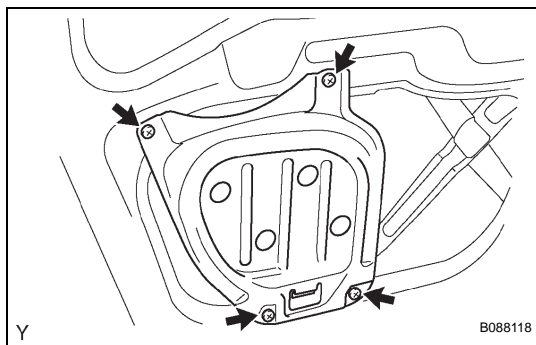

12. REMOVE FRONT DOOR INSIDE PANEL PLATE LH

- Remove the 4 screws and front door inside panel plate LH.

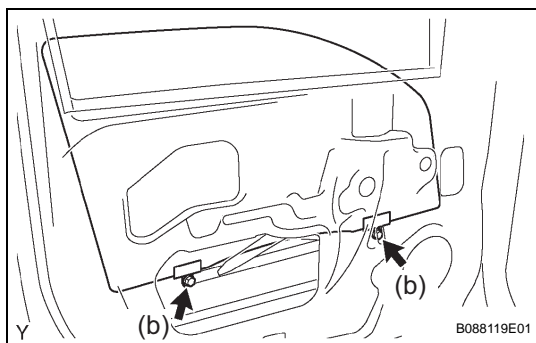

13. REMOVE FRONT DOOR GLASS SUB-ASSEMBLY LH


HINT:

Insert a shop rag inside the door panel to prevent the glass from being scratched.

- Move the front door glass sub-assembly LH until the 2 bolts appear in the service holes.
- Remove the 2 bolts.

NOTICE:


Be careful when removing the 2 bolts as the glass may fall and be damaged.

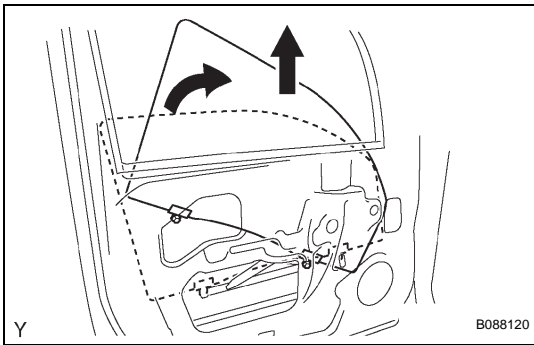


- (c) Remove the front door glass sub-assembly LH by moving it in the direction indicated by the arrow marks in the illustration.

NOTICE:

Be careful not to damage the glass.

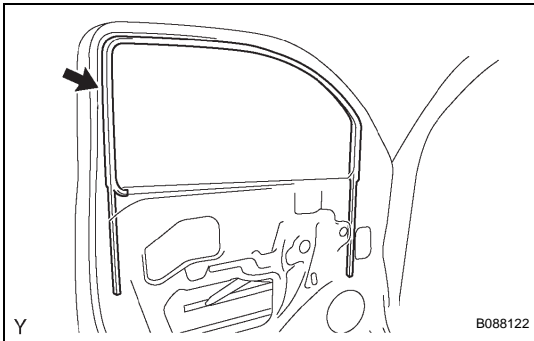**14. REMOVE FRONT DOOR GLASS RUN LH**

- (a) Remove the front door glass run LH.

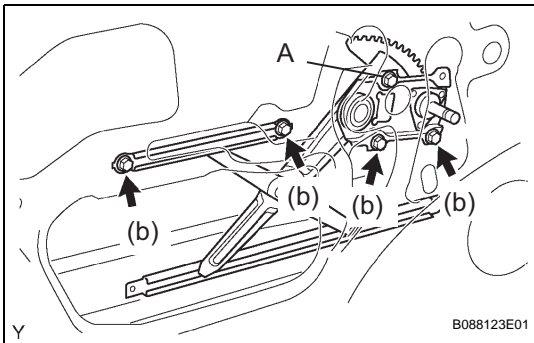**15. REMOVE FRONT DOOR WINDOW REGULATOR SUB-ASSEMBLY LH**


- (a) Loosen bolt A.
(b) Remove the 4 bolts, then remove the front door window regulator sub-assembly LH.

NOTICE:


Be careful when removing the bolts as the window regulator may fall and be damaged.

HINT:


Remove the window regulator through the service hole.

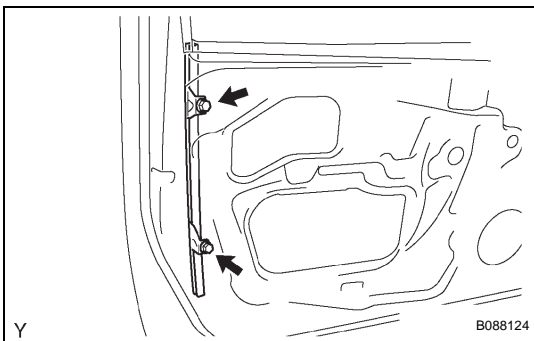**16. REMOVE FRONT DOOR REAR LOWER FRAME SUB-ASSEMBLY LH**

- (a) Remove the 2 bolts, then remove the front door rear lower frame sub-assembly LH.

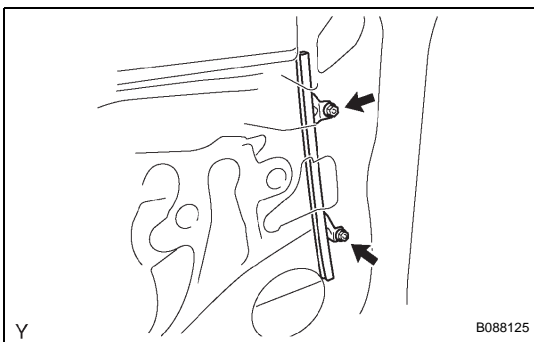
**17. REMOVE FRONT DOOR FRONT LOWER FRAME SUB-ASSEMBLY LH**

- (a) Remove the 2 nuts, then remove the front door front lower frame sub-assembly LH.

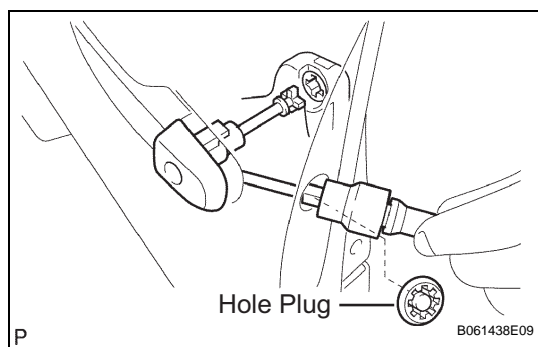

18. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

- Remove the hole plug.
- Using a torx socket wrench T30 , loosen the screw and remove the front door outside handle cover LH.

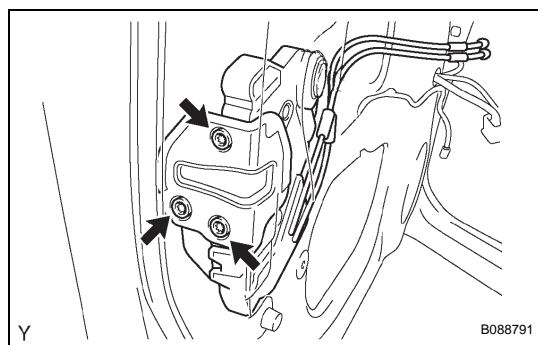

19. REMOVE FRONT DOOR LOCK ASSEMBLY LH


- Using a torx socket wrench T30 , remove the 3 screws and remove the front door lock assembly LH.

NOTICE:

Be careful when removing the 3 screws as the door lock may fall and be damaged.


HINT:

Remove the door lock through the service hole.

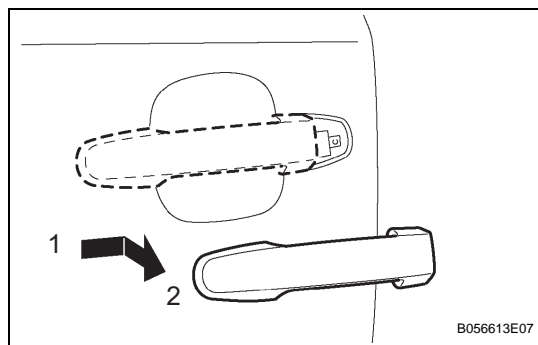


20. REMOVE FRONT DOOR OUTSIDE HANDLE ASSEMBLY LH


- Remove the front door outside handle assembly LH by sliding and pulling it in the direction indicated by the arrow mark in the illustration.

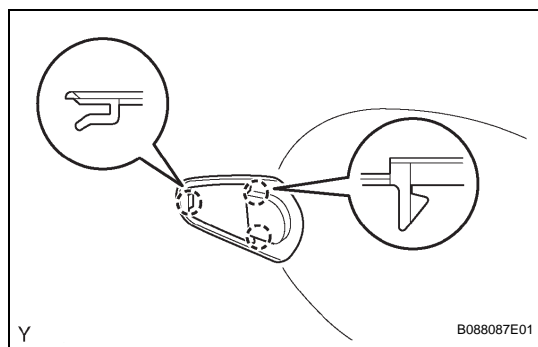

- Disengage the 3 claws and remove the front door outside handle front pad.

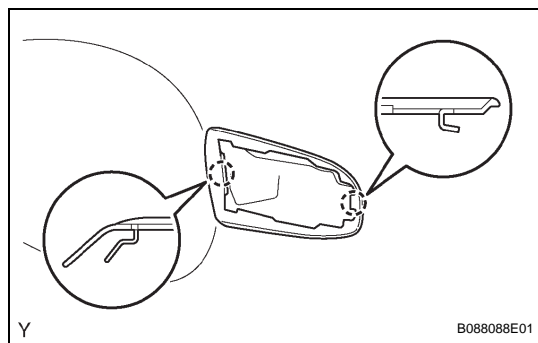

- Disengage the 2 claws and remove the front door outside handle rear pad.

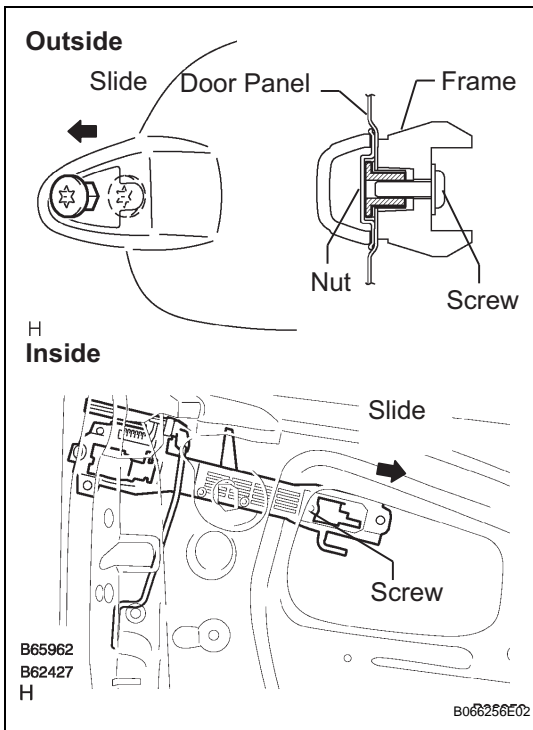


21. REMOVE FRONT DOOR OUTSIDE HANDLE FRAME SUB-ASSEMBLY LH

- Using a torx socket wrench T30 , loosen the screw.
- Slide the outside handle frame sub-assembly to remove it.


HINT:

Remove the outside handle frame sub-assembly through the service hole.

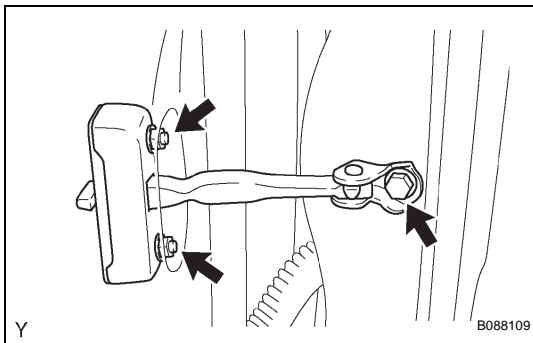

22. REMOVE FRONT DOOR CHECK ASSEMBLY LH

- Remove the 2 nuts and bolt, then remove the front door check assembly LH.

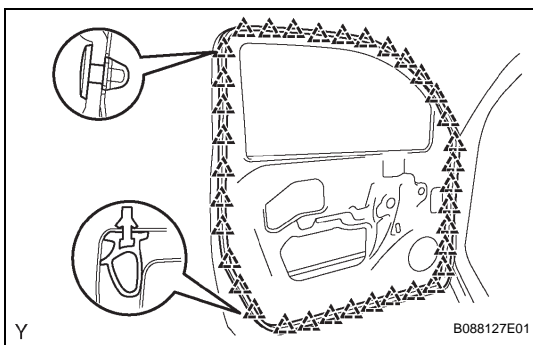


23. REMOVE FRONT DOOR WEATHERSTRIP LH (for Regular Cab)

- Disengage the 36 clips and remove the front door weatherstrip LH.

NOTICE:

Remove the remaining tape on the door side.

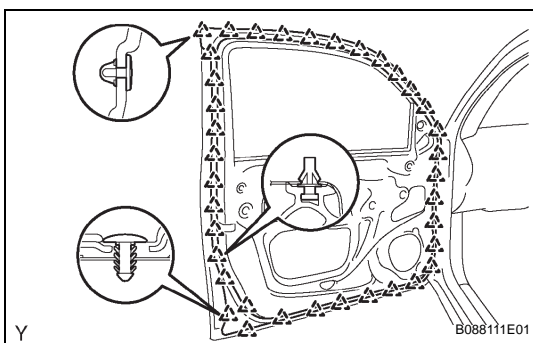

24. REMOVE FRONT DOOR WEATHERSTRIP LH (for Access Cab)

- Disengage the 36 clips and remove the front door weatherstrip LH.

NOTICE:

Remove the remaining tape on the door side.