
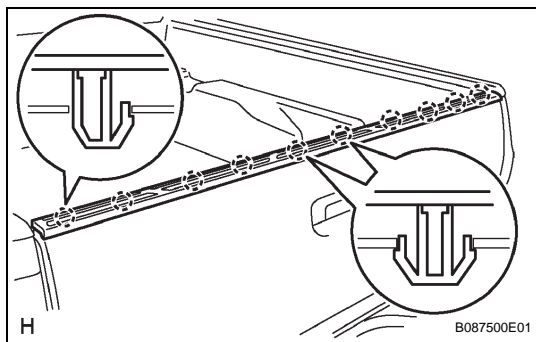
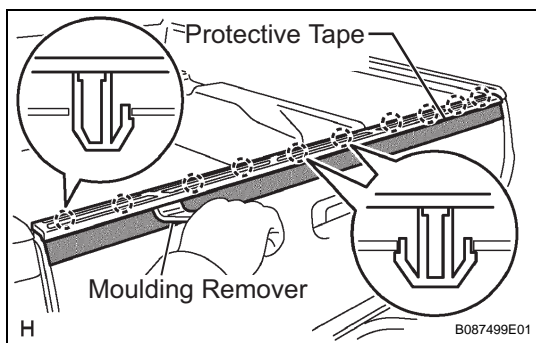


## TAIL GATE PROTECTOR

### REMOVAL

#### 1. REMOVE TAIL GATE PROTECTOR

- (a) Using "Torx" socket wrench T30, remove the 7 screws.
- (b) Apply protective tape to the outer circumference of the tail gate protector.
- (c) Using a moulding remover, disengage the 10 claws and remove the tail gate protector.

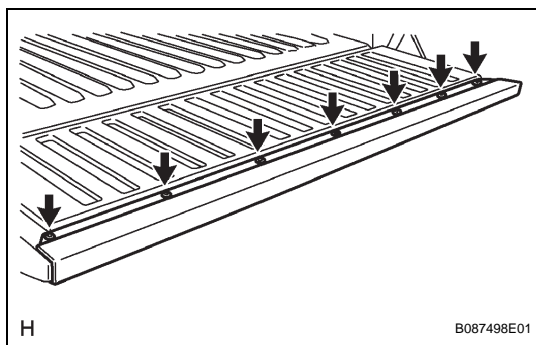

### INSTALLATION

#### 1. INSTALL TAIL GATE PROTECTOR

- (a) Engage the 10 claws and install the tail gate protector.
- (b) Using "Torx" socket wrench T30, tighten the 7 screws.

