


REMOVAL

HINT:

Use the same procedures for RH side and LH side.

1. **PRECAUTION**
(See page [RS-1](#))
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE REAR SEAT BACK HINGE COVER** (See page [SE-71](#))
4. **REMOVE REAR SEAT BACK ASSEMBLY LH** (See page [SE-71](#))
5. **REMOVE REAR SEAT BACK HINGE SUB-ASSEMBLY LH** (See page [SE-71](#))
6. **REMOVE REAR DOOR SCUFF PLATE LH** (See page [IR-13](#))
7. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH** (See page [SB-54](#))
8. **REMOVE LUGGAGE COMPARTMENT SIDE TRAY** (See page [IR-16](#))
9. **REMOVE QUARTER TRIM LOWER PANEL LH** (See page [IR-17](#))
10. **REMOVE QUARTER INSIDE TRIM BOARD LH** (See page [SB-54](#))
11. **REMOVE REAR SEAT OUTER BELT ASSEMBLY LH** (See page [SB-55](#))
12. **REMOVE REAR AIRBAG SENSOR**
 - (a) Disconnect the connector from the rear airbag sensor.
 - (b) Remove the nut and the rear airbag sensor.

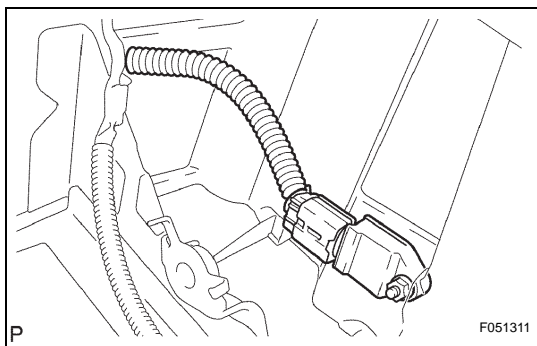

INSTALLATION

HINT:

Use the same procedures for the RH side and LH side.

1. INSTALL REAR AIRBAG SENSOR

- (a) Check that the ignition switch is OFF.
- (b) Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

After disconnecting the cable from the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the rear airbag sensor with the nut.

Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

NOTICE:

- Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed to the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, make sure that the SRS wiring does not interfere with any other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that it is not loose.

2. INSTALL REAR SEAT OUTER BELT ASSEMBLY LH (See page [SB-55](#))

3. INSTALL QUARTER INSIDE TRIM BOARD LH (See page [SB-56](#))

4. INSTALL QUARTER TRIM LOWER PANEL LH (See page [IR-25](#))

5. INSTALL LUGGAGE COMPARTMENT SIDE TRAY (See page [IR-25](#))

6. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH (See page [SB-57](#))

7. INSTALL REAR DOOR SCUFF PLATE LH (See page [IR-29](#))

8. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY LH (See page [SE-77](#))

9. INSTALL REAR SEAT BACK ASSEMBLY LH (See page [SE-77](#))

10. INSTALL REAR SEAT BACK HINGE COVER (See page [SE-78](#))

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

12. INSPECT SRS WARNING LIGHT