


- (g) Turn SST 1-B, and remove SST 1-A and B.
- (h) Turn the generator pulley, and check that the generator pulley moves smoothly.

INSTALLATION

1. INSTALL GENERATOR ASSEMBLY

- (a) Install the generator with the 2 bolts.
Torque: 43 N*m (438 kgf*cm, 32 ft.*lbf)

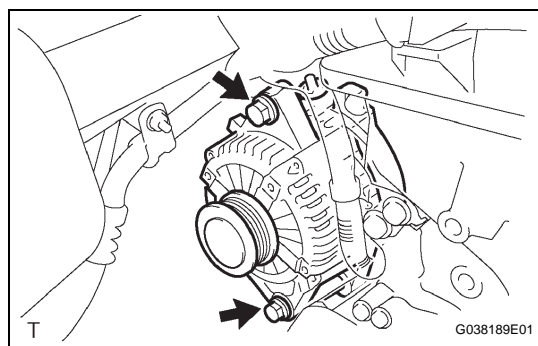

- (b) Connect the generator connector.
- (c) Install the generator wire with the nut.
Torque: 9.8 N*m (100 kgf*cm, 7 ft.*lbf)
- (d) Install the terminal cap.

2. INSTALL FAN AND GENERATOR V BELT (See page [EM-6](#))

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

