

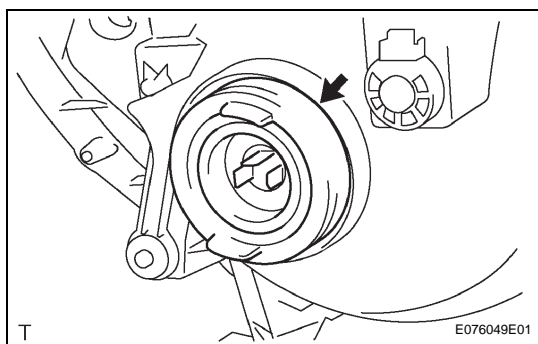
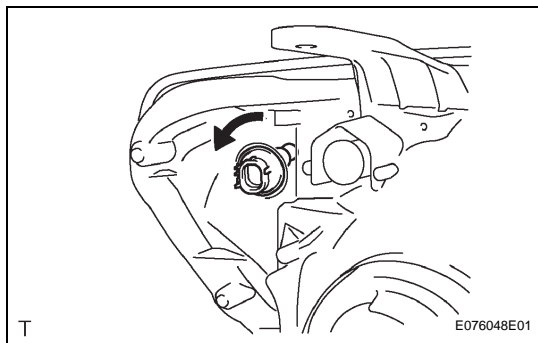
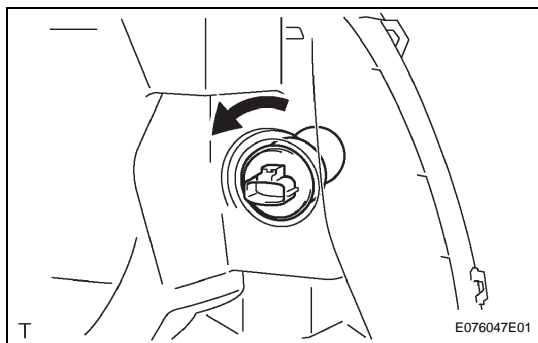


REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE RADIATOR GRILLE** (See page [ET-4](#))
3. **REMOVE FRONT BUMPER COVER** (See page [ET-4](#))
4. **REMOVE FRONT BUMPER FILLER** (See page [ET-6](#))
5. **REMOVE HEADLIGHT ASSEMBLY**
 - (a) Remove the bolt and 3 screws.
 - (b) Disconnect the 3 connectors, then remove the LH headlight assembly.

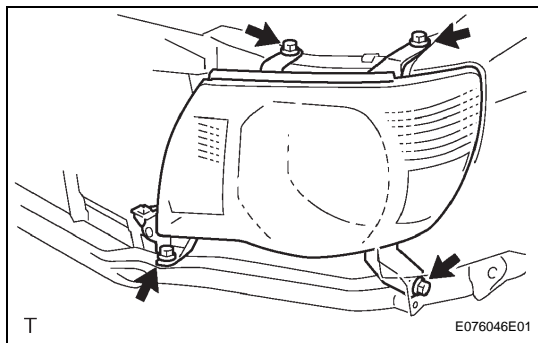

6. **REMOVE FRONT TURN SIGNAL LIGHT BULB**
 - (a) To remove the front turn signal light socket and bulb, turn them in the direction indicated by the arrow in the illustration.
 - (b) Remove the front turn signal light bulb from the light socket.
7. **REMOVE CLEARANCE LIGHT BULB**
 - (a) To remove the clearance light bulb socket and bulb, turn them in the direction indicated by the arrow in the illustration.
 - (b) Remove the clearance light bulb from the light socket.
8. **REMOVE NO. 1 HEADLIGHT, BULB**
 - (a) Remove the socket cover.

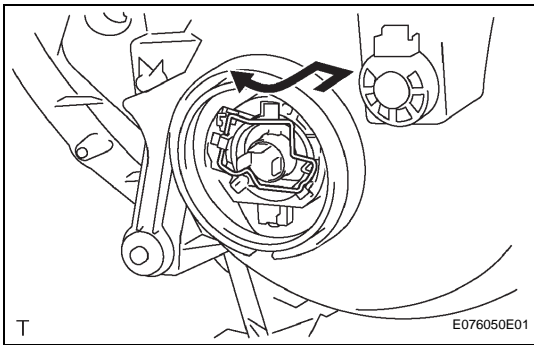

- (b) Push the set spring in the direction indicated by the arrow in the illustration.

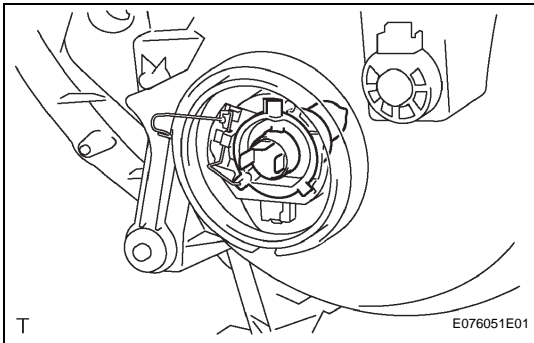

- (c) Remove the No. 1 headlight bulb.

NOTICE:

Do not touch the bulb glass with your fingers.