


- (c) Remove the 3 screws.
- (d) Disengage the 2 clips and remove the quarter inside trim board.


## 9. REMOVE REAR SEAT OUTER BELT ASSEMBLY



- (a) Remove the bolt and shoulder anchor.

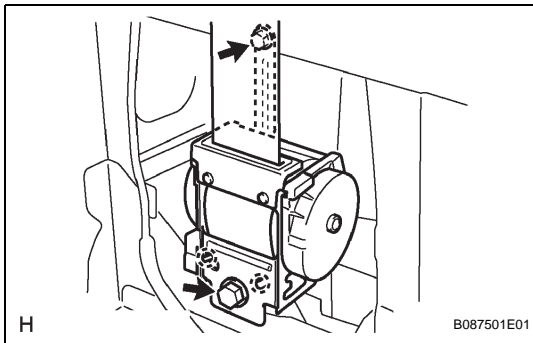

- (b) Remove the 2 bolts and retractor.

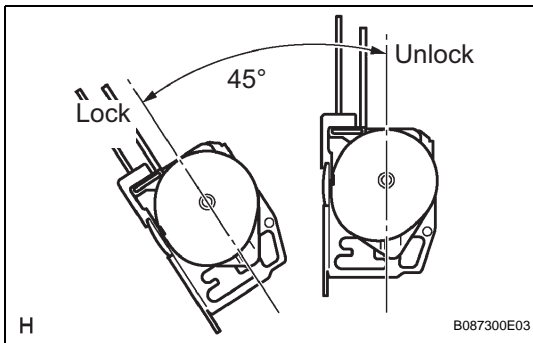

## INSTALLATION


### 1. INSTALL REAR SEAT OUTER BELT ASSEMBLY

- (a) Check the amount of inclination required to lock the retractor.
  - (1) Gently incline the retractor from its initial position. Check that the belt does not lock when the retractor is inclined 15° or less in any directions. Also check that the belt locks when inclination of the retractor is 45° or more.

#### **NOTICE:**

**Do not disassemble the retractor.**


If operation is not as specified, replace the rear seat outer belt.

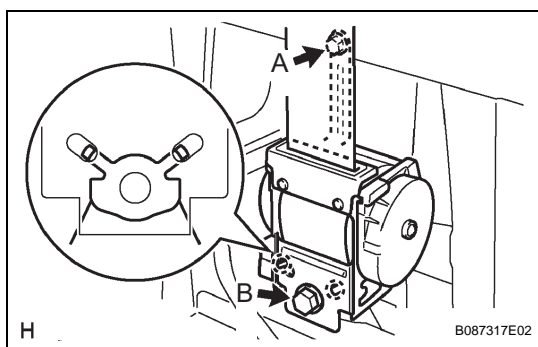

- (b) Hook the lower stay of the retractor onto the 2 body hooks.
- (c) Tighten bolt A, and then tighten bolt B.  
**Torque: 8.5 N\*m (85 kgf\*cm, 75 in.\*lbf) (for bolt A)**  
**42 N\*m (430 kgf\*cm, 31 ft.\*lbf) (for bolt B)**




- (d) Install the shoulder anchor with the bolt.  
**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**
- (e) Check that the shoulder anchor rotates smoothly.

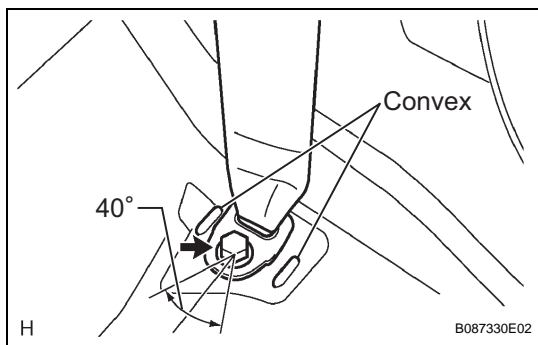


- (f) Install the floor anchor with the bolt.  
**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**  
**NOTICE:**
- **Make sure that the rear seat outer belt is oriented in the correct direction when installing.**
  - **Be careful not to place the rear seat outer belt over the convex areas of the floor panel.**
- (g) Check the ELR lock.  
**NOTICE:**
- **The check should be performed with the rear seat outer belt installed.**
  - **Do not allow the anchor part of the rear seat outer belt and the protruding parts of the floor panel to overlap.**
- (1) With the belt installed, check that the belt locks when it is pulled out quickly.  
 If operation is not as specified, replace the rear seat outer belt.
- (h) Remove the bolt and floor anchor.

SB

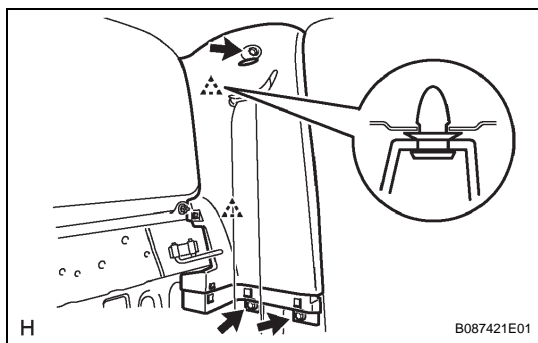


## 2. INSTALL QUARTER INSIDE TRIM BOARD

- (a) Engage the 2 clips and install the quarter inside trim board.
- (b) Tighten the 3 screws.

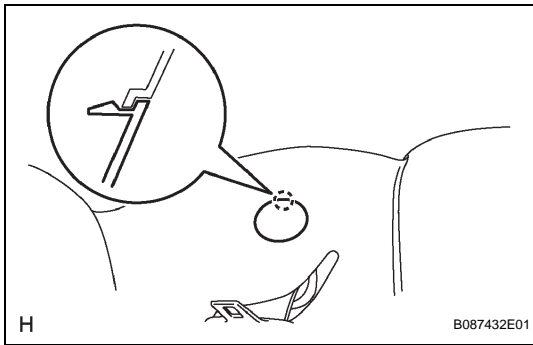

(c) Engage the claw and close the cover.

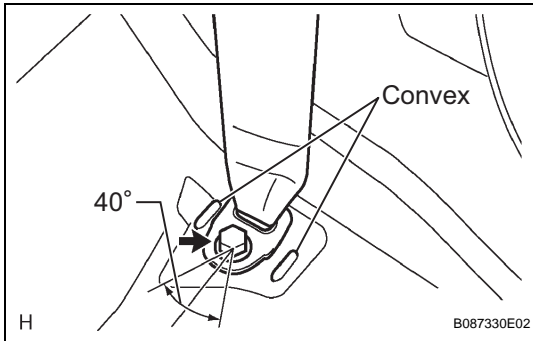

(d) Install the floor anchor of the rear seat belt outer with the bolt.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

**NOTICE:**

- The check should be performed with the rear seat outer belt installed.
- Do not allow the anchor part of the rear seat outer belt and the protruding parts of the floor panel to overlap.

3. **INSTALL QUARTER TRIM LOWER PANEL** (See page [IR-25](#))

4. **INSTALL LUGGAGE COMPARTMENT SIDE TRAY** (See page [IR-25](#))

5. **INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP**

(a) Install the rear door opening trim weatherstrip.

6. **INSTALL REAR DOOR SCUFF PLATE** (See page [IR-29](#))

7. **INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY** (See page [SE-77](#))

8. **INSTALL REAR SEAT BACK ASSEMBLY** (See page [SE-77](#))

9. **INSTALL REAR SEAT BACK HINGE COVER**

**HINT:**

Follow the same procedure as for the opposite side.

(a) Engage the 3 claws and install the rear seat back hinge cover.

