
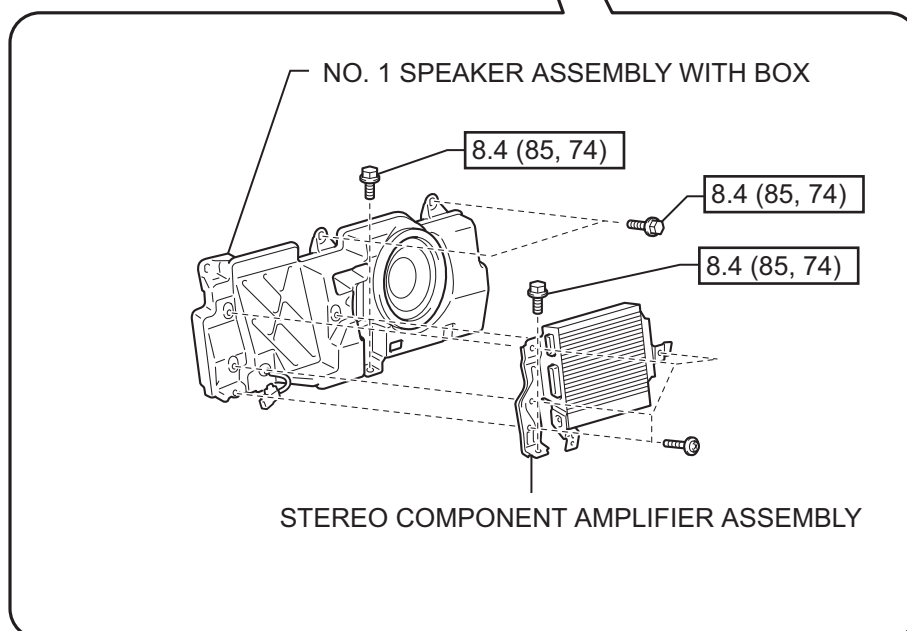


NO. 1 SPEAKER WITH BOX

COMPONENTS

DOUBULE CAB — PREMIUM VERSION:



AV

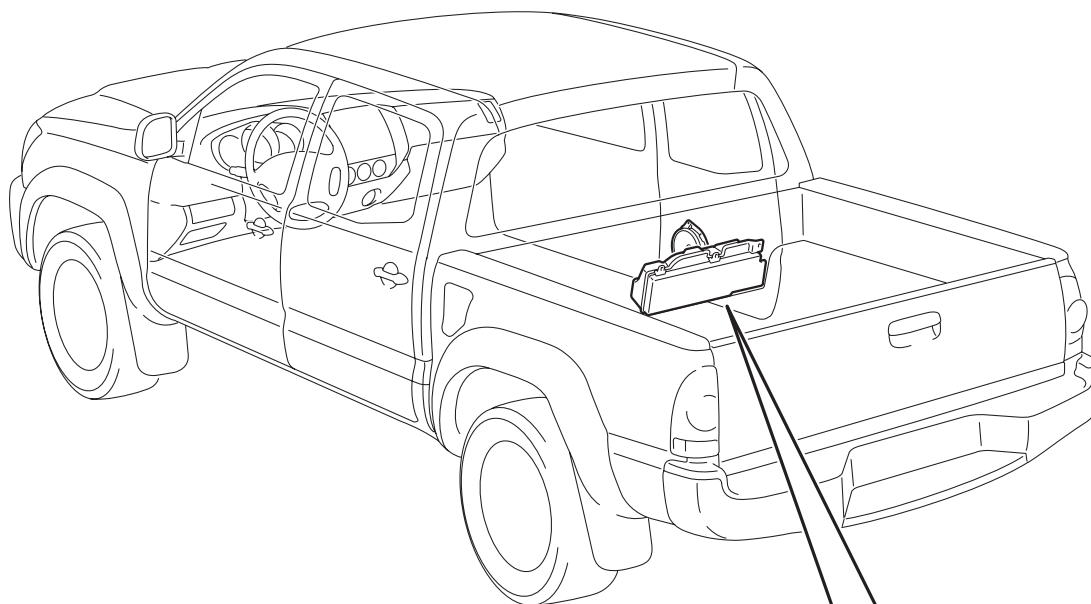


$\boxed{\text{N*m (kgf*cm, ft.*lbf)}}$; Specified torque

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE REAR SEATBACK ASSEMBLY RH** (See page [SE-82](#))
3. **REMOVE REAR SEATBACK ASSEMBLY LH** (See page [SE-71](#))
4. **REMOVE LUGGAGE COMPARTMENT SIDE TRAY** (See page [IR-16](#))
5. **REMOVE NO. 1 SPEAKER ASSEMBLY WITH BOX**
 - (a) Disconnect the 3 connectors.
 - (b) Remove the clamp.

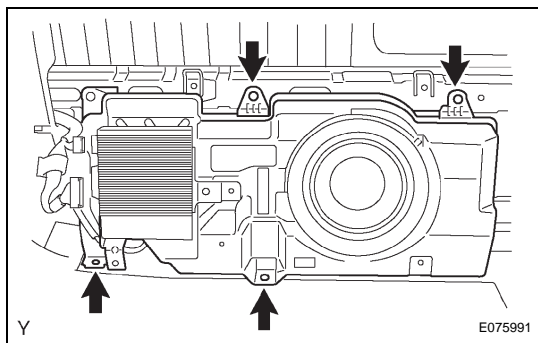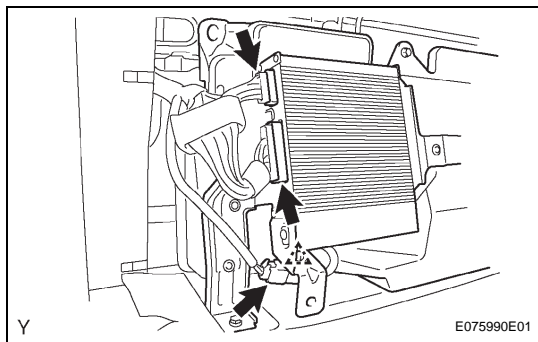


- (c) Remove the 4 bolts and the No. 1 speaker assembly with box.

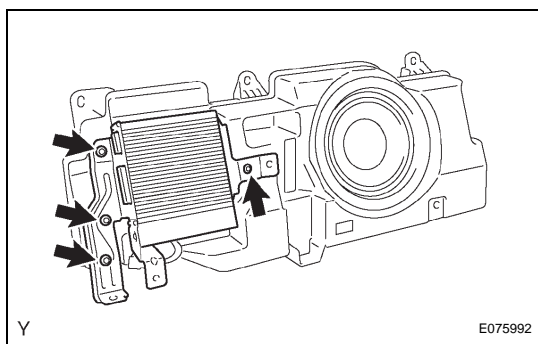

6. REMOVE STEREO COMPONENT AMPLIFIER ASSEMBLY


- (a) Using a torx socket wrench T20, remove the 4 screws and the stereo component amplifier assembly.

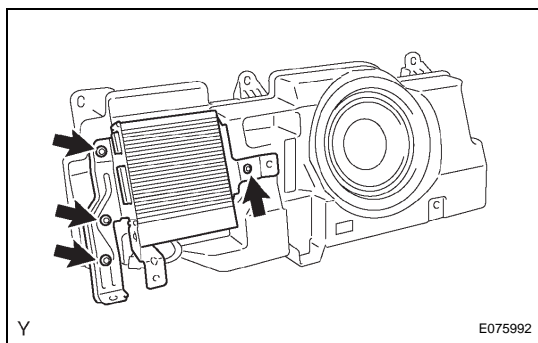

INSTALLATION

1. INSTALL STEREO COMPONENT AMPLIFIER ASSEMBLY

- (a) Using a torx socket wrench T20, install the 4 screws and the stereo component amplifier assembly.

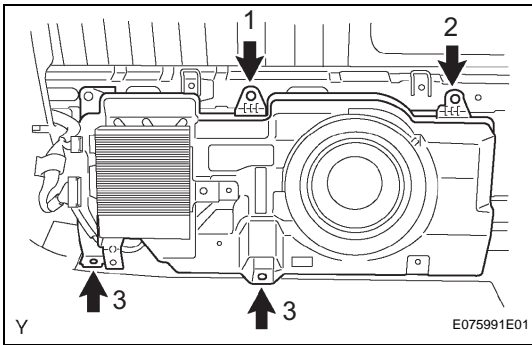
**2. INSTALL NO. 1 SPEAKER ASSEMBLY WITH BOX**

- (a) Install the No. 1 speaker assembly with box with the 4 bolts.

Torque: 8.4 N*m (85 kgf*cm, 74 in.*lbf)

NOTICE:

Install the bolts in the order shown in the illustration.

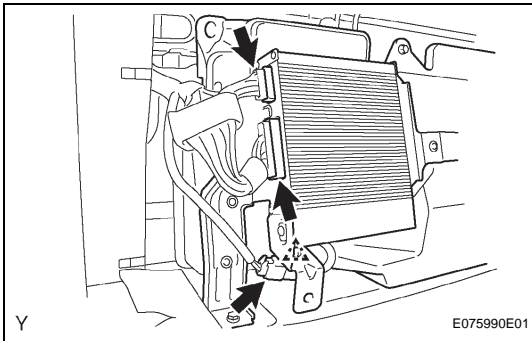AV

- (b) Connect the connector.

- (c) Install the clamp.

3. INSTALL LUGGAGE COMPARTMENT SIDE TRAY (See page [IR-26](#))**4. INSTALL REAR SEATBACK ASSEMBLY LH (See page [SE-77](#))****5. INSTALL REAR SEATBACK ASSEMBLY RH (See page [SE-90](#))****6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)