

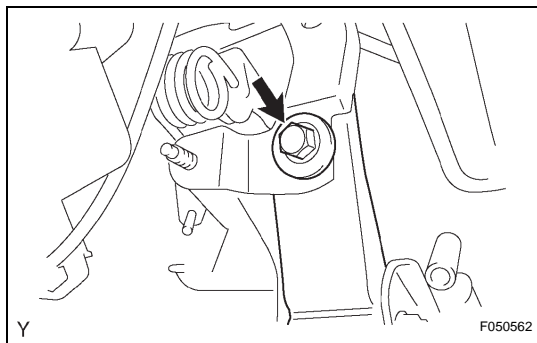


REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE FRONT FLOOR FOOTREST (See page [IR-1](#))
3. REMOVE FRONT DOOR SCUFF PLATE (for Regular Cab) (See page [IR-40](#))
4. REMOVE FRONT DOOR SCUFF PLATE (for Access Cab) (See page [IR-61](#))
5. REMOVE FRONT DOOR SCUFF PLATE (for Double Cab) (See page [IR-12](#))
6. REMOVE COWL SIDE TRIM BOARD (for Regular Cab) (See page [IR-40](#))
7. REMOVE COWL SIDE TRIM BOARD (for Access Cab) (See page [IR-61](#))
8. REMOVE COWL SIDE TRIM BOARD (for Double Cab) (See page [IR-12](#))
9. REMOVE INSTRUMENT PANEL UNDER TRAY (for Automatic Transmission) (See page [IP-9](#))
10. REMOVE INSTRUMENT PANEL HOLE COVER (for Manual Transmission) (See page [IP-9](#))
11. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO. 1 (See page [IP-12](#))
12. SEPARATE DRIVER SIDE JUNCTION BLOCK
13. SEPARATE MASTER CYLINDER PUSH ROD CLEVIS
 - (a) Remove the clip and push rod pin, then separate the push rod clevis.

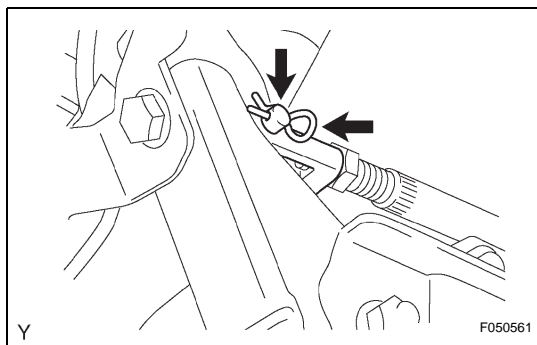


14. REMOVE BRAKE PEDAL SUPPORT REINFORCEMENT
 - (a) Remove the bolt from the reinforcement.

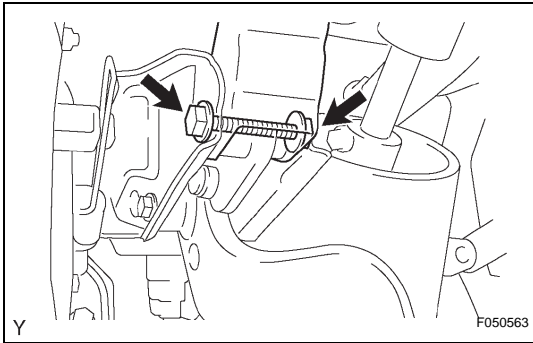


- (b) Remove the bolt and nut, then remove the reinforcement from the brake pedal support.

15. REMOVE BRAKE PEDAL SUPPORT SUB-ASSEMBLY

- (a) Disconnect the stop light switch connector from the stop lamp switch.

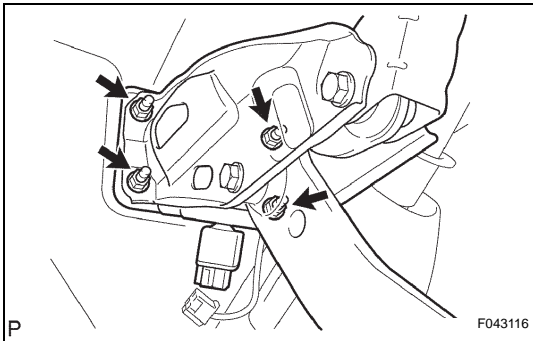

- (b) Remove the 4 nuts and brake pedal support.

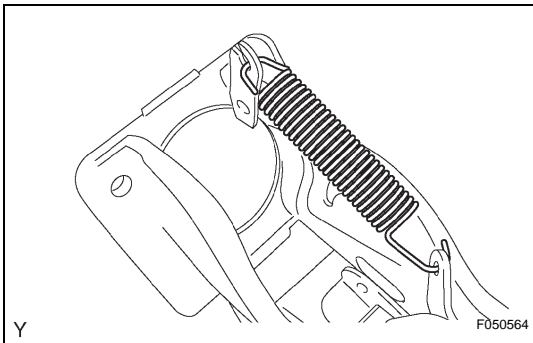


16. REMOVE BRAKE PEDAL RETURN SPRING

- (a) Remove the return spring from the brake pedal support and brake pedal.


17. REMOVE STOP LIGHT SWITCH ASSEMBLY

- (a) Turn the stop light switch counterclockwise, and remove the stop light switch.
(b) Remove the stop light switch mounting adjuster from the brake pedal support.

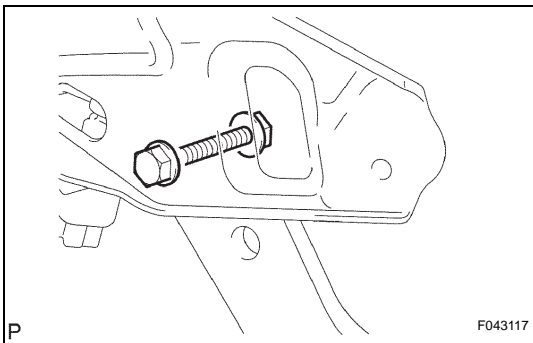

18. REMOVE BRAKE PEDAL

- (a) Remove the bolt and nut, then remove the brake pedal from the brake pedal support.
(b) Remove the 4 brake pedal bushes from the brake pedal and brake pedal lever.
(c) Remove the 2 collars from the brake pedal and brake pedal lever.

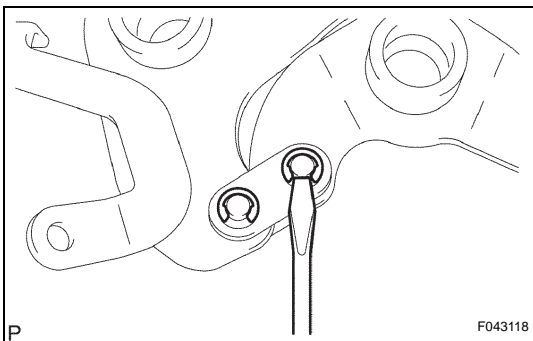

19. REMOVE BRAKE PEDAL LEVER

- (a) Using a screwdriver, remove the 2 E-rings from the brake pedal link pin.
(b) Remove the 2 brake pedal link pins, 2 brake pedal shaft collars and 2 brake pedal links.
(c) Remove the brake pedal lever from the brake pedal.

20. REMOVE BRAKE PEDAL PAD

- (a) Remove the brake pedal pad from the brake pedal.