


# FRONT SEAT OUTER BELT ASSEMBLY (for Double Cab)

## COMPONENTS

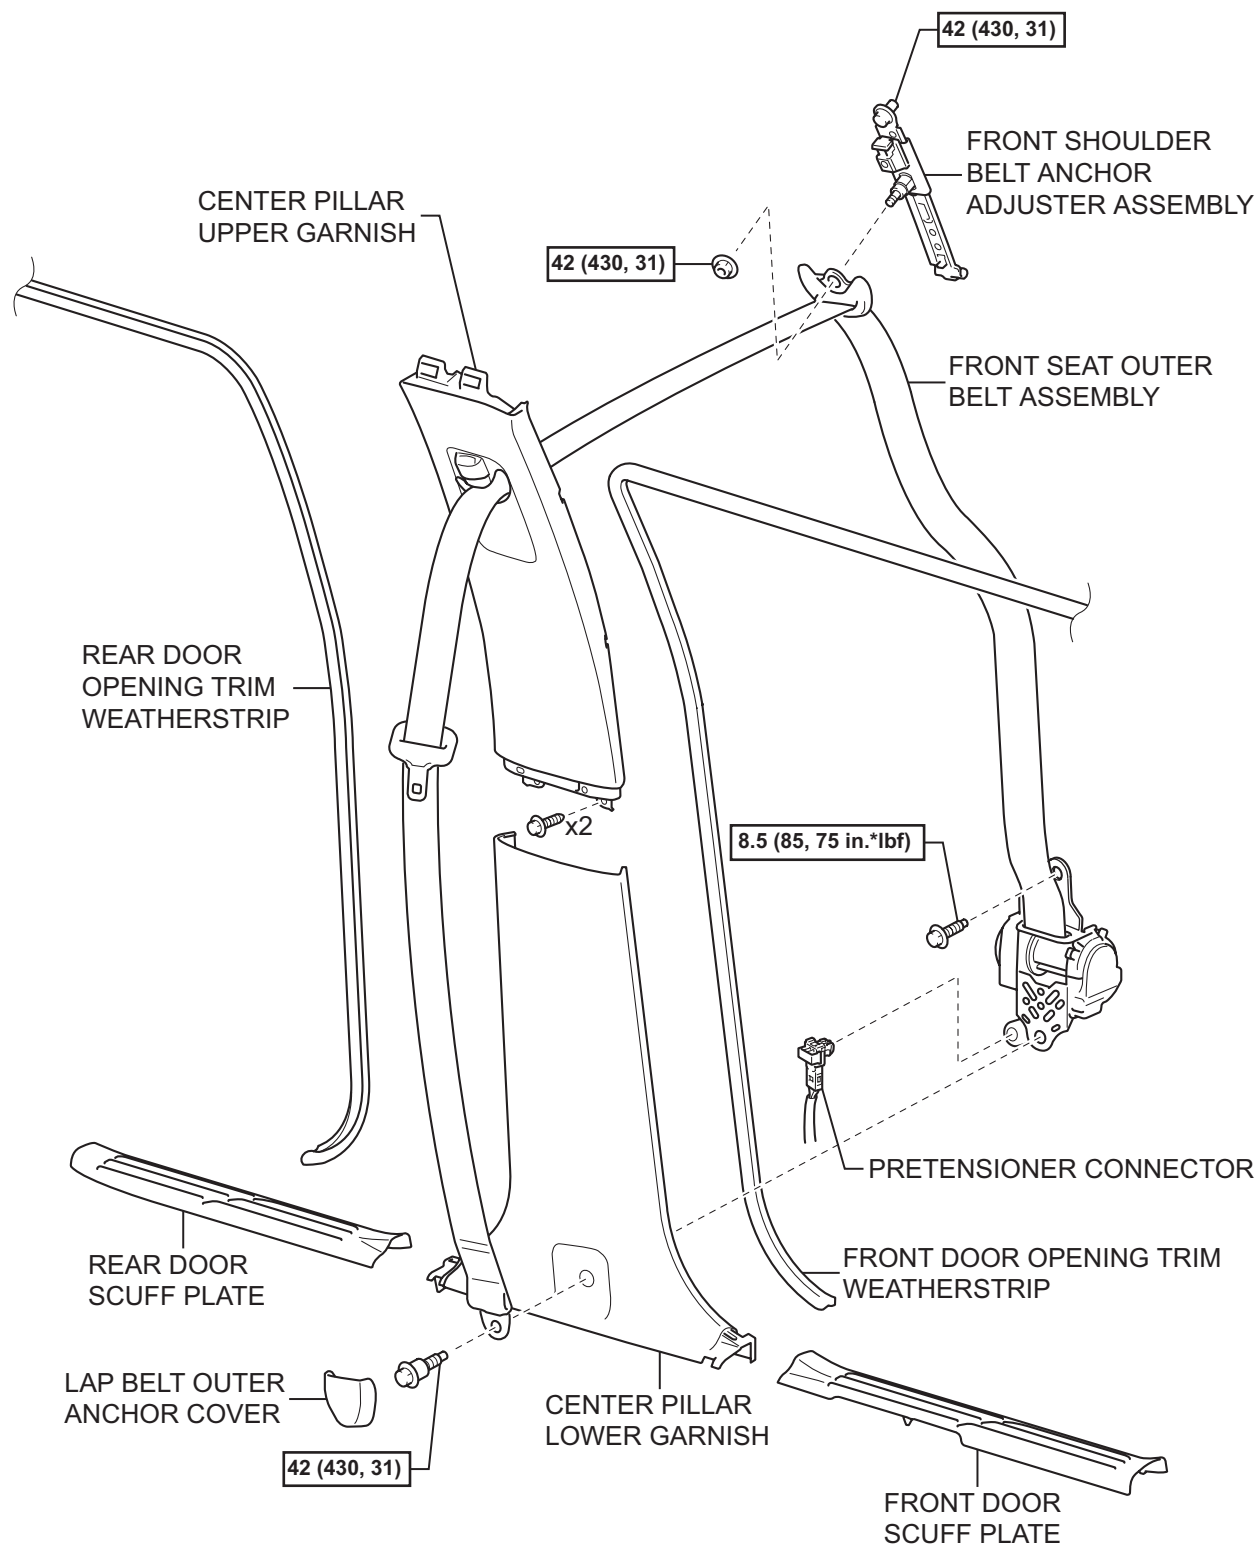

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

SB


## REMOVAL

### CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**  
Wait for at least 90 seconds after disconnecting the cable to prevent the air bag from working.
2. **REMOVE FRONT DOOR SCUFF PLATE** (See page [IR-12](#))
3. **REMOVE REAR DOOR SCUFF PLATE** (See page [IR-13](#))
4. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP**

- (a) Separate the front door opening trim weatherstrip to the extent which allows the removal of the center pillar lower garnish and center pillar upper garnish.

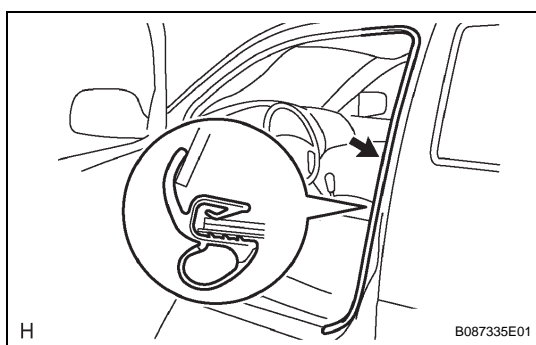

5. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP**

- (a) Separate the rear door opening trim weatherstrip to the extent which allows the removal of the center pillar lower garnish and center pillar upper garnish.

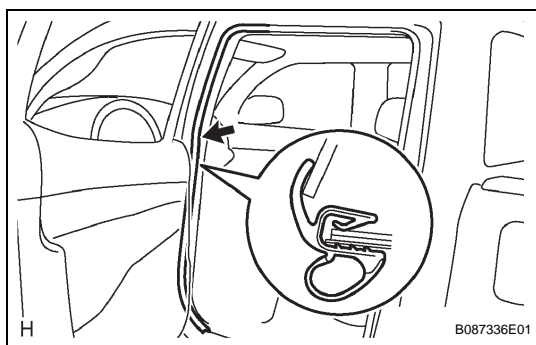



6. **REMOVE LAP BELT OUTER ANCHOR COVER**

- (a) Disengage the 3 claws and remove the lap belt outer anchor cover.


7. **REMOVE CENTER PILLAR LOWER GARNISH** (See page [IR-15](#))

8. **REMOVE CENTER PILLAR UPPER GARNISH** (See page [IR-16](#))

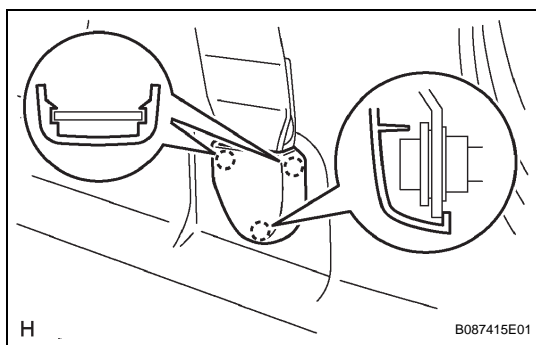

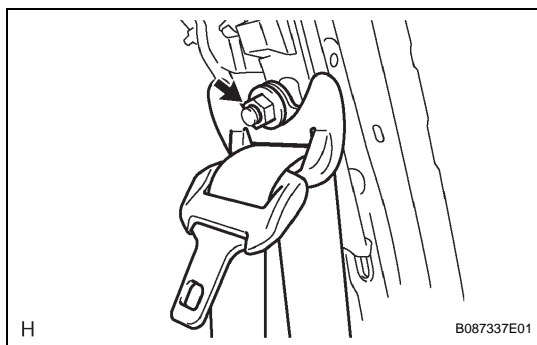
**9. REMOVE FRONT SEAT OUTER BELT ASSEMBLY**

(a) Remove the nut and shoulder anchor.

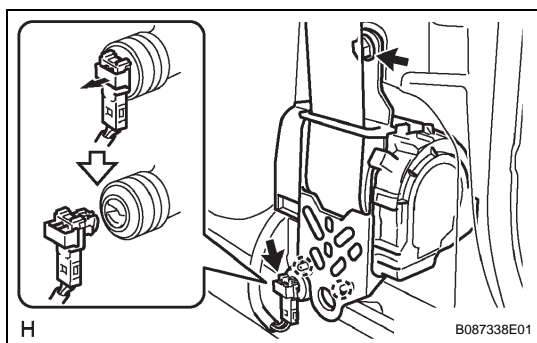

(b) Disconnect the pretensioner connector as shown in the illustration.

(c) Remove the bolt and retractor.

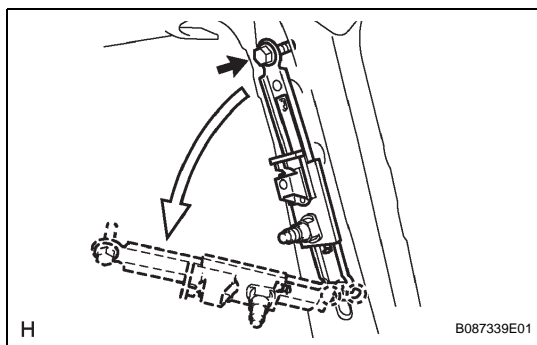**10. REMOVE FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY**

(a) Remove the bolt.

(b) Disengage the 2 claws and remove the front shoulder belt anchor adjuster.