

INSPECTION


1. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Check the operation.
- (1) Apply battery voltage to the terminals and check the operation of the mirror face, as shown in the table and illustration.

Standard

Measurement Condition	Mirror Operation
Battery positive (+) - 3 (MV) Battery negative (-) - 1 (M+)	Turns upward (A)
Battery positive (+) - 1 (M+) Battery negative (-) - 3 (MV)	Turns downward (B)
Battery positive (+) - 2 (MH) Battery negative (-) - 1 (M+)	Turns left (C)
Battery positive (+) - 1 (M+) Battery negative (-) - 2 (MH)	Turns right (D)

If the result is not as specified, replace the outer rear view mirror.

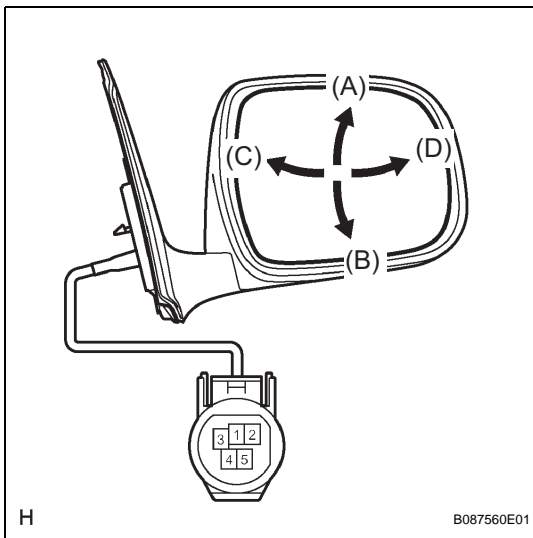


2. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY RH

- (a) Check the operation.
- (1) Apply battery voltage to the terminals and check the operation of the mirror face, as shown in the table and illustration.

Standard

Measurement Condition	Mirror Operation
Battery positive (+) - 3 (MV) Battery negative (-) - 1 (M+)	Turns upward (A)
Battery positive (+) - 1 (M+) Battery negative (-) - 3 (MV)	Turns downward (B)
Battery positive (+) - 2 (MH) Battery negative (-) - 1 (M+)	Turns left (C)
Battery positive (+) - 1 (M+) Battery negative (-) - 2 (MH)	Turns right (D)


If the result is not as specified, replace the outer rear view mirror.

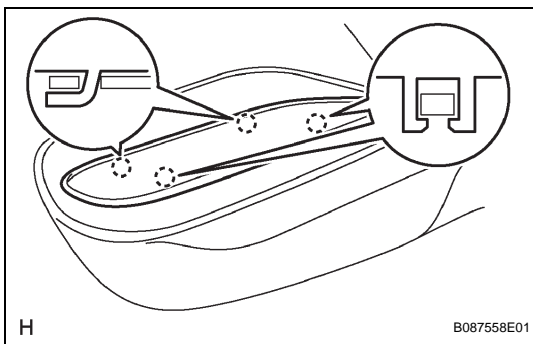

INSTALLATION

1. REMOVE OUTER REAR VIEW MIRROR

- (a) Engage the 2 claws into the outer rear view mirror.
- (b) Engage the 2 claws and install the outer rear view mirror.

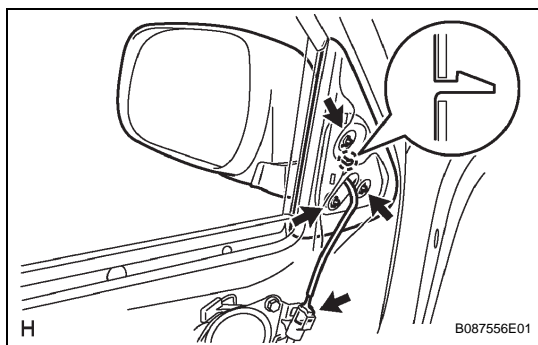

2. **REMOVE OUTER REAR VIEW MIRROR ASSEMBLY**
 - (a) Engage the claw and install the outer rear view mirror.
 - (b) Tighten the 3 nuts.
Torque: 8.0 N*m (80 kgf*cm, 71 in.*lbf)
 - (c) Connect the outer rear view mirror connector (w/ Power Mirror).
3. **REMOVE FRONT DOOR TRIM PANEL ASSEMBLY (w/ Power Window) (See page [ED-29](#))**
4. **REMOVE FRONT DOOR TRIM PANEL ASSEMBLY (w/o Power Window) (See page [ED-48](#))**
5. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (for Double Cab) (See page [ED-30](#))**
6. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (for Access Cab) (See page [ED-30](#))**
7. **REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY (See page [ED-49](#))**
8. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH (w/ Power Window) (See page [ED-30](#))**
9. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH (w/o Power Window) (See page [ED-49](#))**
10. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)