

## DISASSEMBLY


### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

### 2. REMOVE REAR DOOR FRAME GARNISH LH

- (a) Disengage the 4 clips and remove the rear door frame garnish LH.


**NOTICE:**

Confirm that no clips remain on the door panel when the garnish is removed. Transfer any remaining clips to the garnish side before installing.

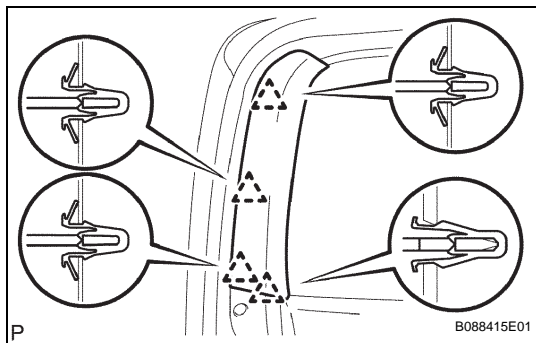


### 3. REMOVE REAR POWER WINDOW REGULATOR SWITCH ASSEMBLY

- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 2 claws, then pull out the rear power window regulator switch assembly by pulling it toward the front of the vehicle.
- (b) Disconnect the connector, then remove the rear power window regulator switch assembly.

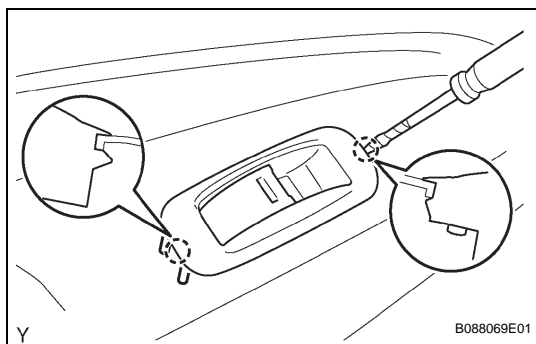



### 4. REMOVE REAR DOOR TRIM PANEL ASSEMBLY LH

- (a) Remove the screw, then remove the door assist grip assembly LH.

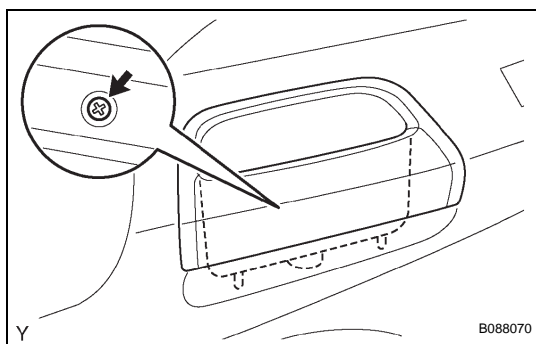


- (b) Disengage the 9 clips.
- (c) Remove the rear door trim panel assembly by sliding it upward.

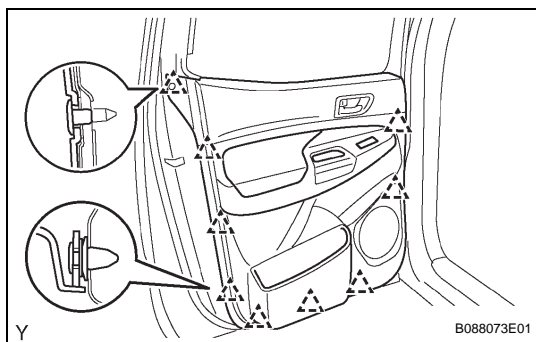

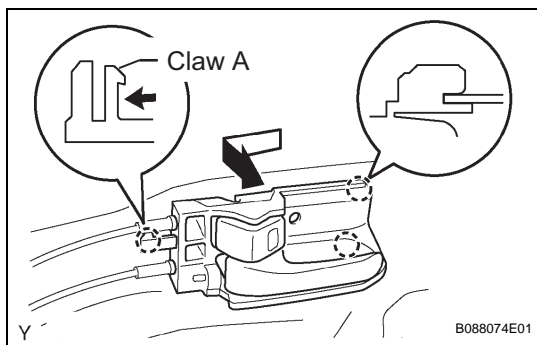

## 5. REMOVE REAR DOOR INSIDE HANDLE SUB-ASSEMBLY LH


- Using a screwdriver with its tip wrapped in protective tape, disengage claw A as shown in the illustration.
- Move the rear door inside handle sub-assembly LH in the direction indicated by the arrow mark in the illustration. This will release the claw and allow the removal of the rear door inside handle sub-assembly LH.
- Disconnect the 2 cables from the rear door inside handle sub-assembly LH.

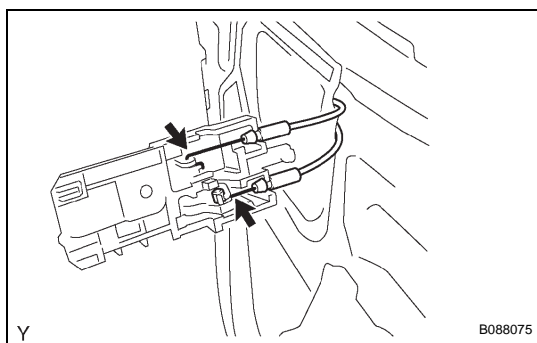

## 6. REMOVE REAR SPEAKER ASSEMBLY


HINT:

- Access cab (See page [AV-88](#))
- Double cab (See page [AV-86](#))

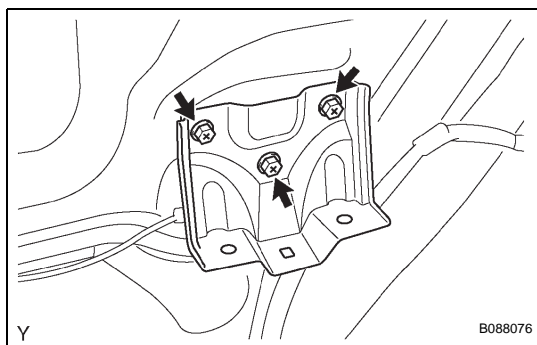

## 7. REMOVE NO. 2 REAR DOOR TRIM BRACKET

- Remove the 3 screws and No. 2 rear door trim bracket.

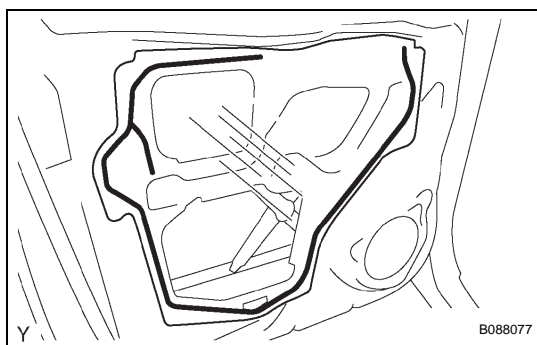


## 8. REMOVE REAR DOOR SERVICE HOLE COVER LH

- Remove the rear door service hole cover LH.

**NOTICE:**

Remove the remaining tape on the door side.

## 9. REMOVE REAR DOOR BELT MOULDING LH (See page [ET-35](#))

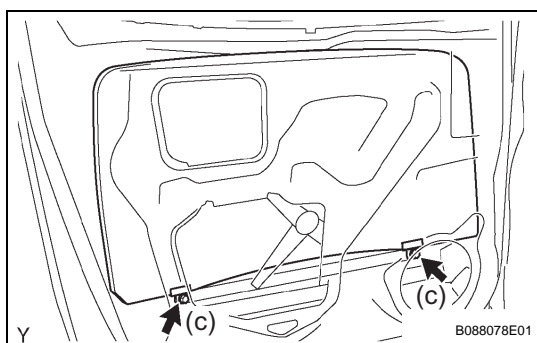

## 10. REMOVE REAR DOOR GLASS SUB-ASSEMBLY LH

HINT:

Insert a shop rag inside the door panel to prevent the glass from being scratched.

- Connect the power window regulator switch.
- Move the rear door glass sub-assembly LH until the 2 bolts appear in the service holes.


- (c) Remove the 2 bolts and rear door glass sub-assembly LH.

**NOTICE:**

- **Be careful when removing the 2 bolts as the glass may fall and be damaged.**
  - **Be careful not to damage the glass.**
- (d) Disconnect the power window regulator switch.


**11. REMOVE REAR DOOR GLASS RUN LH**

- (a) Remove the rear door glass run LH.

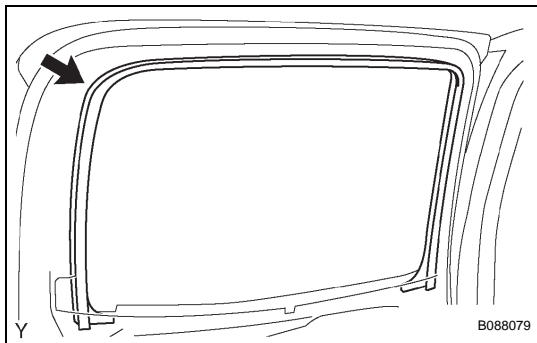


**12. REMOVE REAR DOOR REAR LOWER WINDOW FRAME SUB-ASSEMBLY LH**

- (a) Remove the hole plug.

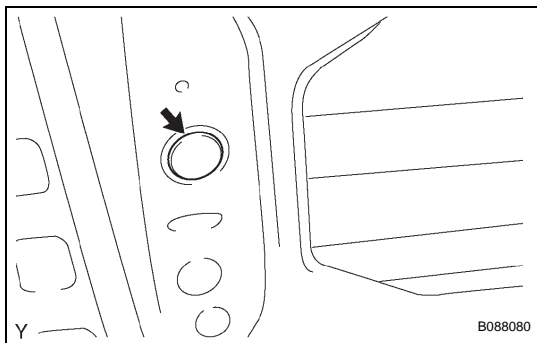



- (b) Remove the 2 bolts and rear door rear lower window frame sub-assembly LH.

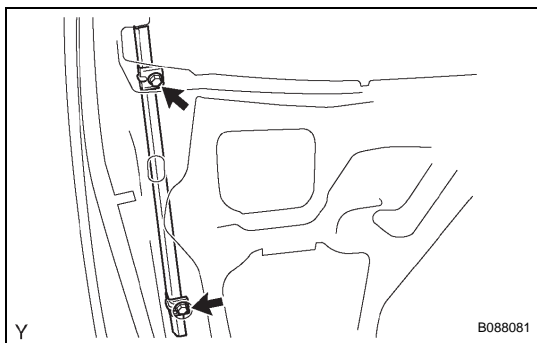

**13. REMOVE REAR DOOR FRONT WINDOW GUIDE SUB-ASSEMBLY LH**

- (a) Remove the bolt and rear door front window guide sub-assembly LH.

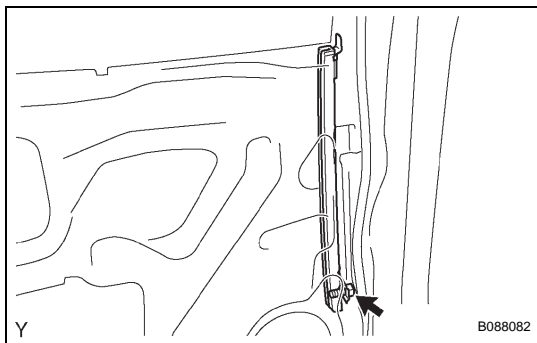

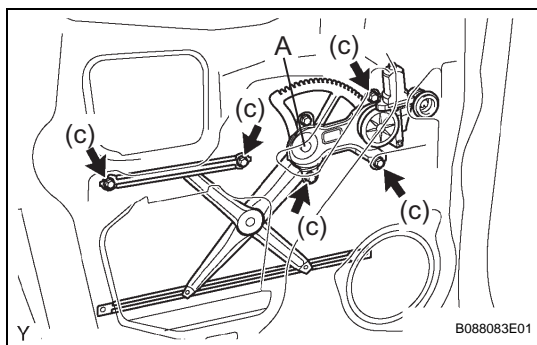

#### 14. REMOVE REAR DOOR WINDOW REGULATOR SUB-ASSEMBLY LH


- (a) Disconnect the connector.
- (b) Loosen bolt A.
- (c) Remove the 5 bolts, then remove the rear door window regulator sub-assembly LH.

##### NOTICE:

**Be careful when removing the bolts as the window regulator may fall and be damaged.**

##### HINT:


Remove the window regulator through the service hole.

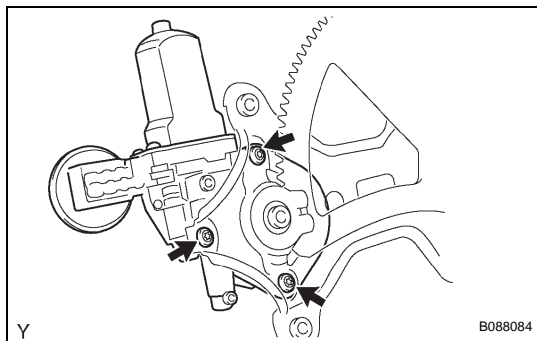

#### 15. REMOVE POWER WINDOW REGULATOR MOTOR ASSEMBLY LH

- (a) Using a torx socket wrench T25 , remove the 3 screws and power window regulator motor assembly LH.

ED

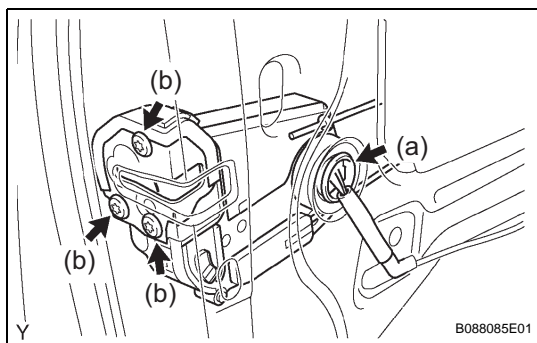

#### 16. REMOVE REAR DOOR LOCK ASSEMBLY LH


- (a) Disconnect the connector.
- (b) Using a torx socket wrench T30 , remove the 3 screws, then remove the rear door lock assembly LH.

##### NOTICE:

**Be careful when removing the 3 screws as the door lock may fall and be damaged.**


##### HINT:

Remove the door lock through the service hole.

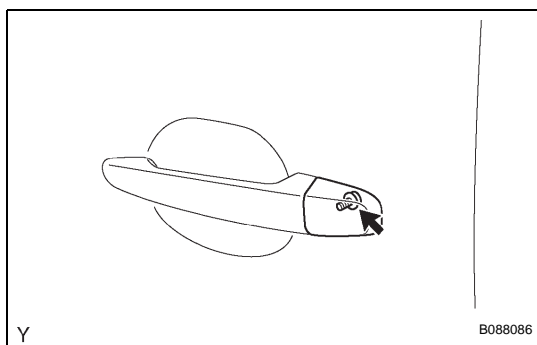

#### 17. REMOVE REAR DOOR OUTSIDE HANDLE COVER LH

- (a) Using a torx socket wrench T30 , loosen the screw and remove the rear door outside handle cover.

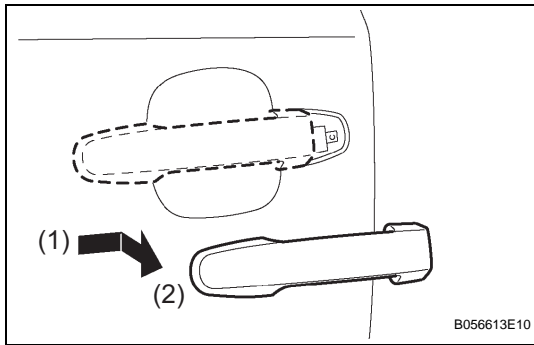


## 18. REMOVE REAR DOOR OUTSIDE HANDLE ASSEMBLY RH

- (a) Remove the outside handle by sliding and pulling it in the direction indicated by the arrow mark in the illustration.


### NOTICE:

If the release plate is not pulled and held when removing the outside handle, the release plate will interfere with the outside handle. This will damage the release plate.

- (b) Disengage the 3 claws and remove the outside handle front pad.

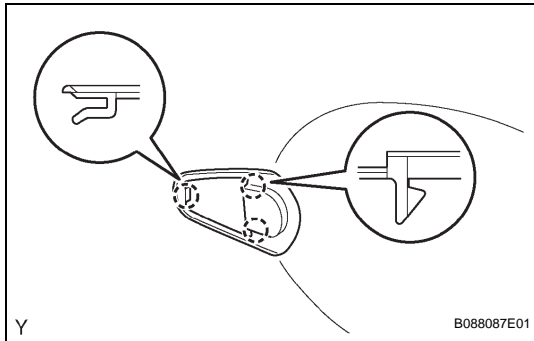

- (c) Disengage the 2 claws and remove the outside handle rear pad.

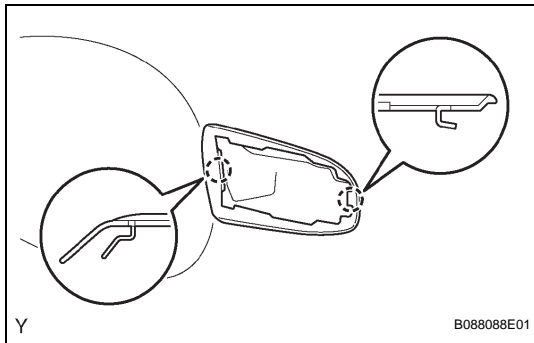



## 19. REMOVE REAR DOOR OUTSIDE HANDLE FRAME SUB-ASSEMBLY LH

- (a) Using a torx socket wrench T30 , loosen the screw.  
(b) Slide the rear door outside handle frame sub-assembly LH to remove it.


### HINT:

Remove the rear door outside handle frame sub-assembly LH through the service hole.

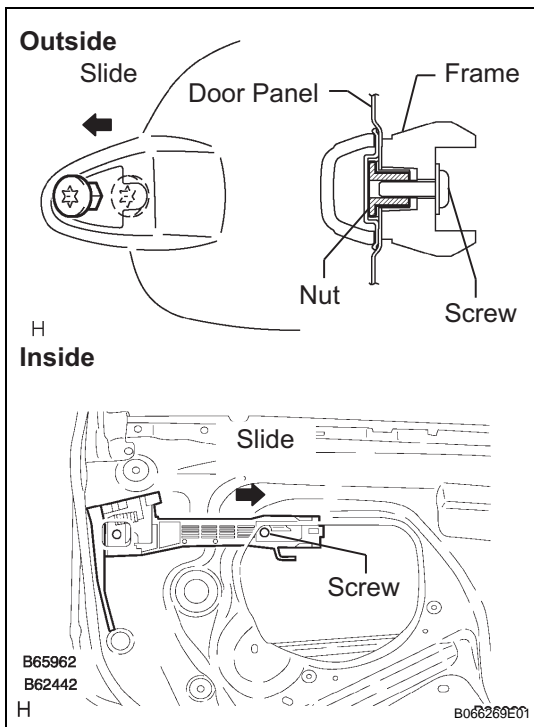


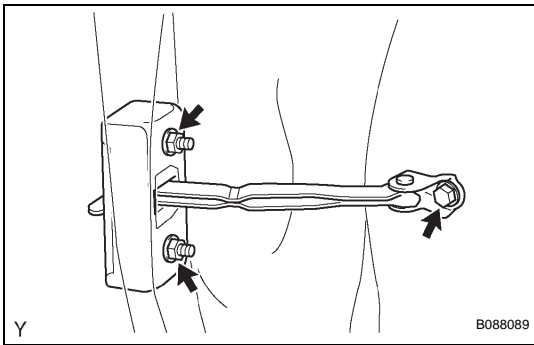**20. REMOVE REAR DOOR CHECK ASSEMBLY LH**

- (a) Remove the bolt and 2 nuts, then remove the rear door check assembly LH.

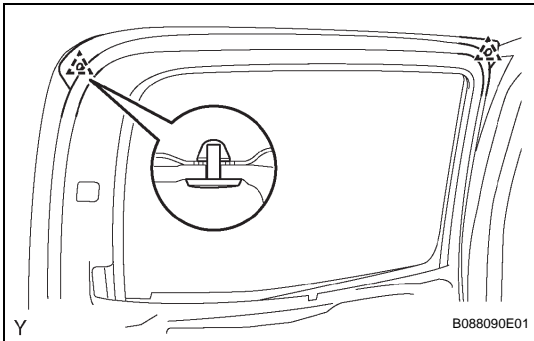**21. REMOVE REAR DOOR WEATHERSTRIP LH**

- (a) Disengage the 2 clips.

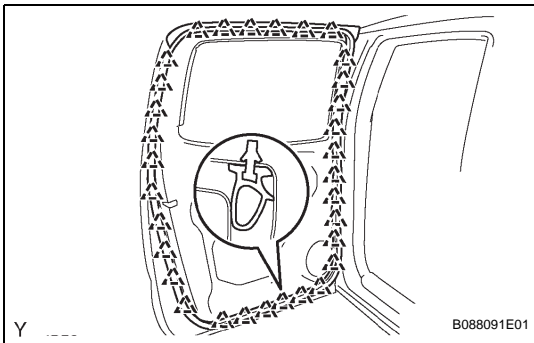

- (b) Using a clip remover, disengage the 32 clips, then remove the rear door weatherstrip LH.

**NOTICE:**

**Remove the remaining tape on the door side.**