

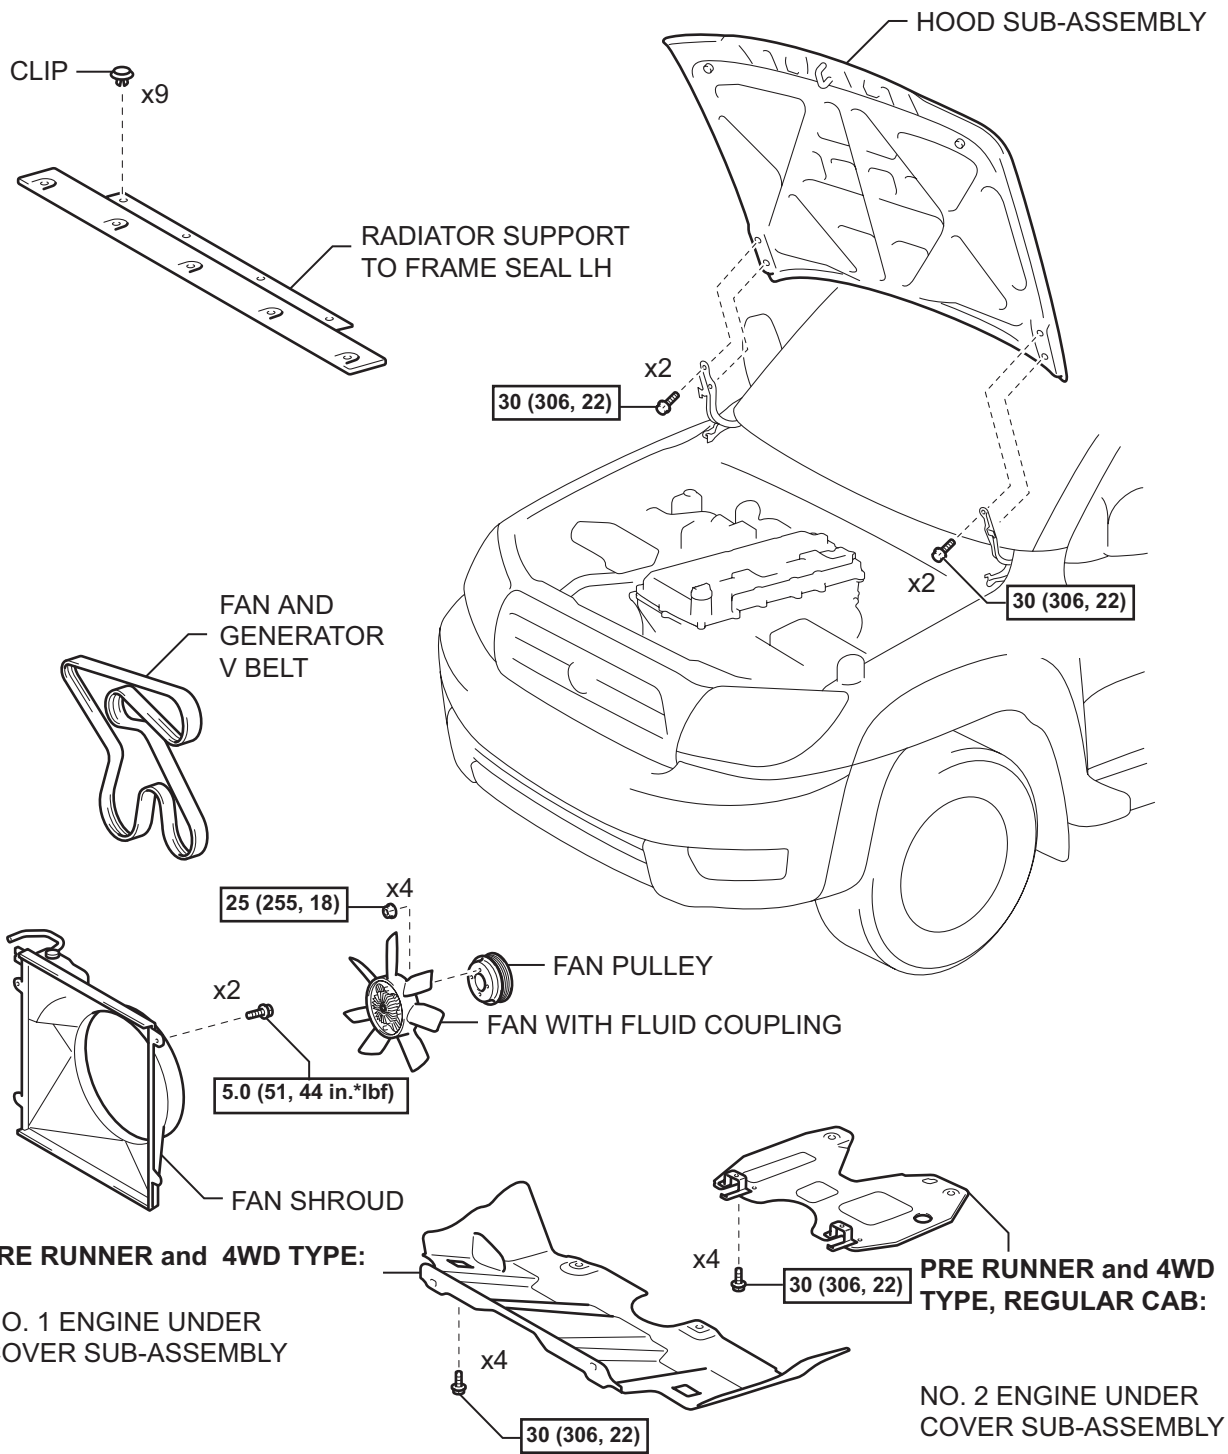


CYLINDER HEAD

COMPONENTS

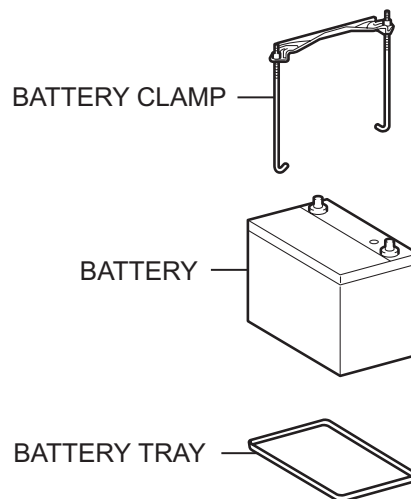



N*m (kgf*cm, ft*lbf) : Specified torque

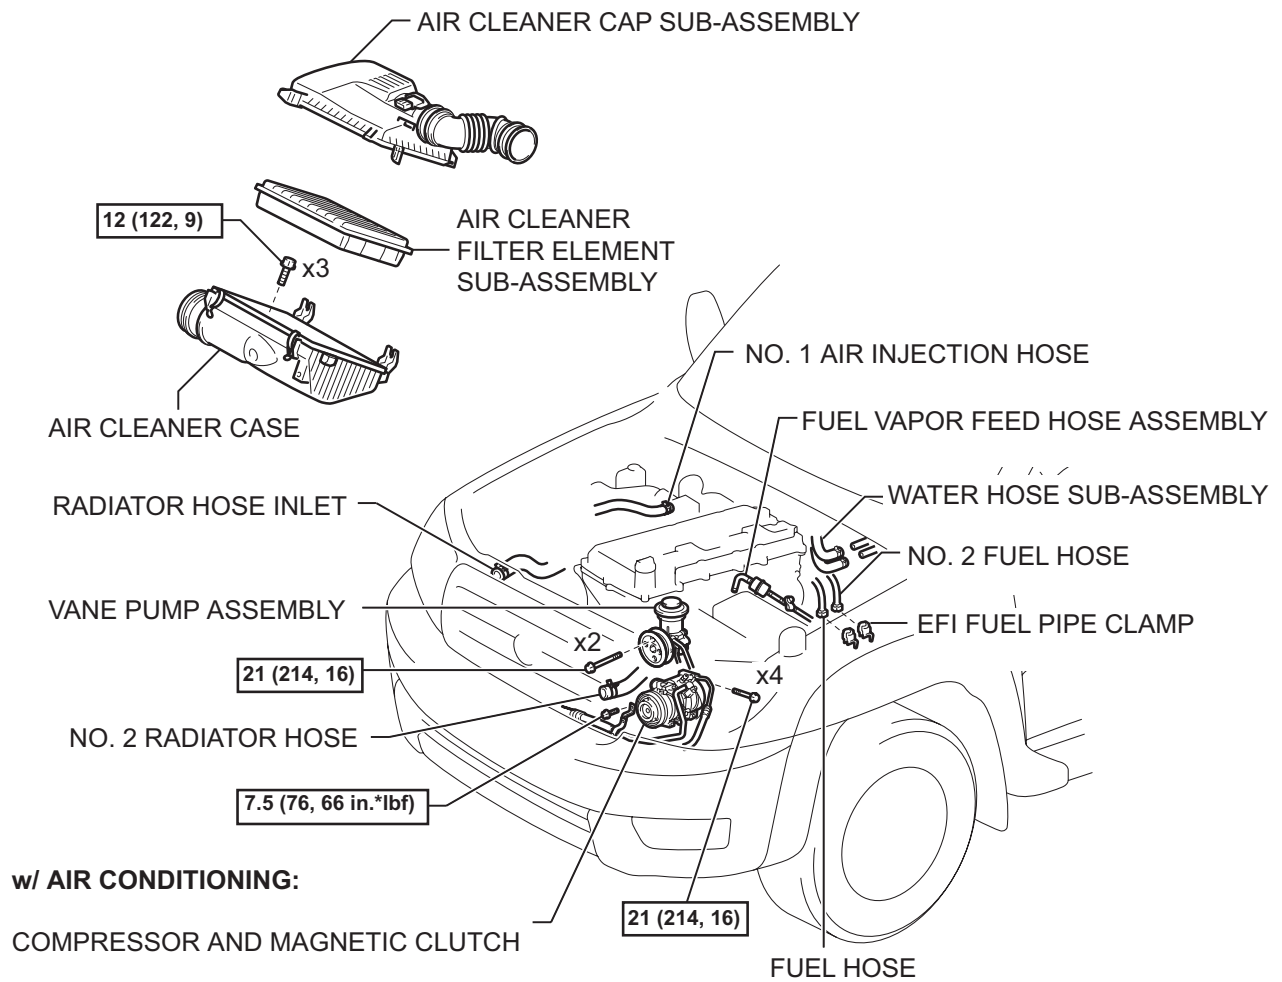

N*m (kgf*cm, ft*lbf) : Specified torque



EM

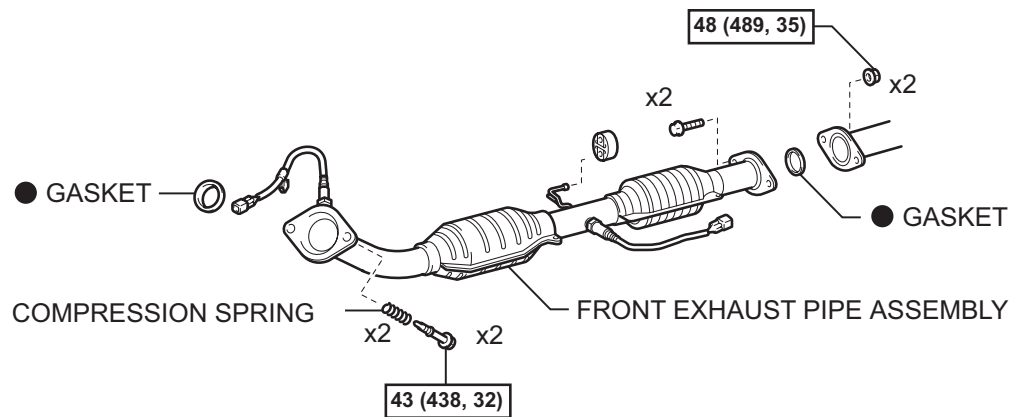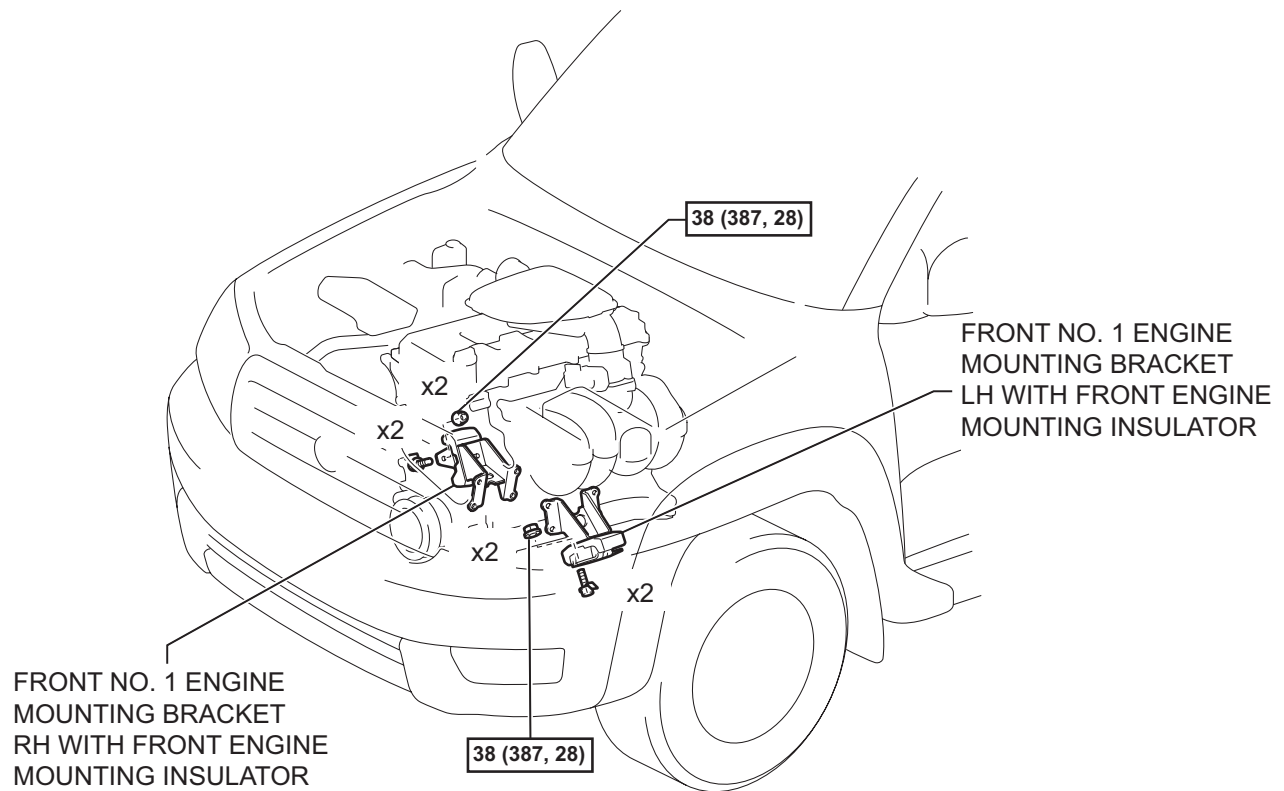

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part



MANUAL TRANSMISSION, 2WD:**REGULAR CAB:****PROPELLER SHAFT ASSEMBLY****FLOOR SHIFT SHIFT LEVER ASSEMBLY**

CLIP


SHIFT LEVER BOOT ASSEMBLY**MANIFOLD STAY**

44 (449, 33)

72 (730, 53)

30 (306, 22)

37 (379, 27)

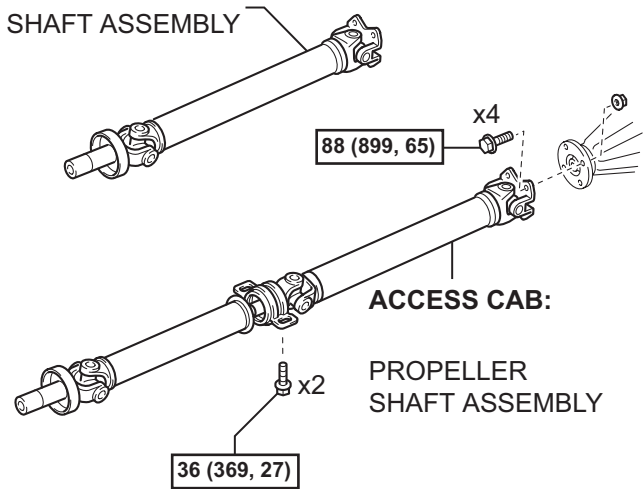STARTER ASSEMBLY**MANUAL TRANSMISSION UNIT ASSEMBLY****CLUTCH RELEASE CYLINDER ASSEMBLY****ACCESS CAB:****PROPELLER SHAFT ASSEMBLY**

37 (377, 27)

12 (122, 9)

40 (408, 30)

NO. 1 ENGINE MOUNT INSULATOR REAR

65 (663, 48)

NO. 3 FRAME CROSSMEMBER SUB-ASSEMBLY

19 (189, 14)

40 (408, 30)

N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

Y

A113649E01

EM

MANUAL TRANSMISSION, 4WD:

REGULAR CAB:

PROPELLER SHAFT ASSEMBLY

FLOOR SHIFT SHIFT LEVER ASSEMBLY

SHIFT LEVER BOOT ASSEMBLY

CLIP

MANIFOLD STAY

ACCESS CAB:

PROPELLER SHAFT ASSEMBLY

TRANSFER ASSEMBLY

STARTER ASSEMBLY

MANUAL TRANSMISSION UNIT ASSEMBLY

CLUTCH RELEASE CYLINDER ASSEMBLY

PROPELLER SHAFT ASSEMBLY FRONT


NO. 1 ENGINE MOUNT INSULATOR REAR

NO. 3 FRAME CROSSMEMBER SUB-ASSEMBLY

N*m (kgf*cm, ft*lb) : Specified torque


● Non-reusable part

MANUAL TRANSMISSION:

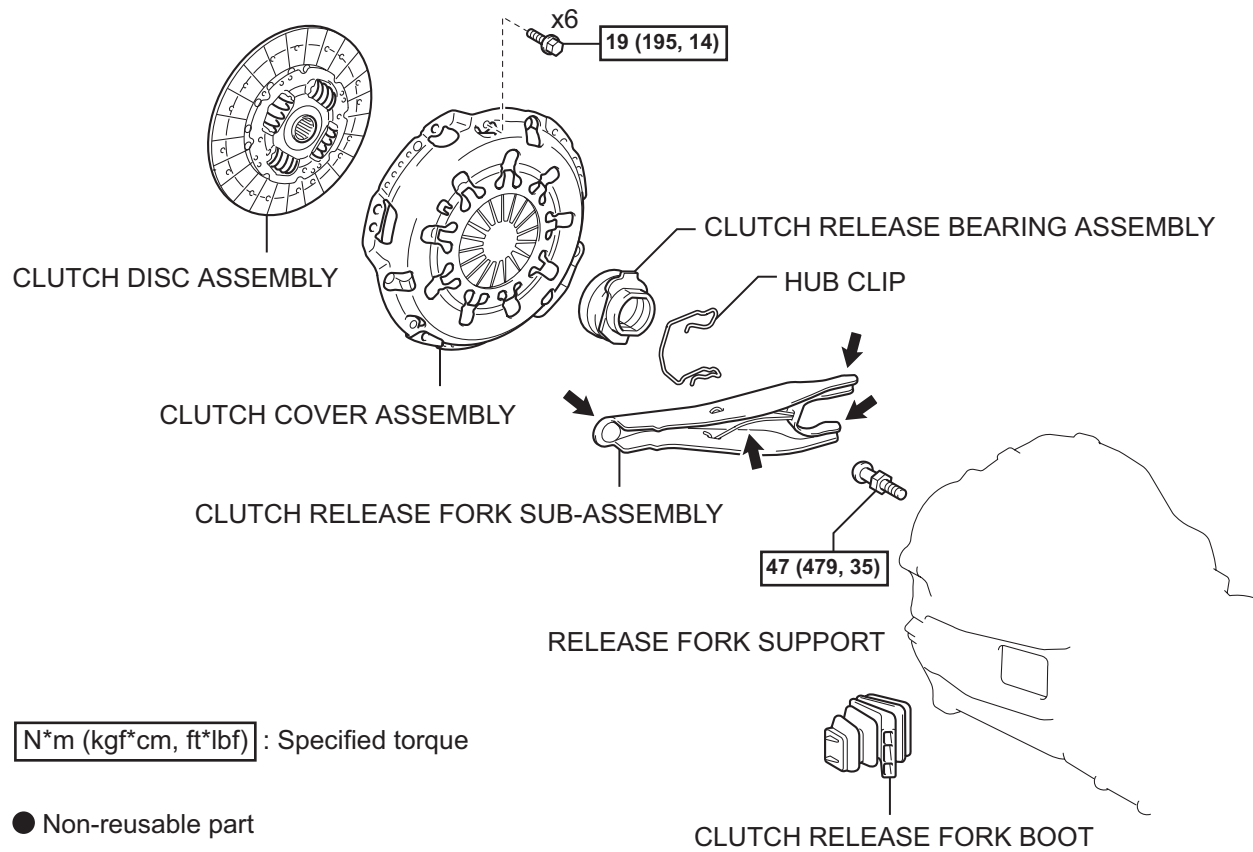


EM

AUTOMATIC TRANSMISSION:

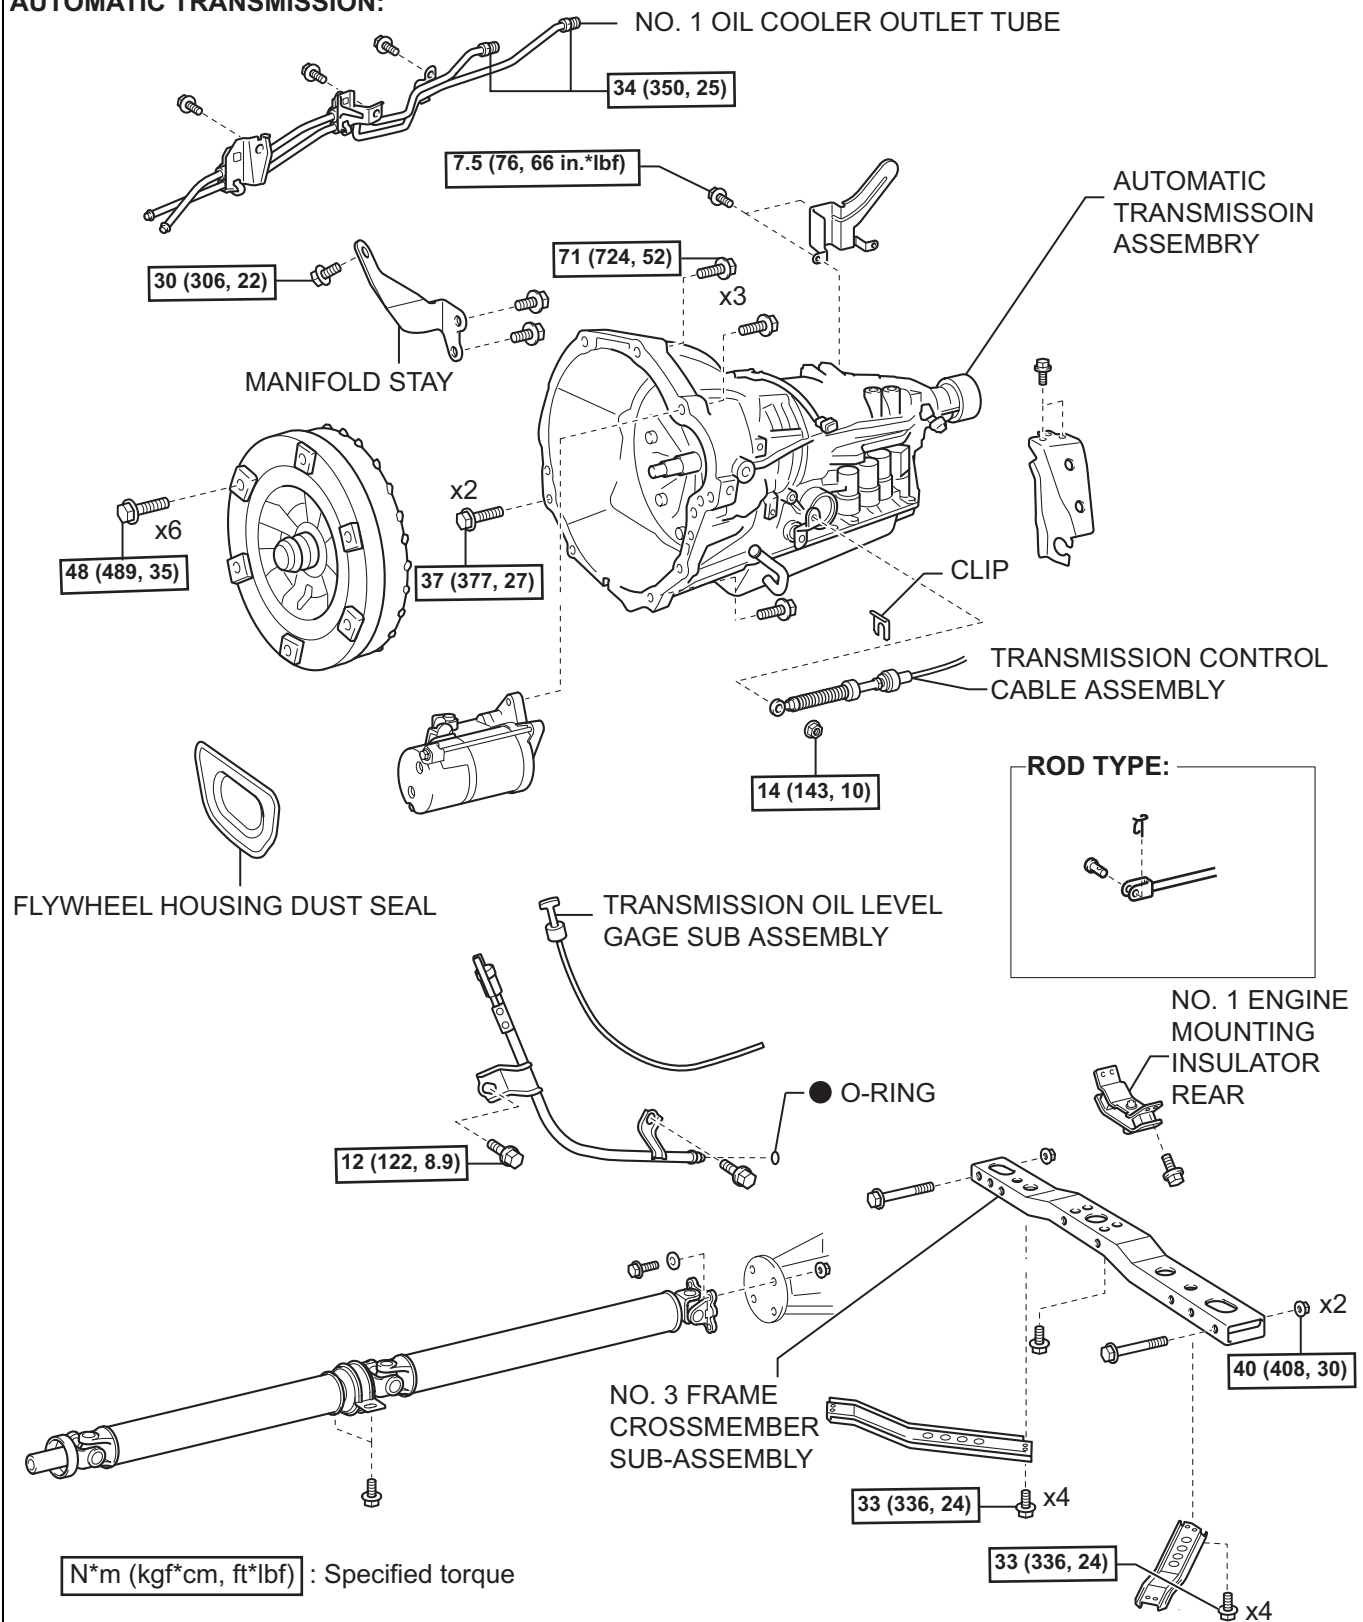



AUTOMATIC TRANSMISSION:

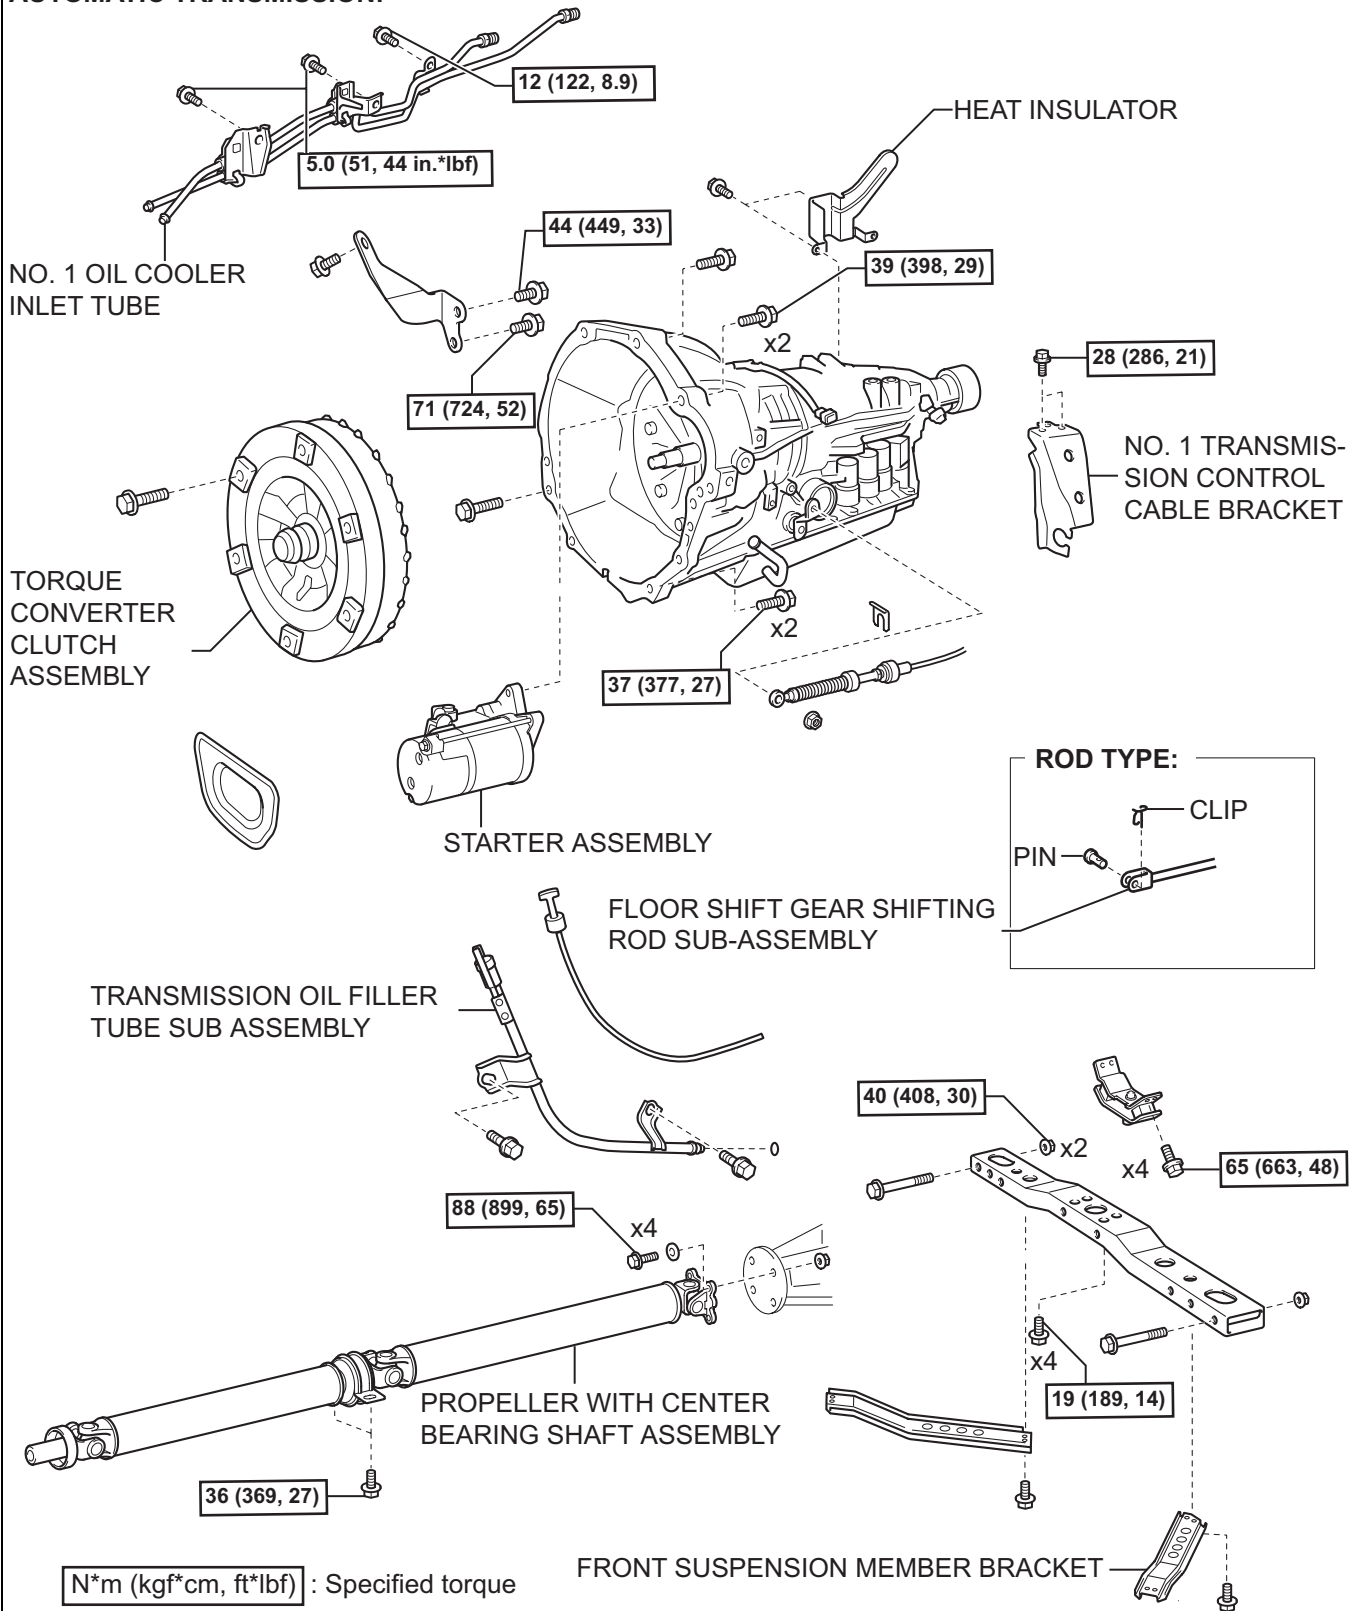


EM


EM

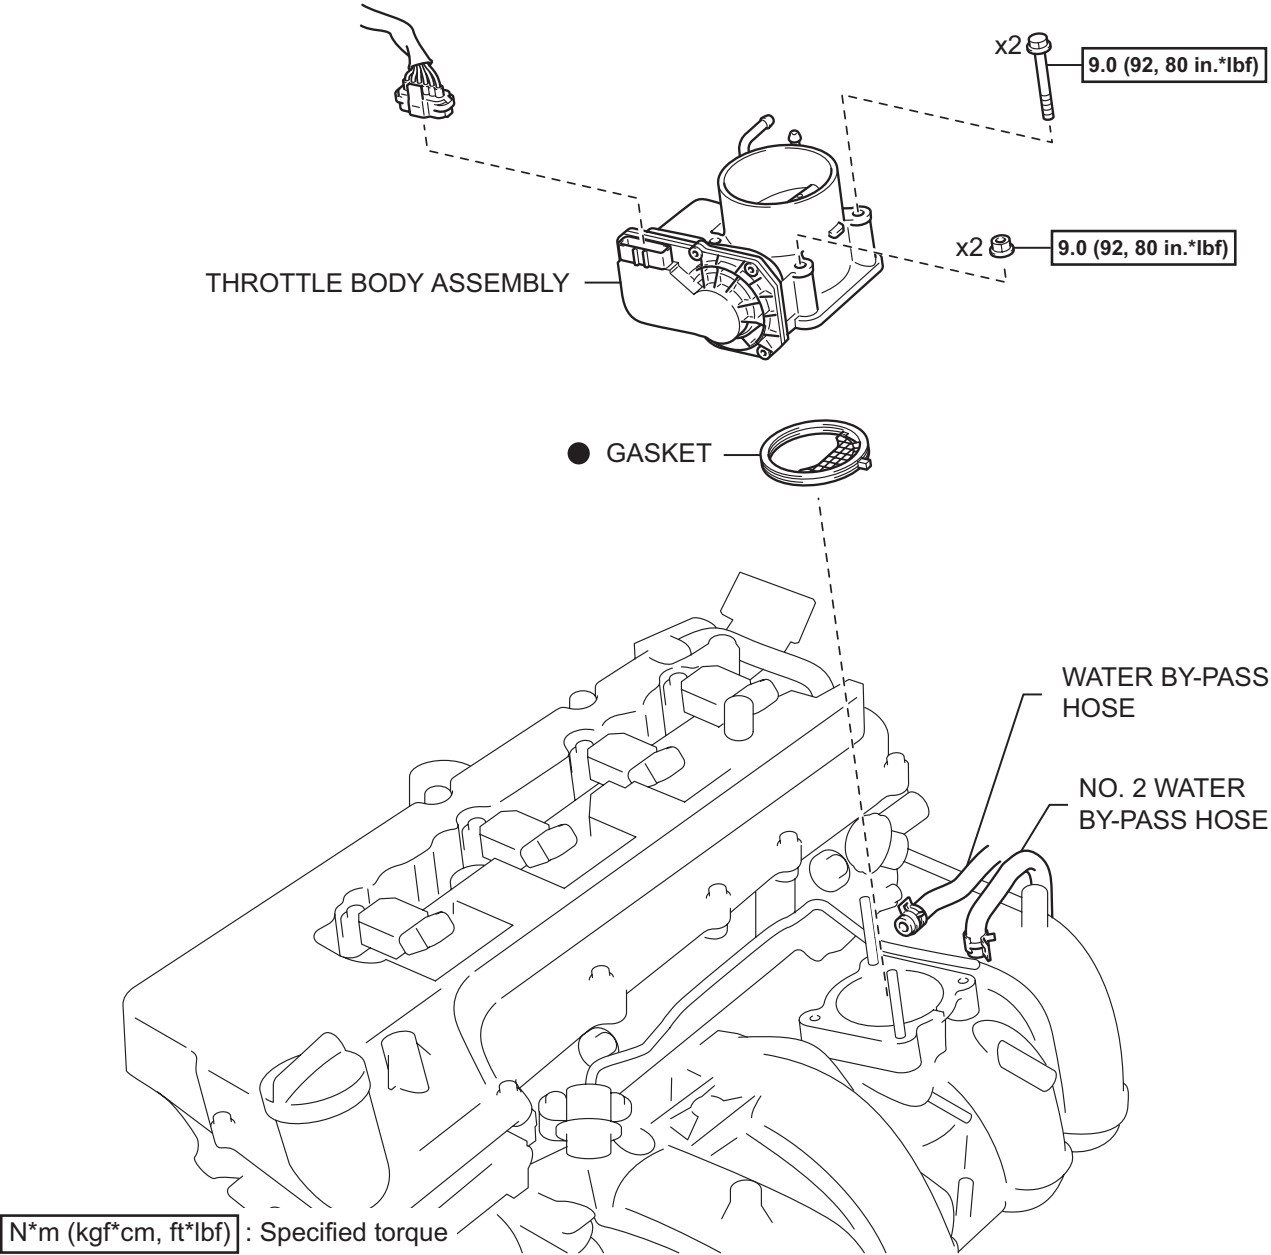

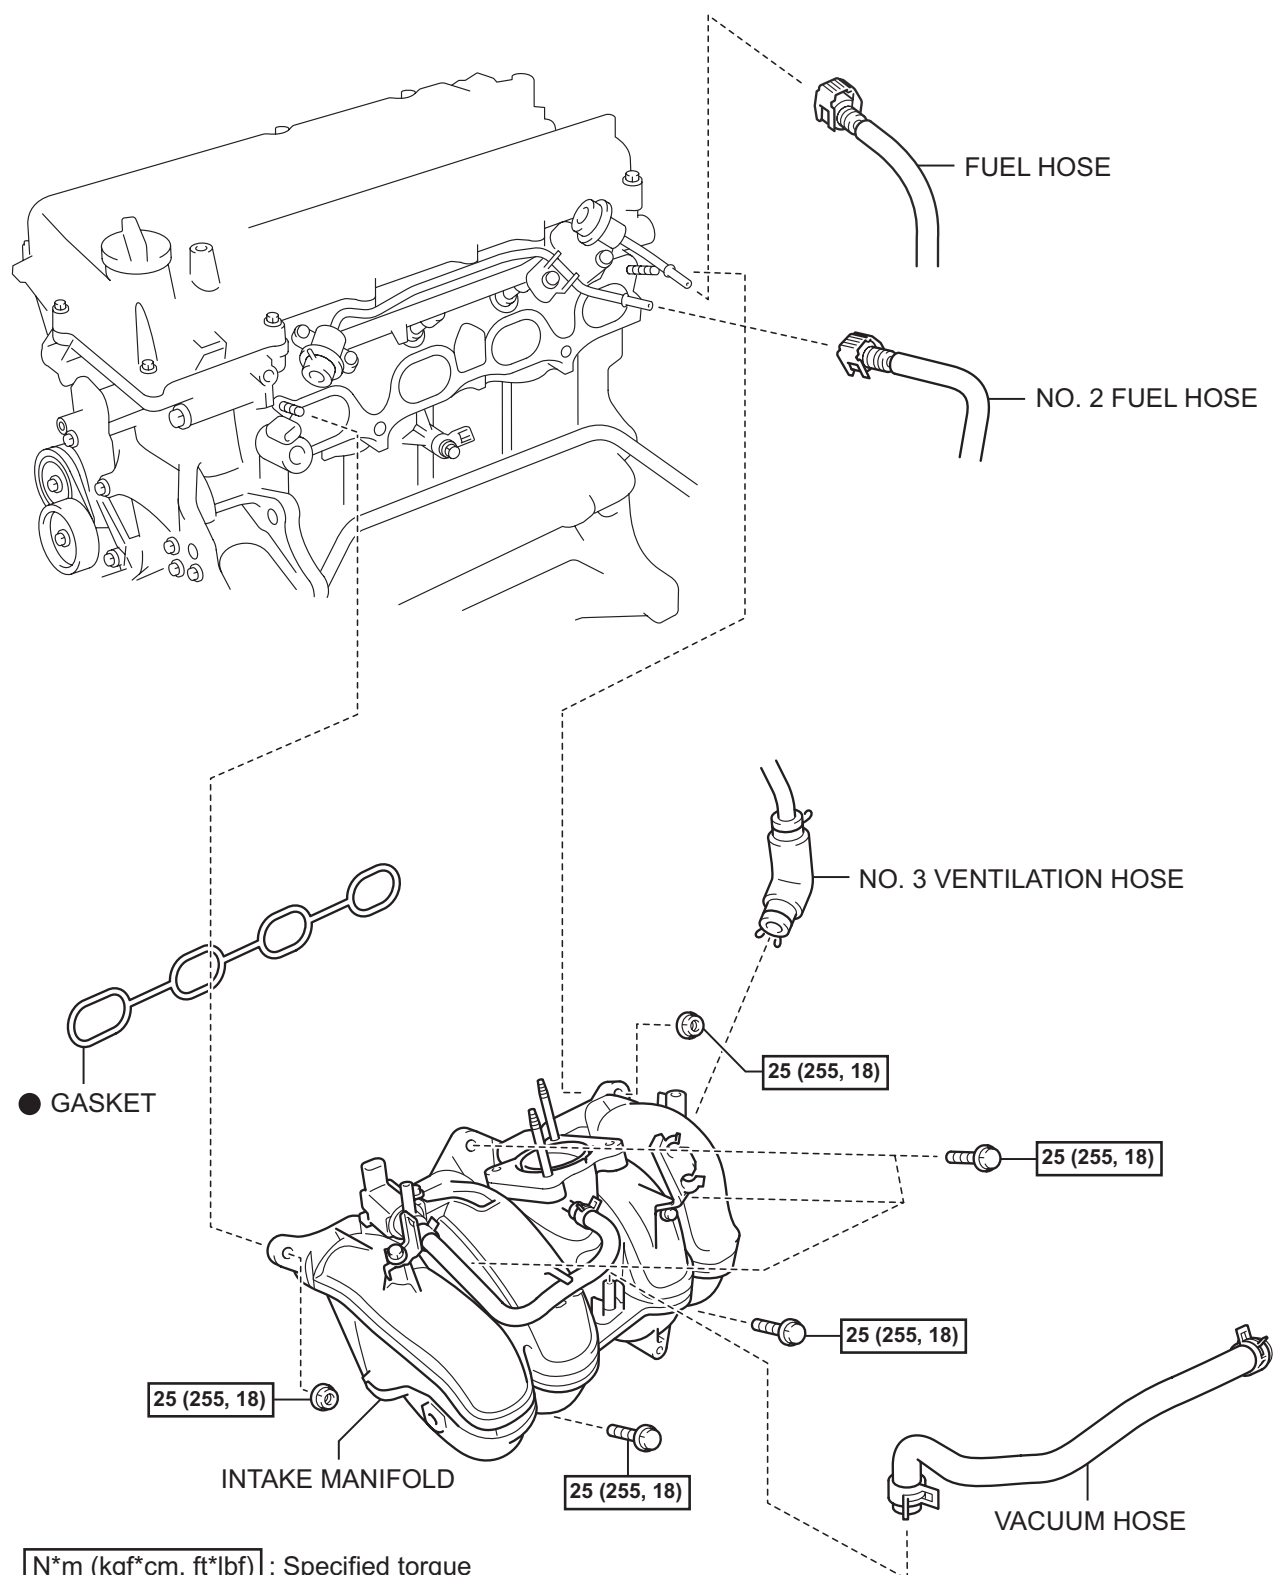



EM

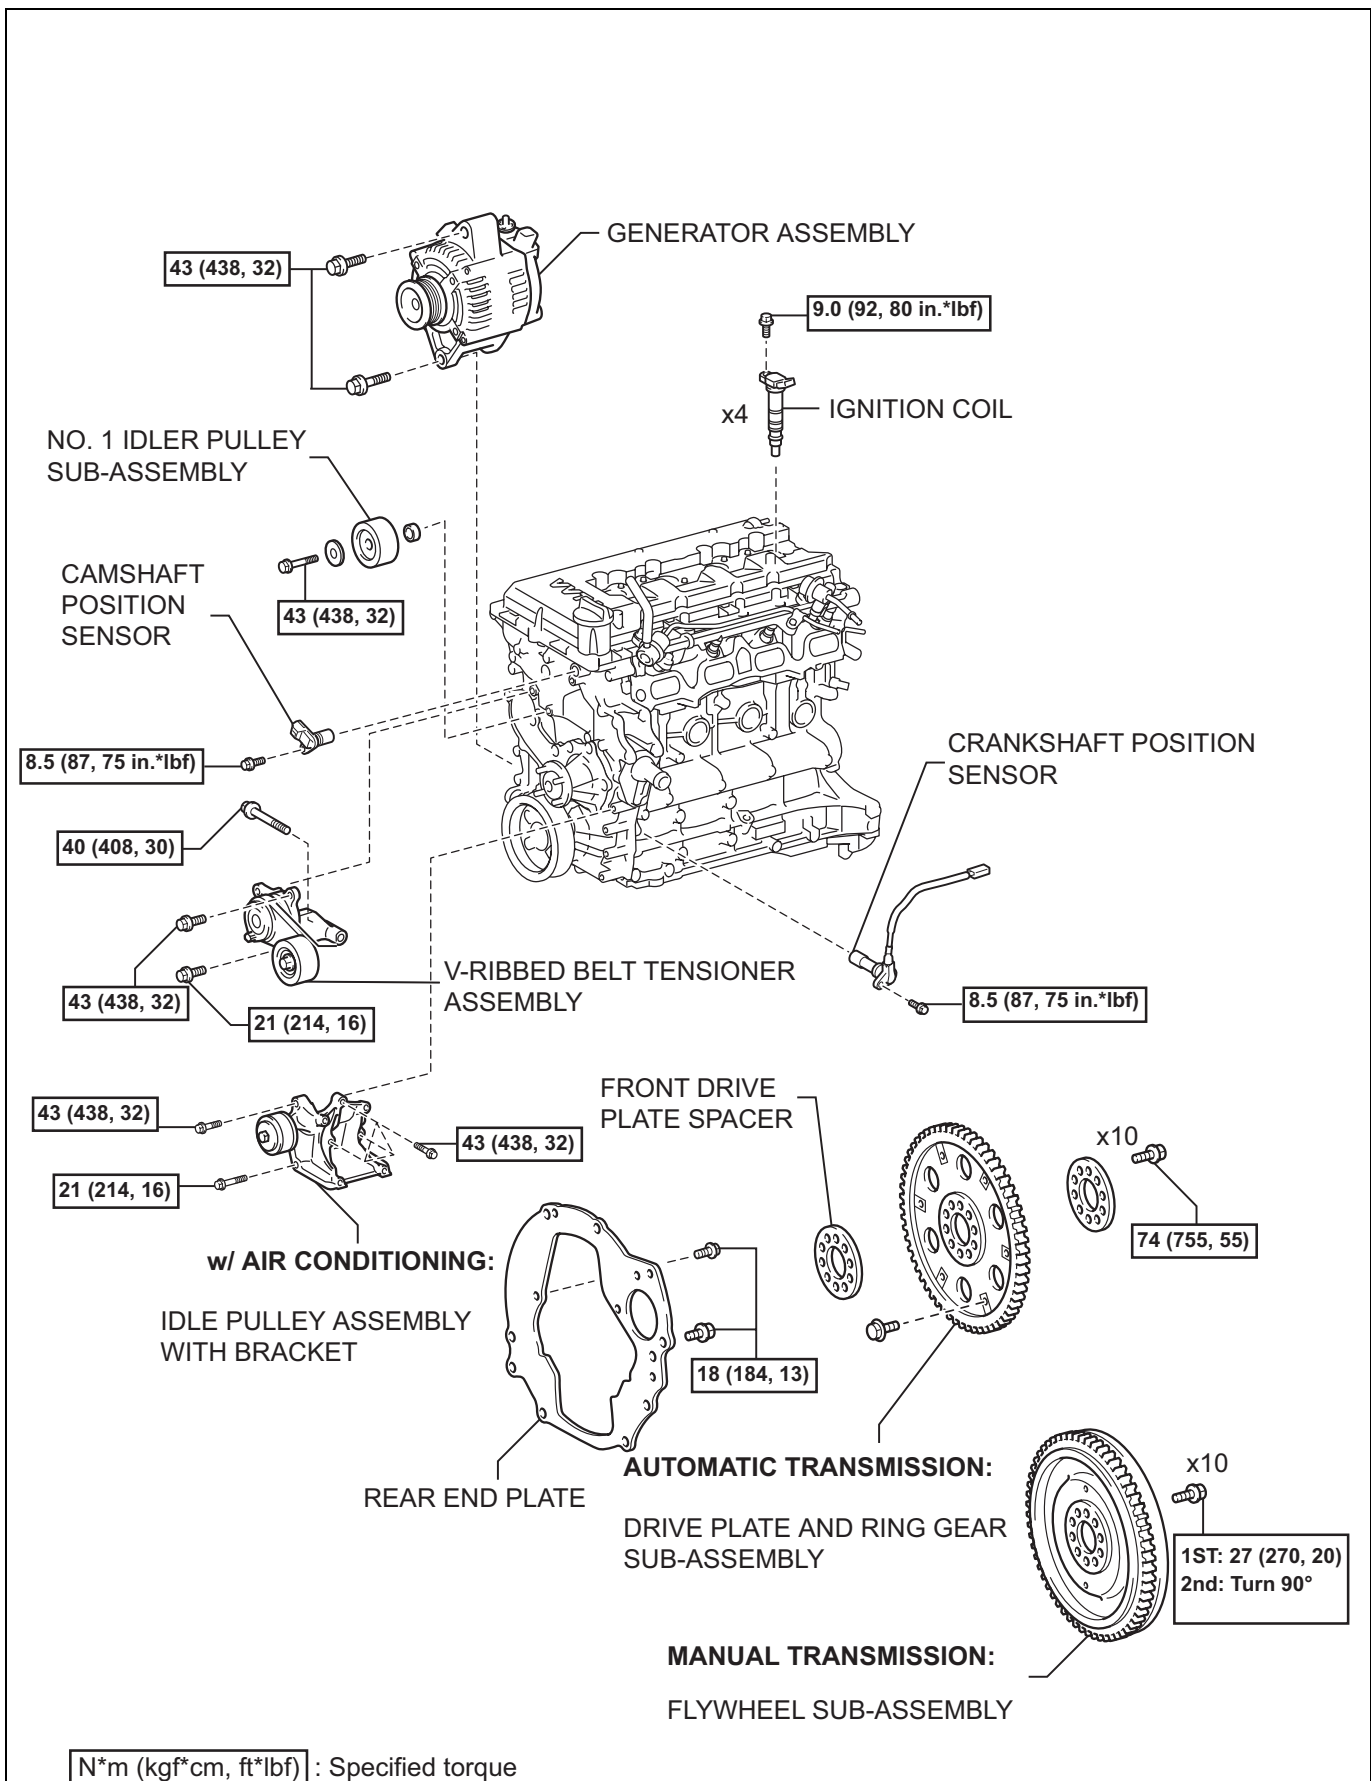

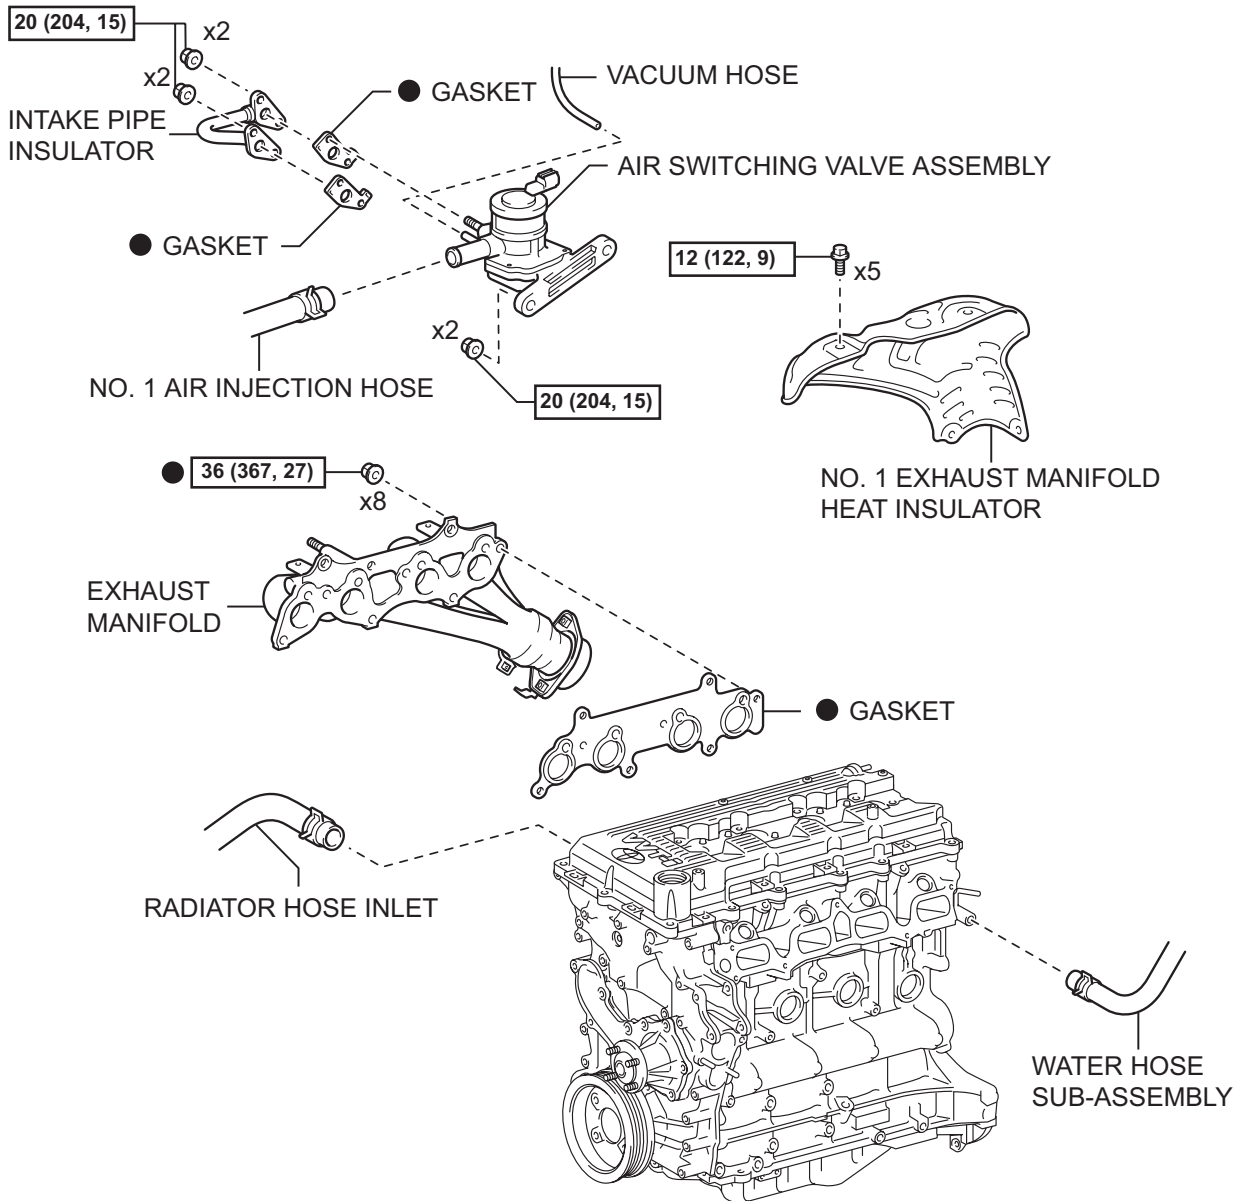

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

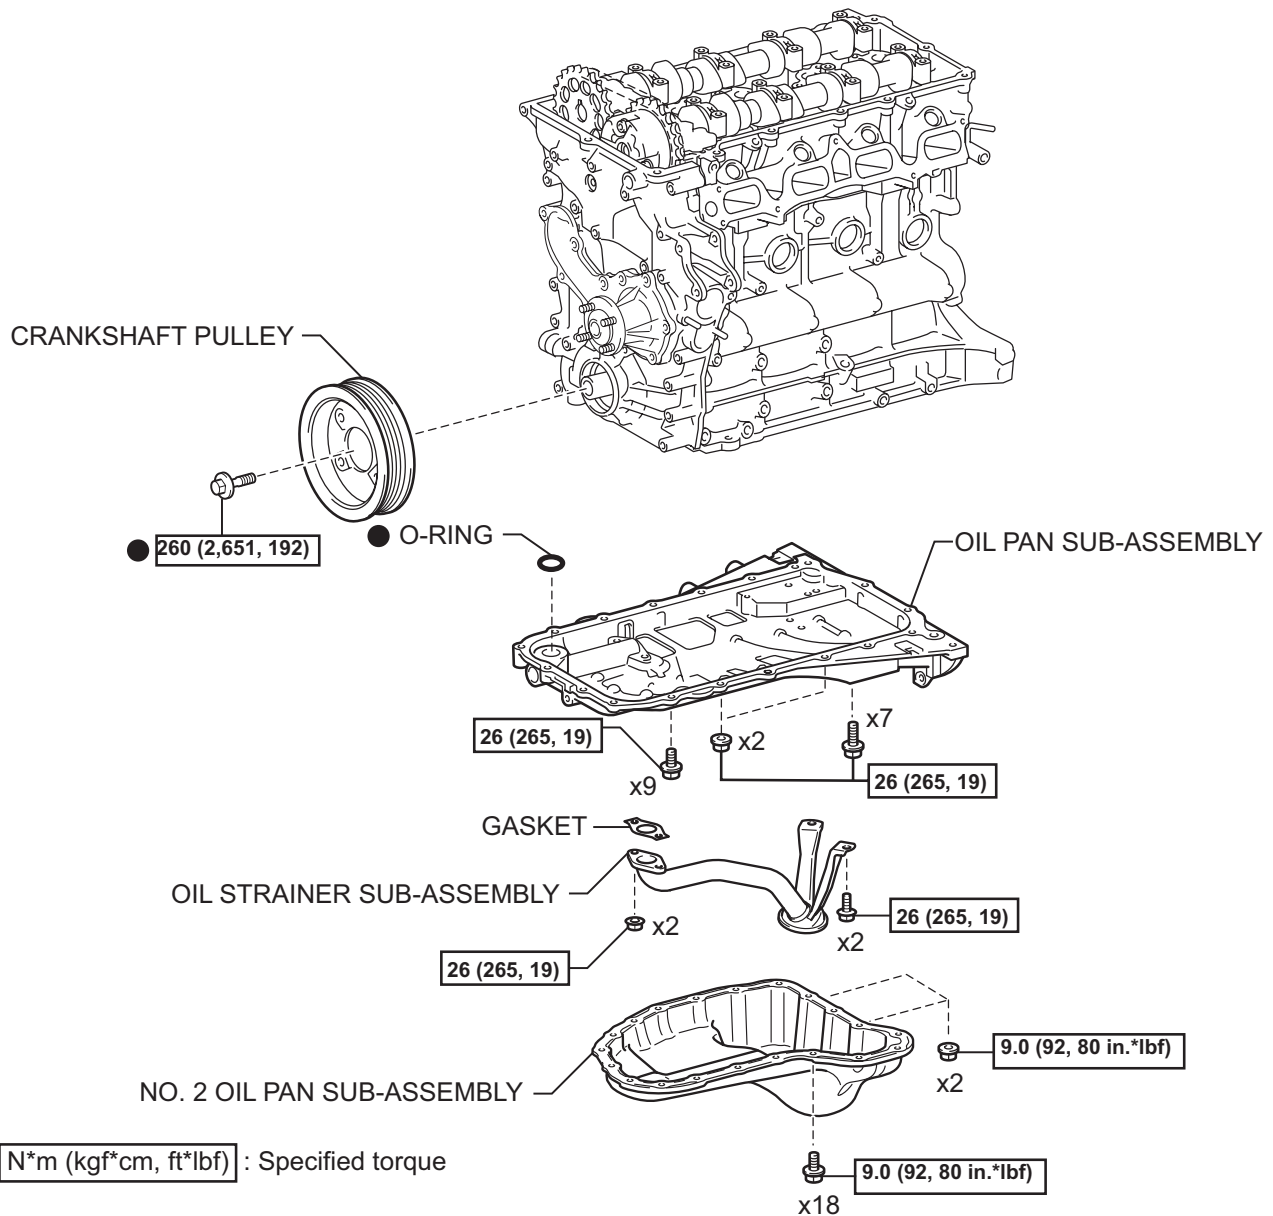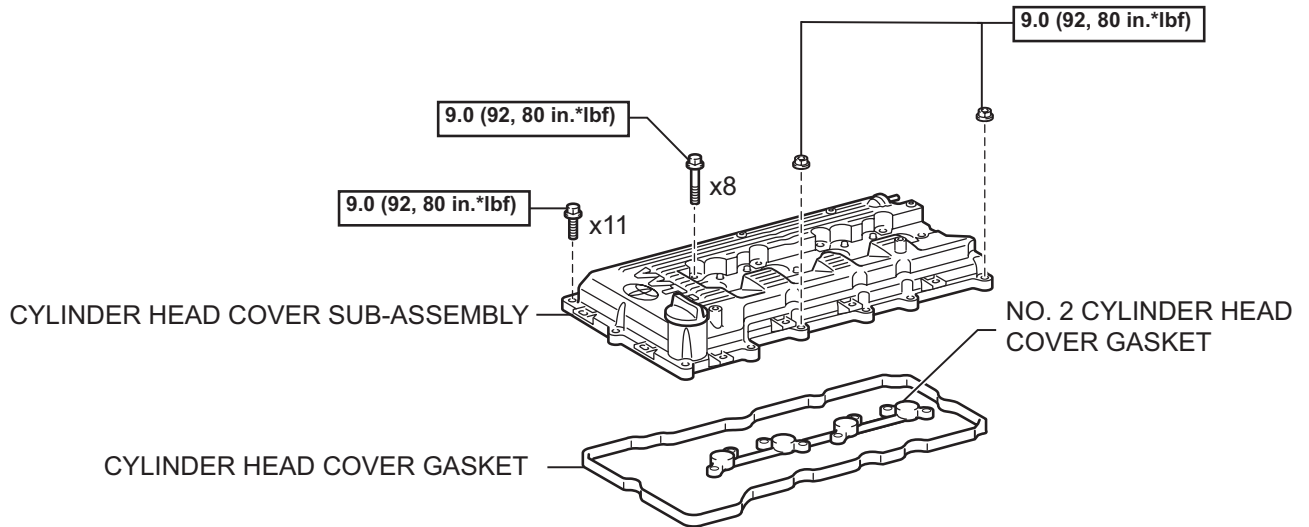

N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part



- Non-reusable part

