
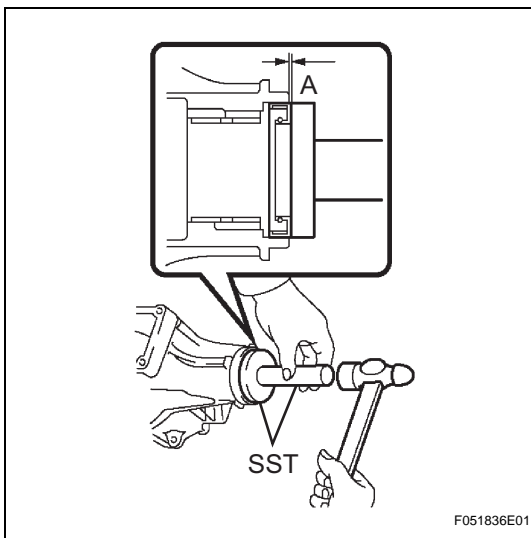


MANUAL TRANSMISSION EXTENSION HOUSING OIL SEAL

REMOVAL

1. **REMOVE PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY** (See page [PR-8](#))
2. **REMOVE EXTENSION HOUSING DUST DEFLECTOR**
 - (a) Using a plastic hammer, remove the extension housing dust deflector.
3. **REMOVE MANUAL TRANSMISSION EXTENSION HOUSING OIL SEAL**
 - (a) Using SST, remove the transmission extension housing oil seal.
SST 09308-00010

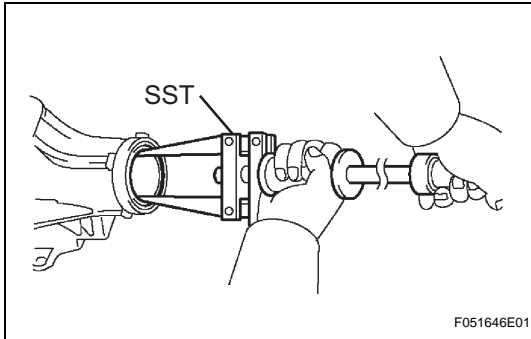

INSTALLATION

1. **INSTALL MANUAL TRANSMISSION EXTENSION HOUSING OIL SEAL**
 - (a) Using SST and hammer, tap a new oil seal into the extension housing in accordance with the dimension specified in the illustration.
SST 09950-60020 (09951-00640), 09950-70010 (09951-07100)
Dimension A:
-0.5 to 0.5 mm (-0.197 to 0.197 in.)
 - (b) Apply gear oil to the lip of the oil seal.
2. **INSTALL EXTENSION HOUSING DUST DEFLECTOR**
 - (a) Using a plastic hammer, install the extension housing dust deflector.
3. **INSTALL PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY** (See page [PR-13](#))
4. **INSPECT MANUAL TRANSMISSION OIL**

MT