
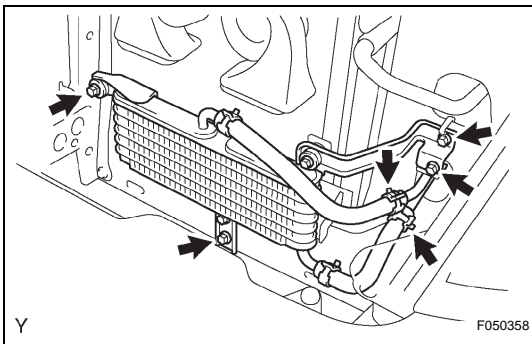


## AIR COOLED OIL COOLER

### REMOVAL

1. REMOVE RADIATOR GRILLE (See page [ET-4](#))
2. DRAIN AUTOMATIC TRANSMISSION FLUID
  - (a) Remove the drain plug, gasket and drain ATF.
  - (b) Install a new gasket and drain plug.  
**Torque: 28 N\*m (285 kgf\*cm, 21 ft.\*lbf)**
3. REMOVE OIL COOLER WITH HOSE ASSEMBLY
  - (a) Loosen the 2 clips and disconnect the 2 oil cooler hoses.
  - (b) Remove the 4 bolts and the oil cooler with hose assembly.

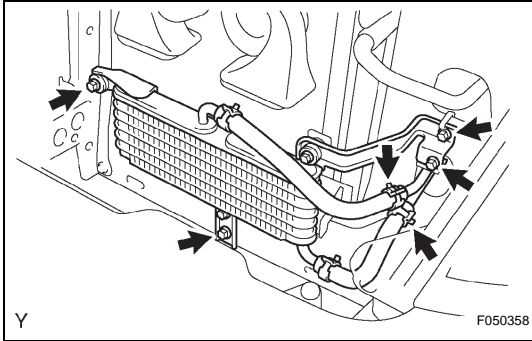

### INSTALLATION

1. INSTALL OIL COOLER WITH HOSE ASSEMBLY
  - (a) Install the oil cooler with hose assembly with the 4 bolts.  
**Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)**
  - (b) Install the 2 oil cooler hoses and 2 clips.
2. ADD AUTOMATIC TRANSMISSION FLUID  
(See page [AT-139](#))
3. INSTALL RADIATOR GRILLE (See page [ET-11](#))