


INSTALLATION

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).


1. INSTALL ROOF WIRE

- (a) w/ EC Mirror:
 - (1) Install the roof wire with 10 new adhesive tapes, as shown in the illustration.
- (b) w/o EC Mirror:
 - (1) Install the roof wire with 8 new tapes, as shown in the illustration.

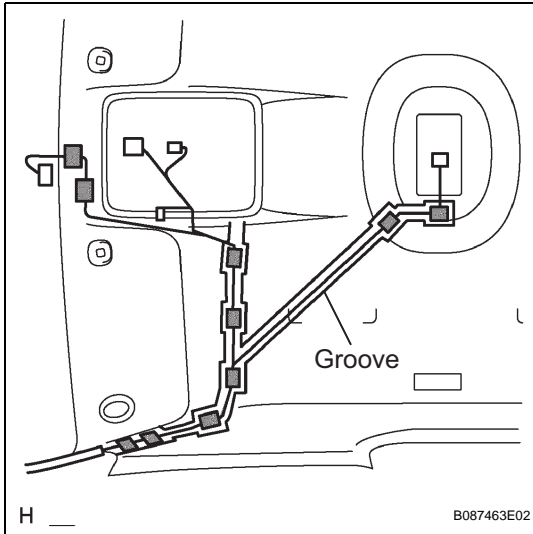


2. INSTALL ROOF HEADLINING PAD


- (a) Install the 2 new roof headlining pads onto the roof headlining, as shown in the illustration.

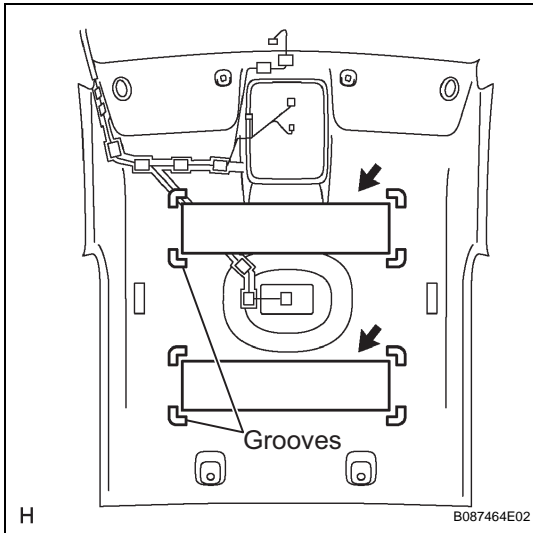


3. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Install the roof headlining into the vehicle.

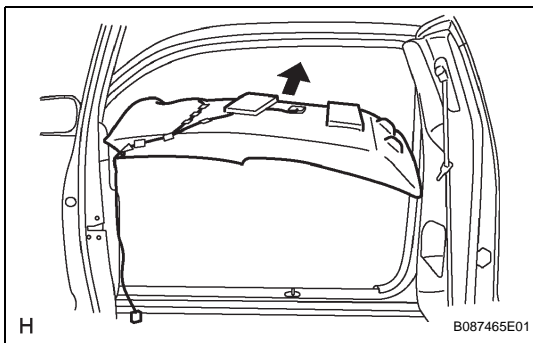

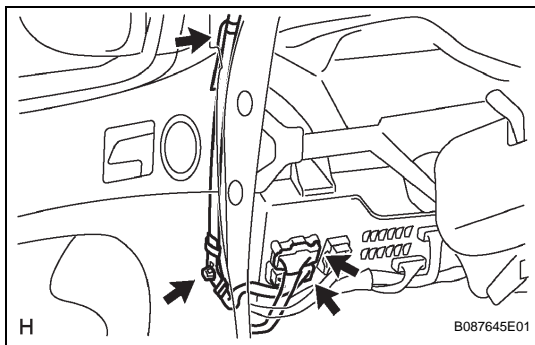

- (b) Install the 2 wire harness clamps.
- (c) Connect the roof wire connector.
- (d) Connect the frame wire connector.

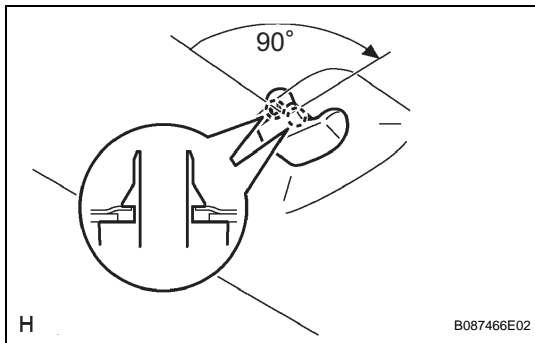


4. INSTALL COAT HOOK

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the coat hook 90° clockwise and install it.

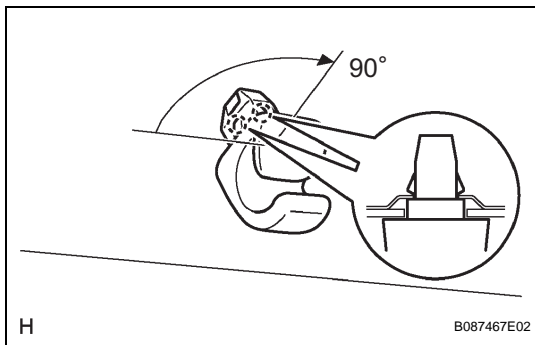


5. INSTALL VISOR HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° clockwise and install it.

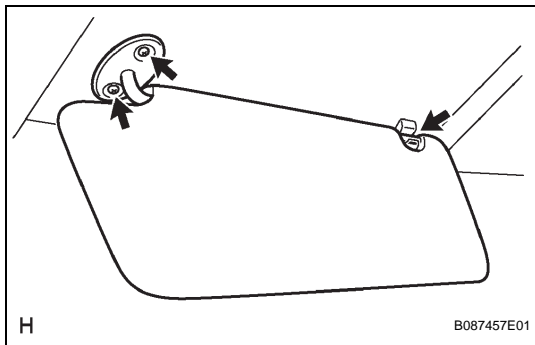


6. INSTALL VISOR ASSEMBLY LH

- (a) Install the visor into the visor holder.
- (b) Tighten the 2 screws.

7. INSTALL VISOR ASSEMBLY RH


HINT:

Follow the same procedures as for the visor assembly LH.

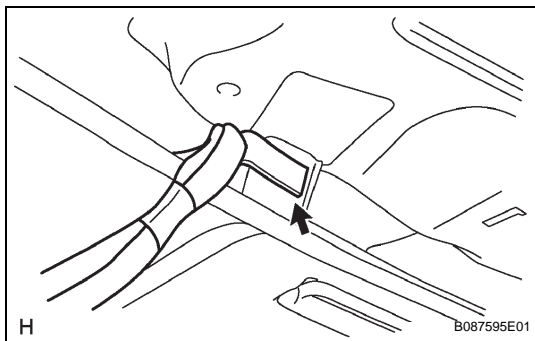


8. INSTALL ROOF CONSOLE BOX ASSEMBLY

- (a) Install the wire harness clamp.

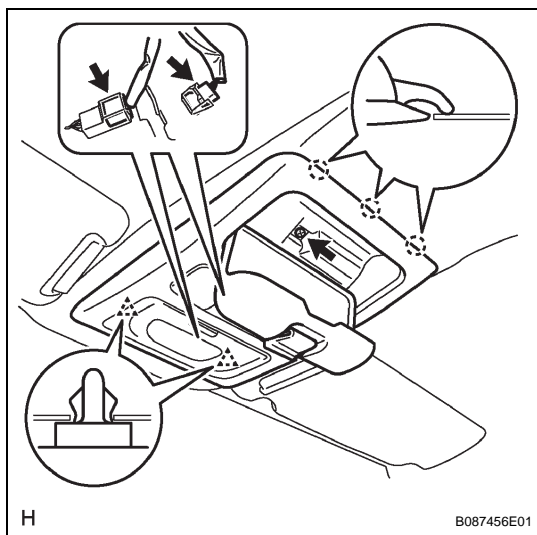


- (b) Connect the accessory meter connector and map lamp connector.
- (c) Engage the 2 clips and 3 claws and install the map lamp.
- (d) Tighten the screw.

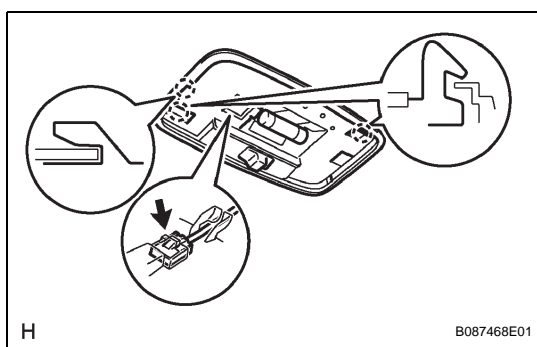


9. INSTALL ROOM LIGHT ASSEMBLY

- (a) Connect the room light connector.
- (b) Engage the 3 claws and install the room light.

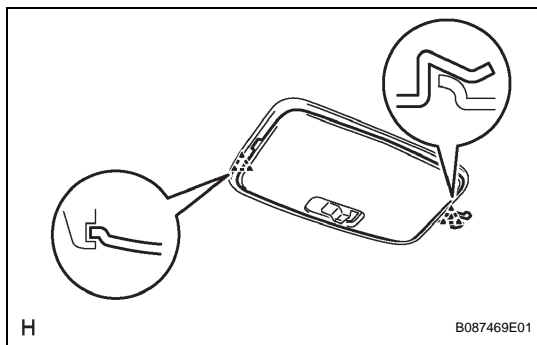


- (c) Engage the 2 claws and install the room light lens.

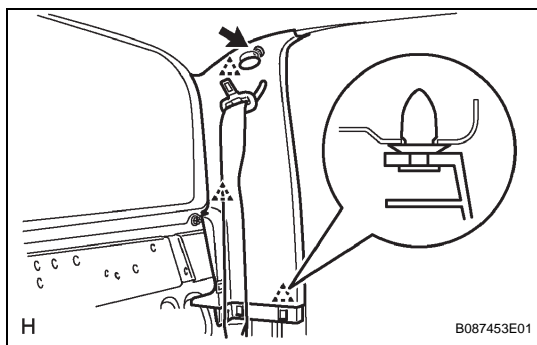

10. INSTALL QUARTER INSIDE TRIM BOARD LH

- (a) Engage the 3 clips and install the quarter inside trim board.
- (b) Tighten the screw.

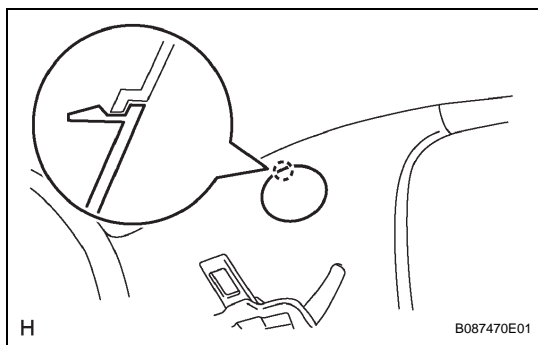


(c) Engage the claw and close the cover.

11. INSTALL QUARTER INSIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the quarter inside trim board LH.

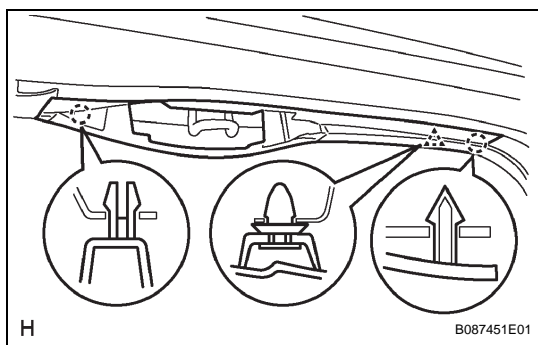


12. INSTALL ROOF SIDE INNER GARNISH LH

(a) Engage the 2 claws and clip, and install the roof side inner garnish.

13. INSTALL ROOF SIDE INNER GARNISH RH


HINT:

Follow the same procedures as for the roof side inner garnish LH.

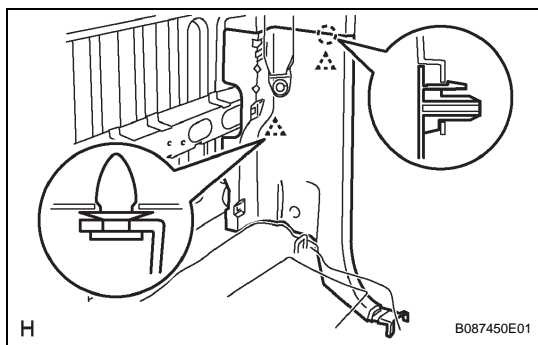

14. INSTALL QUARTER TRIM LOWER PANEL LH

(a) Engage the claw and 2 clips, and install the quarter trim lower panel.

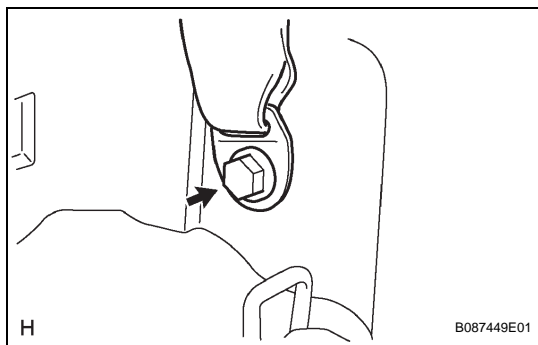


(b) Install the floor anchor of the rear seat belt outer with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

15. INSTALL QUARTER TRIM LOWER PANEL RH


HINT:

Follow the same procedures as for the quarter trim lower panel LH.

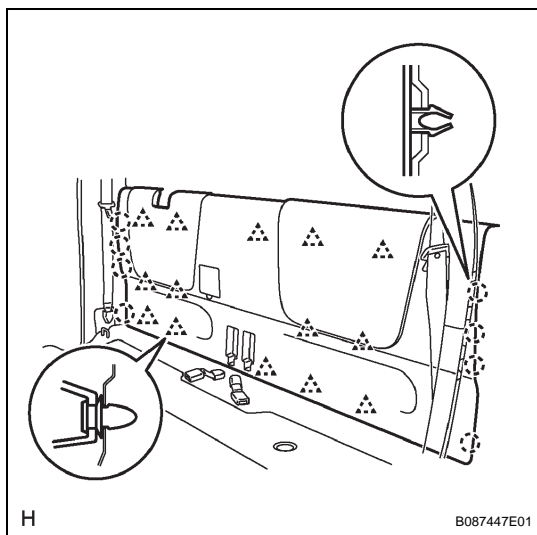

16. INSTALL BACK PANEL TRIM

- (a) Engage the 8 claws and 14 clips, and install the back panel trim.

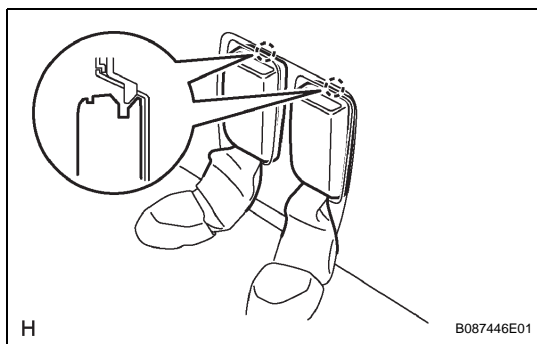


17. INSTALL REAR SEAT INNER BELT ASSEMBLY

HINT:

Follow the same procedures as for the opposite side.

- (a) Engage the claw and install the buckle of the rear seat belt inner.

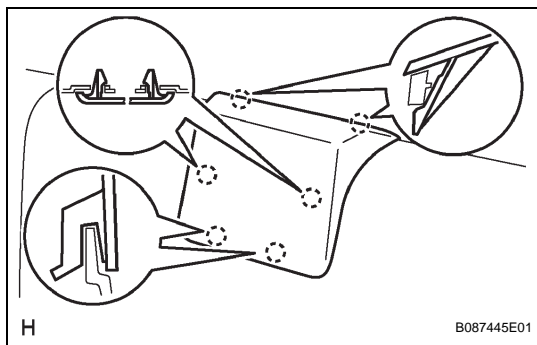

18. INSTALL BACK PANEL TRIM COVER

- (a) Engage the 6 claws and install the back panel trim cover.

19. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-18](#))

20. CONNECT PASSENGER AIRBAG CONNECTOR

21. INSTALL INSTRUMENT SIDE PANEL (See page [IP-20](#))

22. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-20](#))

23. INSTALL INSTRUMENT LOWER PANEL (See page [IP-20](#))

24. INSTALL INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-20](#))


25. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))


26. INSTALL INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

27. INSTALL COMBINATION METER ASSEMBLY (See page [IP-21](#))


28. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

29. **INSTALL INSTRUMENT LOWER PANEL FINISH PANEL** (See page [IP-22](#))
30. **CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY** (See page [ED-8](#))
31. **INSTALL RADIO RECEIVER ASSEMBLY** (See page [AV-70](#))
32. **INSTALL AIR CONDITIONING CONTROL ASSEMBLY** (See page [IP-22](#))
33. **INSTALL FRONT CONSOLE BOX**
 - (a) for Automatic Transmission:
 - (1) Install the front console box (See page [IP-24](#)).
 - (b) for Manual Transmission:
 - (1) Install the front console box (See page [IP-23](#)).
34. **INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission)** (See page [IP-24](#))
35. **INSTALL REAR CONSOLE BOX ASSEMBLY** (See page [IP-24](#))
36. **INSTALL REAR CONSOLE UPPER PANEL SUB-ASSEMBLY**
 - (a) for Automatic Transmission:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).
 - (b) for Manual Transmission:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).
37. **INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake)** (See page [IP-25](#))
38. **INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake)** (See page [IP-25](#))
39. **INSTALL FRONT PILLAR GARNISH LH**
 - (a) for LH Side:
 - (1) Install the 3 wire harness clamps.

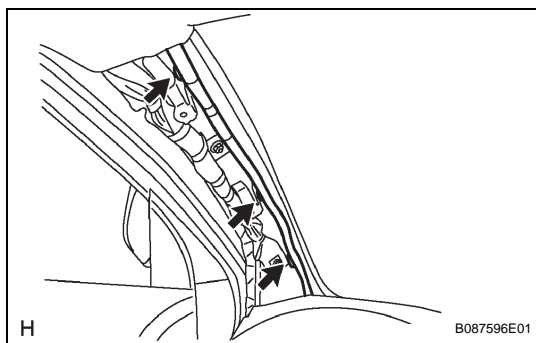

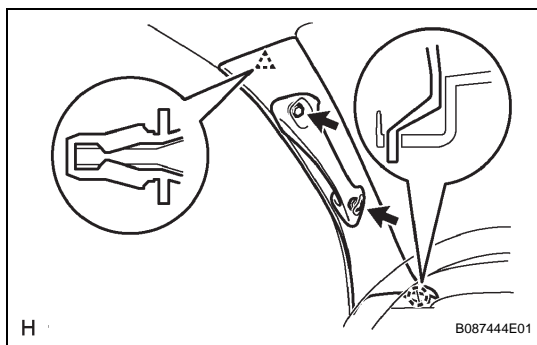


- (b) Engage the claw and clip, and install the front pillar garnish.
- (c) Tighten the 2 screws.

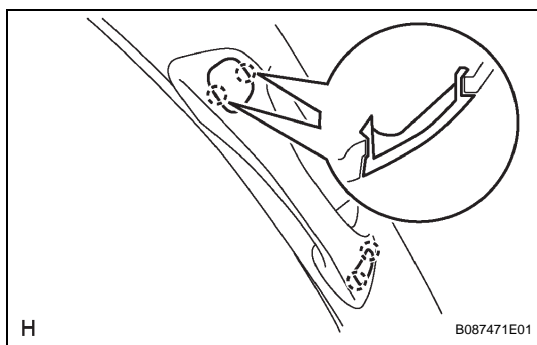

- (d) Engage the 2 claws and install the assist grip plug.
- HINT:
Follow the same procedures as for the opposite side.

40. INSTALL FRONT PILLAR GARNISH RH

- HINT:
Follow the same procedures as for the front pillar garnish LH.

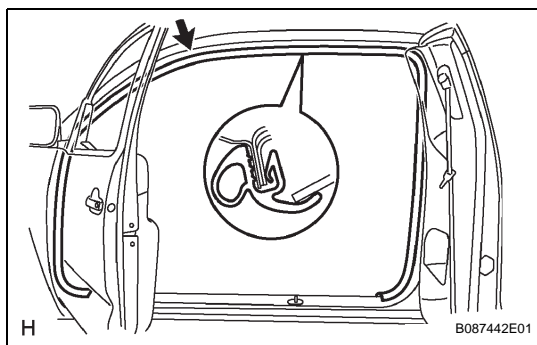


41. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Install the front door opening trim weatherstrip.

42. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

- HINT:
Follow the same procedures as for the front door opening trim weatherstrip LH.

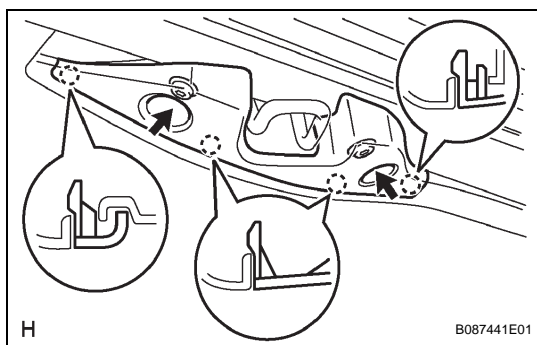


43. INSTALL ROOF SIDE INNER GARNISH CAP LH

- (a) Engage the 4 claws and install the roof side inner garnish cap.
- (b) Using a "Torx" socket wrench T30, tighten the 2 screws.

44. INSTALL ROOF SIDE INNER GARNISH CAP RH

- HINT:
Follow the same procedures as for the roof side inner garnish cap LH.

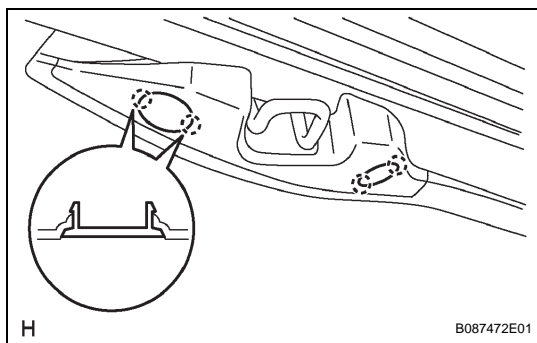


45. INSTALL ROOF SIDE INNER GARNISH COVER LH

- HINT:
Follow the same procedures as for the opposite side.
- (a) Engage the 2 claws and install the roof side inner garnish cover.

46. INSTALL ROOF SIDE INNER GARNISH COVER RH

- HINT:
Follow the same procedures as for the roof side inner garnish cover LH.

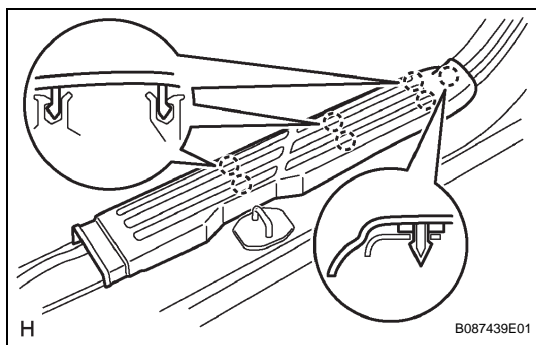
**47. INSTALL REAR DOOR SCUFF PLATE LH**

- (a) Engage the 7 claws and install the rear door scuff plate.

48. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the rear door scuff plate LH.

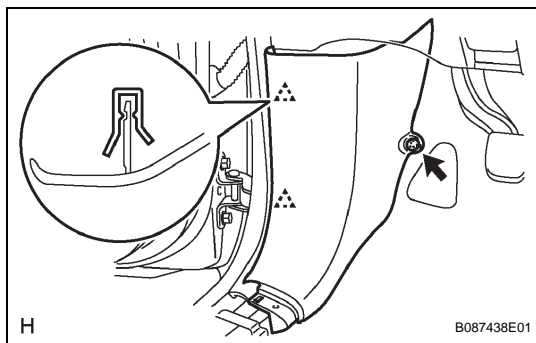**49. INSTALL COWL SIDE TRIM BOARD LH**


- (a) Engage the 2 clips and install the cowl side trim board.
- (b) Install the clip.

50. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the cowl side trim board LH.

IR

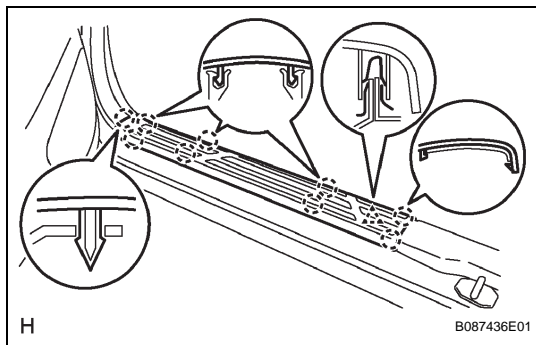**51. INSTALL FRONT DOOR SCUFF PLATE LH**

- (a) Engage the 9 claws and clip, and install the front door scuff plate.

52. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the front door scuff plate LH.

53. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))**54. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror) (See page [IR-30](#))****55. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

56. INSPECT SRS WARNING LIGHT

(See page [RS-28](#))