


Humbot S. Bluetooth: connection instructions

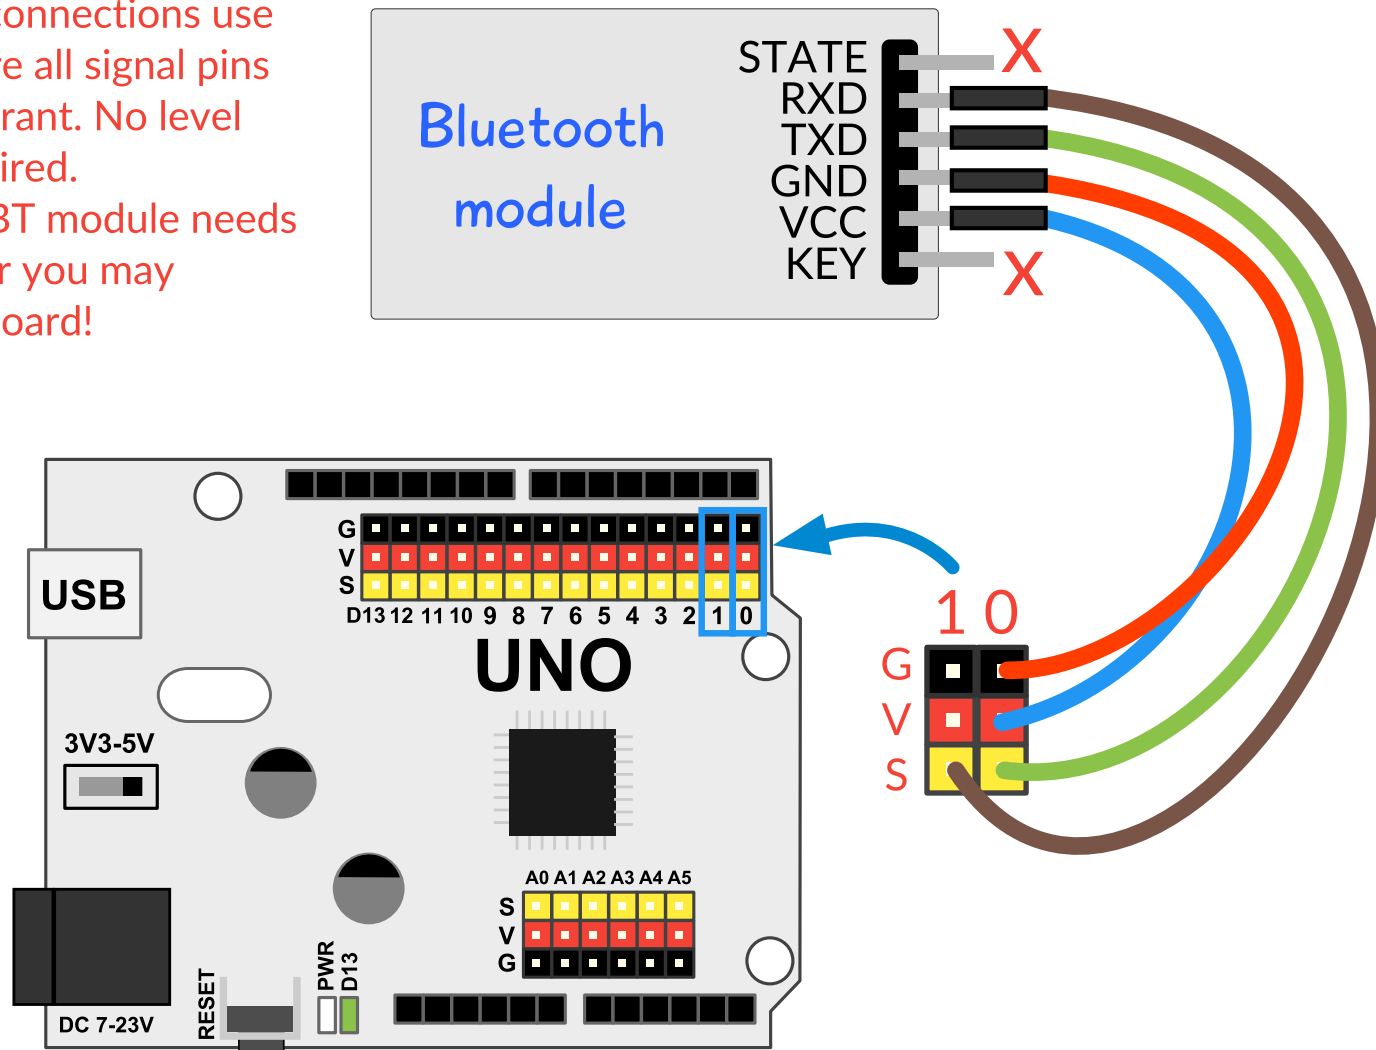

Caution! This connections use a module where all signal pins are 3V-6V tolerant. No level shifting is required. Check if your BT module needs level shifting or you may damage your board!



Visit makitpro.com for more details

