

Notes 2026.01 by David Malawey

Downloaded manual for electrical timer from Amazon (cannot find order, about 2 years ago).

Part Link: <https://amzn.to/4bzWY14>

Price: \$22 per 1 pack

Manufacturer: Enerlites (written on product)


Model: HET06-A-R

or PN E317589

Document Purpose:

Save & store background for product in-use in openlab

About 2 years, 2024 to present.

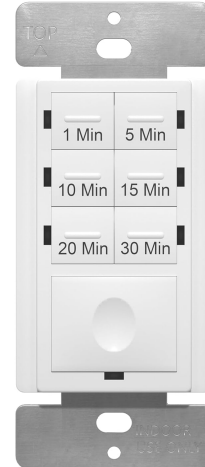

User Manual of Product 1:


Enerlites HET06A 1-5-10-15-20-30 Minutes Preset In-Wall
Countdown Timer Switch, w Decorator Wall Plate, White

INSTALLATION INSTRUCTIONS



HET06A-R

Preset In-Wall Countdown Timer

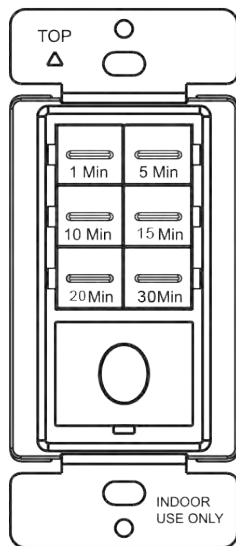

SPECIFICATIONS

Voltage.....	120VAC, 60HZ
Load(Single Pole Circuit)	
Incandescent Lamp.....	800W
Fluorescent Lamp.....	800VA
Motor.....	1/4 HP
Time Delay.....	1, 5, 10, 15, 20, & 30 Minutes
Humidity.....	95% RH, non-condensing
Operating Temperature.....	32° to 131° F (0° to 55° C)

DESCRIPTION

The HET06A-R is a timer switch with 6 preset time buttons and 1 Manual ON button. All Loads connect to this timer will automatically turn OFF when the selected time expires. The 6 selectable times are 1, 5, 10, 15, 20, and 30 Minutes.

FEATURES

- Easily replaces a standard single pole Light or Fan switch.
- Compatible with most types of lights.
- Very bright LED Night and indicator lights.
- Attractive blue LED indicators conveniently located next to each button.
- Indoor use only .

WARNING

Turn the POWER OFF at the circuit breaker before installing the Timer



Read and understand these instructions before installing. It is recommended that a qualified electrician performs this installation. Make sure to turn off the circuit breaker or fuse(s) and make sure power is off before wiring the device.

This device is intended for installation in accordance with the National Electric Code and local regulations.

Use Copper wires ONLY.

WIRING DIRECTIONS

1. Connect the BLACK wire on the switch to the HOT wire.
2. Connect the WHITE wire on the switch to the NEUTRAL wire.
3. Connect the RED wire on the switch to the LOAD wire.
4. Connect the GREEN wire on the switch to the GROUND wire.

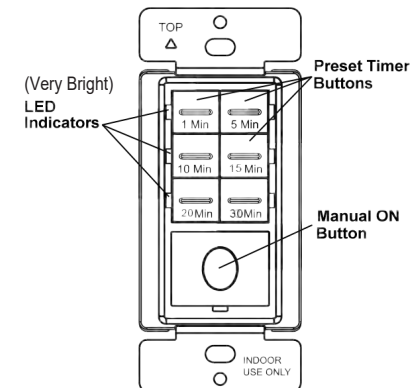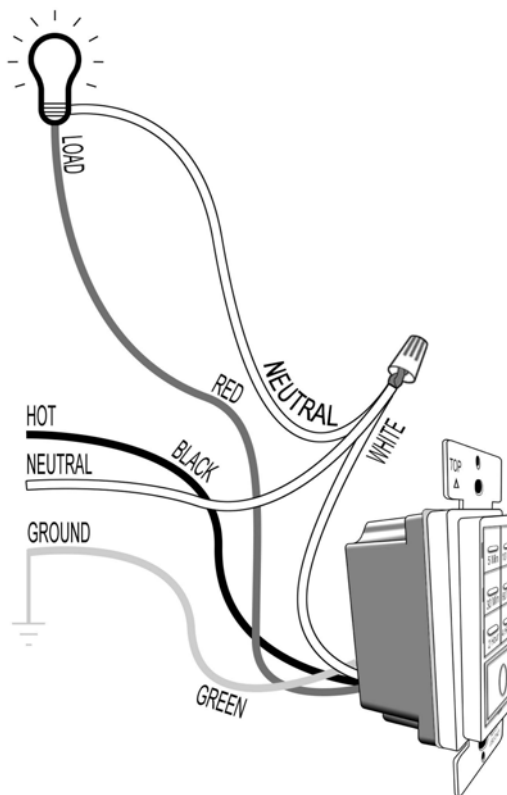

SETTING/ OPERATING

Preset Buttons: The LED indicator next to the selected button will turn ON to indicate the selected time. There are 6 buttons with preset times of 1, 5, 10, 15, 20, and 30 Minutes.

- While the Load is OFF, press and release the button with the desired time once to turn the Load ON for that selected amount of time.
 - When the time expires, the Load will automatically turn off.
- While the Load is ON, press and release the button with the desired time once to restart the countdown with the newly selected time.

Manual ON Button: The LED indicator is ON when the Load is OFF. The LED indicator is OFF when the Load is ON.

- While the Load is OFF, press and release the Manual ON button to turn the Load ON with the last selected timer preset.
- While the Load is ON, press and release the Manual ON button to override the timer and turn the Load OFF.
- **To hold the Load ON:** Press and hold the Manual ON button for 4 seconds. The Load will turn ON and stay ON. The timer WILL NOT turn the Load OFF.
 - Press and release the Manual ON button to turn the Load OFF.
 - Press and release the button with the desired time once to keep the Load on for that selected amount of time.



WARRANTY INFORMATION

This device is warranted to be free of material and workmanship defects for 2 years from the date of purchase. Original receipt or proof of purchase from an authorized retailer must be presented upon warranty claim. ALL claims must be verified and approved by Enerlites, Inc. Warranties from other Enerlites products may vary. This warranty is nontransferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. To the fullest extent permitted by the applicable state law, Enerlites shall not be liable to the purchaser or end user customer of Enerlites products for direct, indirect, incidental, or consequential damages even if Enerlites has been advised of the possibility of such damages. Enerlites' total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.




Diagrams by David M

With and without blue device-labeling boxes.

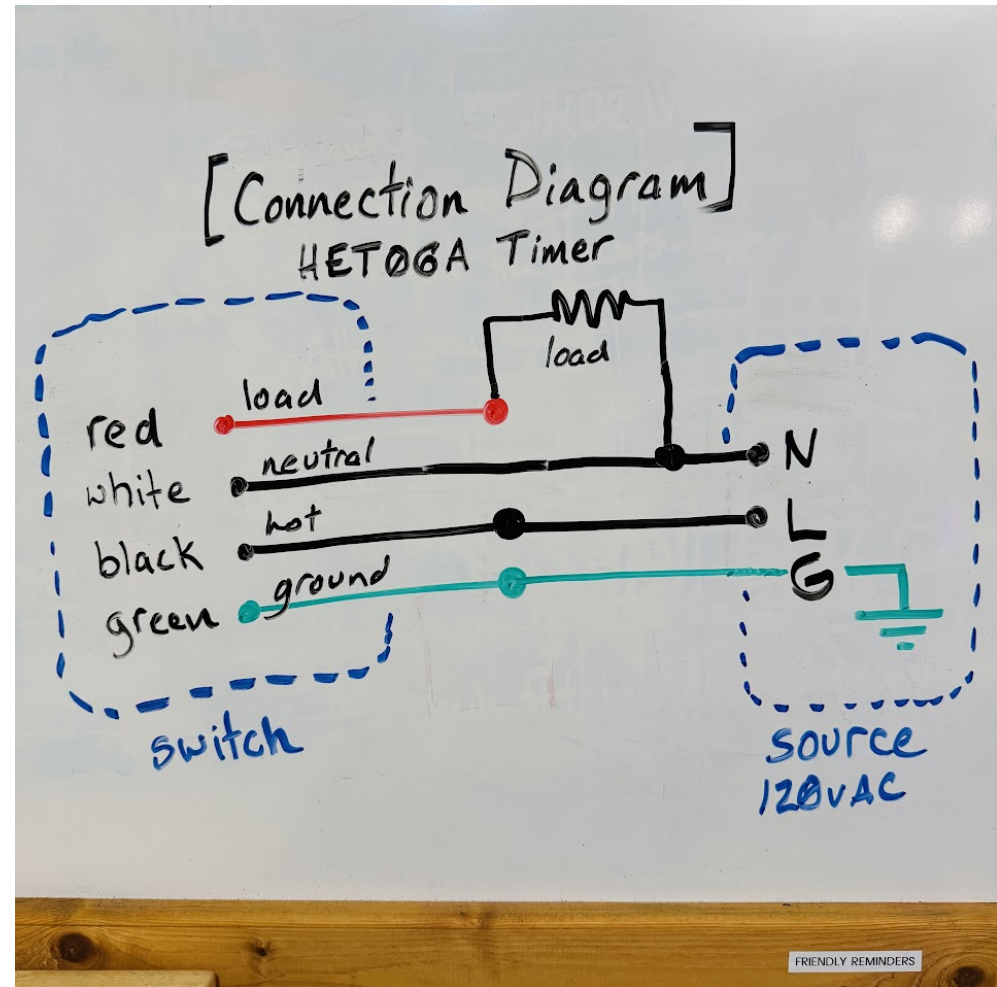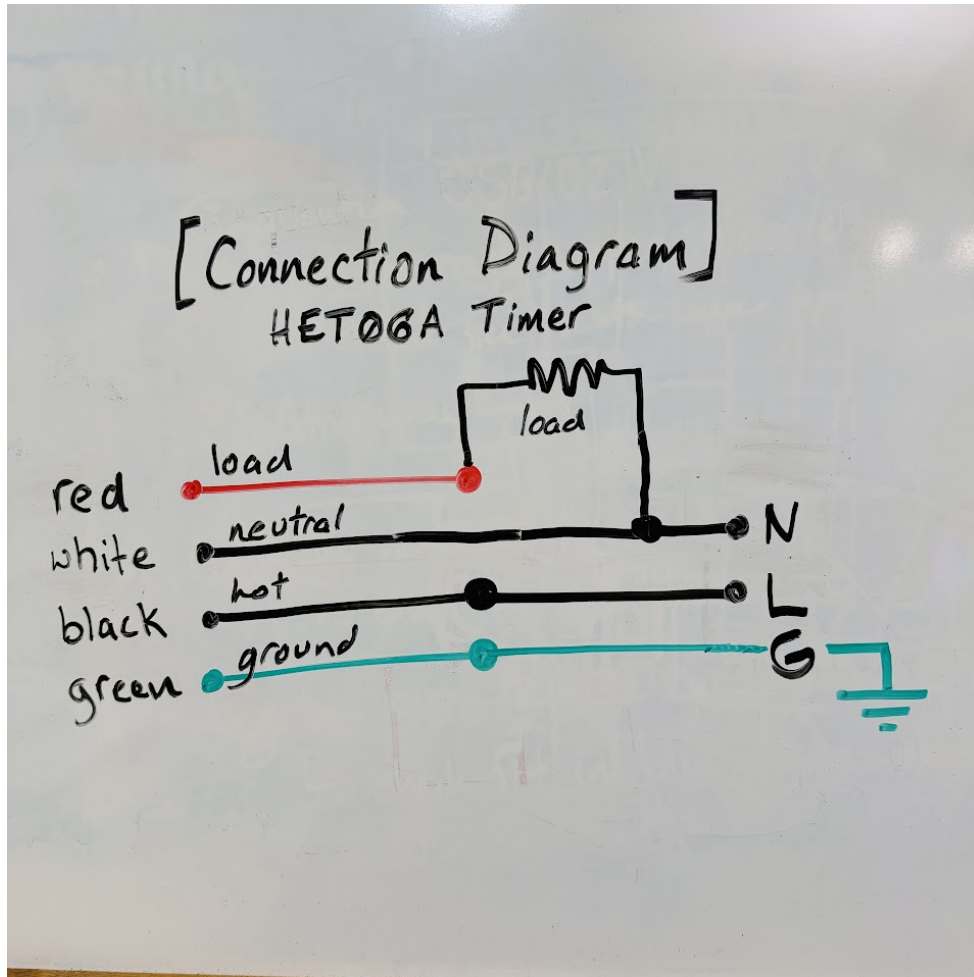

Tomacorriente con timer HET02

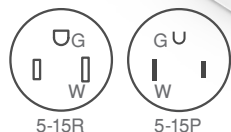

> Características Técnicas

- 15A 125V~
- Temperatura de operación: -10 a 40
- Pantalla LCD
- 60Hz
- 1800W resistivos
- 1200W de Tungsteno
- 1/2 HP
- 1200W tungsteno
- Garantía 5 años

> Información para solicitar del catálogo

- Color Blanco HET02 ☐




> Características generales

- Operación automática o manual
- Presione ON/OFF para cambiar el enchufe de las luces de encendido o apagado en cualquier momento
- Programa hasta 16 opciones de encendido o apagado por semana
- Pantalla digital amplia y facil de leer
- La memoria almacena los ajustes de forma indefinida sin batería
- Las baterías ahorran tiempo en la reconfiguración del programa cuando la unidad esta desconectada o hay un corte de energía
- Aplicaciones típicas: iluminación de temporada, iluminación interior en vacaciones, iluminación exterior, abanicos y rociadores

> Características del material

- Material del cuerpo: Termoplástico
- Material de los contactos: Hierro laminado en frío

> Dimensiones

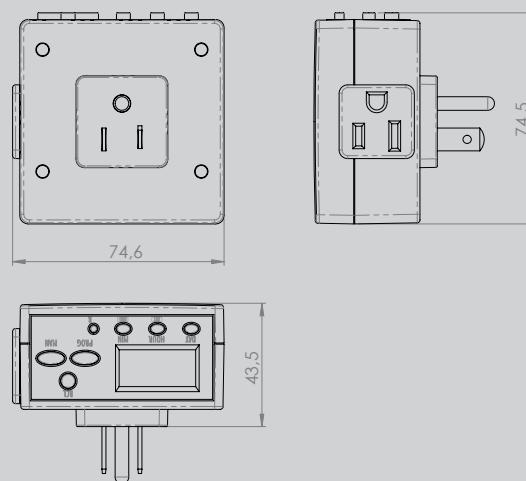

> Pruebas y códigos que cumple

- Registro UL E317589
- NEMA 5-15R
- NEMA 5-15P