


>> OWNER'S MANUAL QUICK REFERENCE GUIDE



The Power to Surprise

Interior Overview

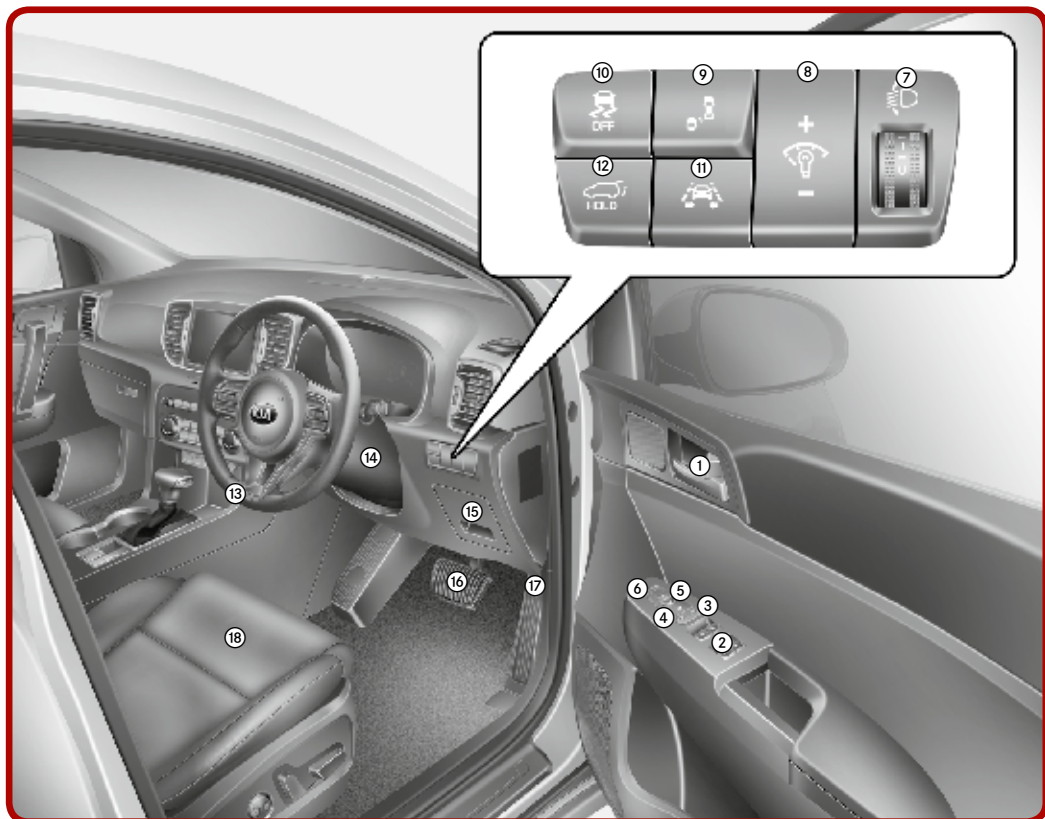


- ① Inside door handle [4]
- ② Power window switches [4]
- ③ Central door lock switch [4]
- ④ Power window lock switch* [4]
- ⑤ Outside rearview mirror control switch [4]
- ⑥ Outside rearview mirror folding button* [4]
- ⑦ Headlight leveling control [4]
- ⑧ Instrument panel illumination control [4]
- ⑨ BSD ON/OFF button* [6]
- ⑩ ESC OFF button [6]
- ⑪ LDWS/LKAS ON/OFF button* [6]
- ⑫ Power tailgate open/close button* [4]
- ⑬ Steering wheel [4]
- ⑭ Tilt and telescopic steering column control lever* [4]
- ⑮ Interior fuse box [8]
- ⑯ Brake pedal [6]
- ⑰ Bonnet release lever [4]
- ⑱ Seat [3]

* if equipped


[#] Number in brackets indicates chapter in Owner's Manual
The illustrations in this guide may vary from the actual vehicle.

Instrument Panel Overview / Engine Compartment

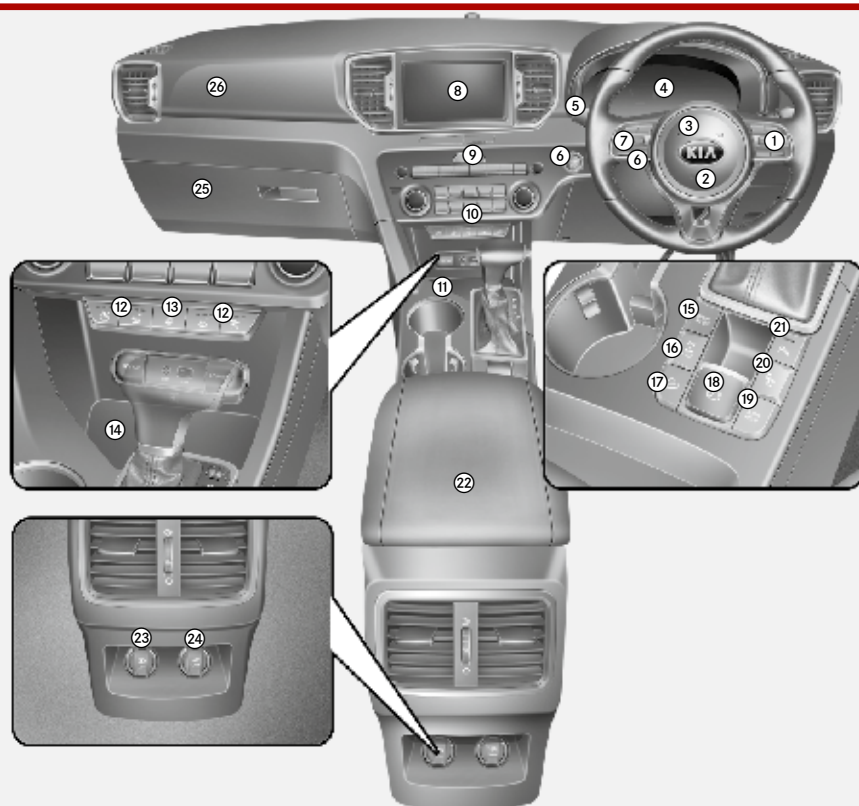

- | | | |
|--|--|--|
| ① Cruise control/Speed limiter switches* [6] | ⑩ Climate control system* [4] | ⑳ Smart parking assist system ON/OFF button* [4] |
| ② Driver's front air bag [3] | ⑪ Gear lever [6] | ㉑ Parking assist system ON/OFF button* [4] |
| ③ Horn [4] | ⑫ Seat warmer [4] | ㉒ Center console storage box [4] |
| ④ Instrument cluster [4] | ⑬ Heated steering wheel button* [4] | ㉓ USB charger [4] |
| ⑤ Light/Turn signal control lever [4] | ⑭ Smart phone wireless charger* [4] | ㉔ Power outlet/Cigarette lighter* [4] |
| ⑥ Ignition switch/Engine start/stop button [6] | ⑮ Drive mode button* [6] | |
| ⑦ Audio remote control buttons [5] | ⑯ AWD Lock button* [6] | |
| ⑧ Audio system [5] | ⑰ DBC Lock button* [6] | |
| ⑨ Hazard warning light [7] | ⑱ Electronic parking brake (EPB) switch* [6] | |
| | ㉒ Auto Hold ON/OFF button* [6] | |


Door Locks / Tailgate / Bonnet / Fuel Filler Lid

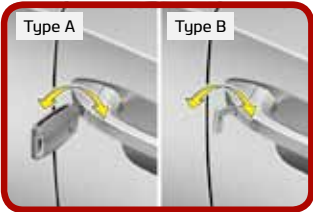

Operating door locks manually [4]



Operating door locks from inside the vehicle with central door lock switch [4]

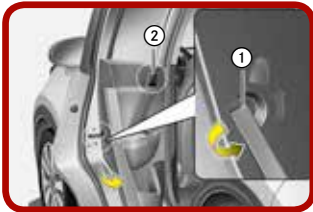

Child-protector rear door lock [4]



Opening the tailgate [4]




Closing the tailgate [4]



Emergency tailgate release [4]



Opening the bonnet [4]
Pull the release lever to unlatch the bonnet.

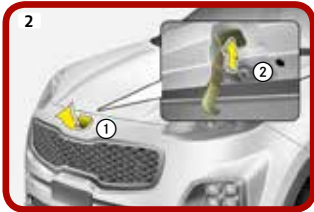


① Lift the bonnet slightly.
② Push the secondary latch inside and open the bonnet.



① Release support rod and insert it into position shown.



Opening the fuel filler [4]
Press the 3 o'clock position edge of the fuel filler lid.

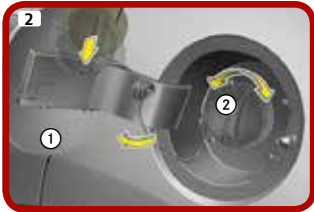


① Fully open the lid.
② Turn cap counterclockwise to open.

Closing the fuel filler

1. Turn cap clockwise until it "clicks" to ensure it is securely closed
2. Close the lid and press the edge until it is securely locked.


Windows / Wipers and Washers

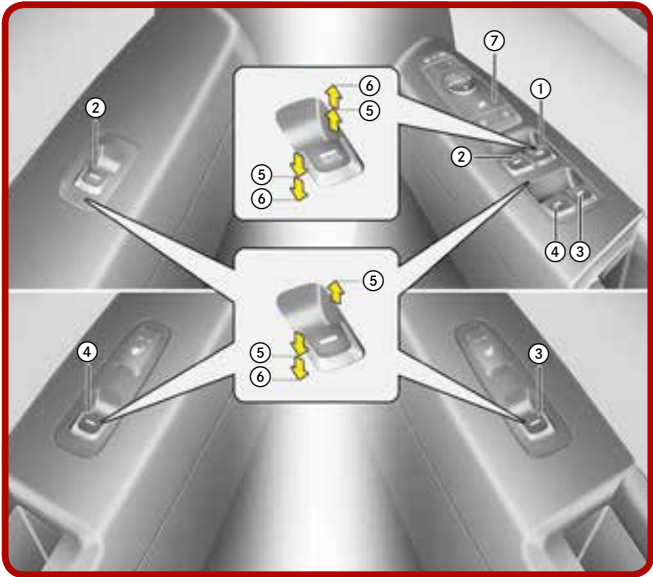

- ① Driver's door power window switch
- ② Front passenger's door power window switch
- ③ Rear door (right) power window switch
- ④ Rear door (left) power window switch
- ⑤ Window opening and closing
- ⑥ Automatic power window up*/down*
- ⑦ Power window lock switch

NOTICE In cold and wet climates, power windows may not work properly due to freezing conditions.

Windows [4]

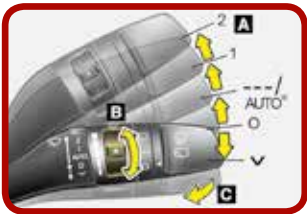

Front [4]

A: Wiper speed control (front)

- 2 High wiper speed
- 1 Low wiper speed
- Intermittent wipe
- AUTO* Automatic control wipe
- 0 Off
- ✓ Single wipe

B: Intermittent control wipe time adjustment

C: Wash with brief wipes (front)




Rear [4]

D: Rear wiper/washer control

- Continuous wipe
- Intermittent wipe
- 0 Off

E: Wash with brief wipes (rear)

Seat / Air Bag / Child Restraint System

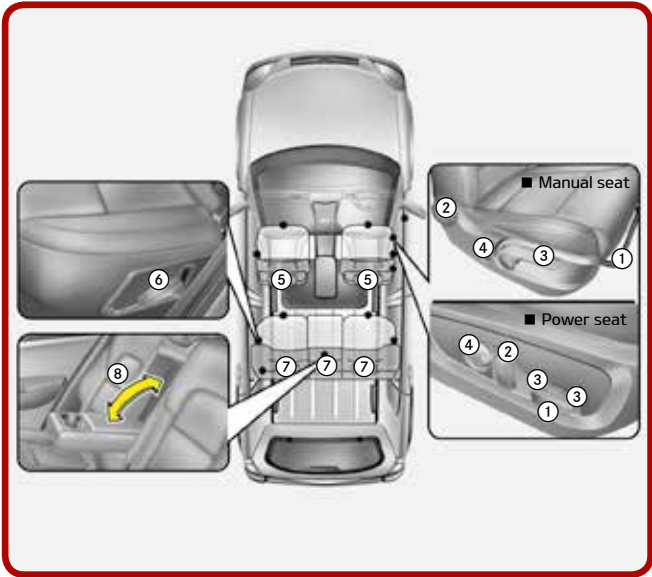

Front Seat

- ① Forward and backward
- ② Seatback angle
- ③ Seat cushion height
- ④ Lumbar support (Driver's seat)*
- ⑤ Headrest

Rear Seat

- ⑥ Seatback folding
- ⑦ Headrest
- ⑧ Armrest


Seat [3]




Passenger's front air bag ON/OFF switch [3]




Rearward-facing child restraint system [3]

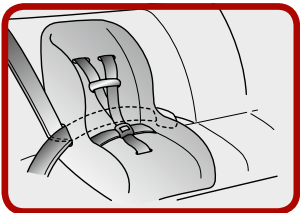

Installing a child restraint system by lap/shoulder belt [3]

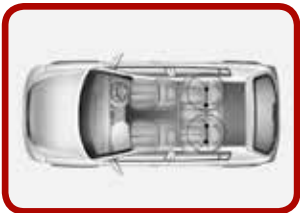

Securing with "ISOFIX" system and "Tether Anchorage" system* [3]

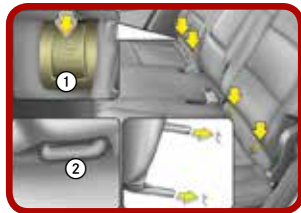


- ① ISOFIX Anchor Position Indicator
- ② ISOFIX Anchor




Securing with "Tether Anchor" system* [3]

Climate Control System

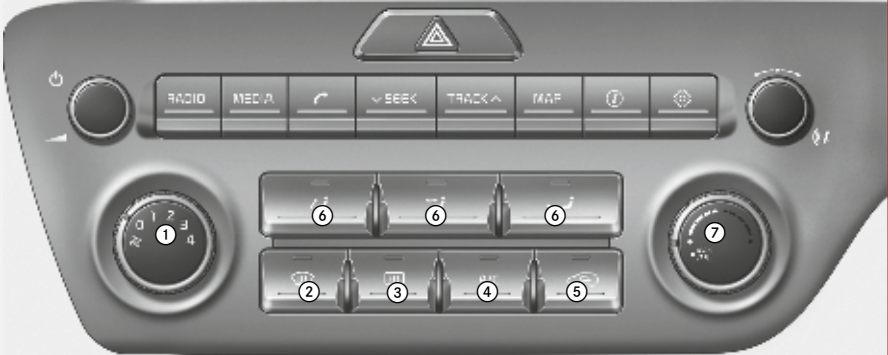

Manual climate control system* [4]

- | | |
|------------------------------|-----------------------|
| ① Fan speed control | ④ Air conditioning |
| ② Front windscreen defroster | ⑤ Air intake control |
| ③ Rear window defroster | ⑥ Mode selection |
| | ⑦ Temperature control |

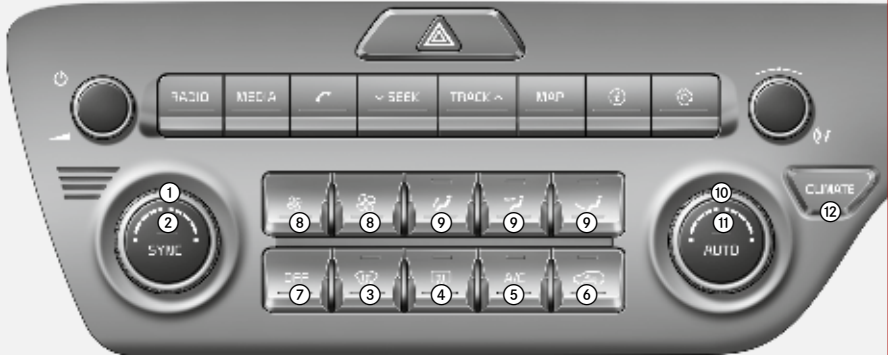

Automatic climate control system* [4]


- | | | |
|--------------------------------------|-------------------------|--|
| ① Passenger's temperature control | ④ Rear window defroster | ⑨ Mode selection |
| ② Dual temperature control selection | ⑤ Air conditioning | ⑩ Driver's temperature control |
| ③ Front windscreen defroster | ⑥ Air intake control | ⑪ AUTO (automatic control) |
| | ⑦ OFF | ⑫ Climate information screen selection |
| | ⑧ Fan speed control | |

Lighting Control / Steering Wheel / Cruise Control System



Lighting control [4]

- ① OFF
- ② Auto light*
- ③ Parking/Side light
- ④ Headlight

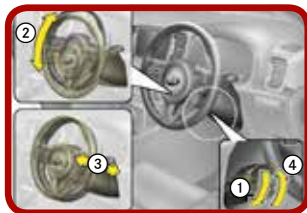

Tilt & telescopic steering* [4]


Steering wheel adjustment:

- ① Pull down lock release lever
- ② Adjust the steering wheel to the desired angle
- ③ Adjust the steering wheel to desired height*
- ④ Lock the steering wheel by pulling up lock release lever.



Heated steering wheel* [4]

When the ignition switch is in ON position, press the shown button to switch on the heated steering wheel. The indicator on the button will illuminate. To turn off the heating function, press the button once again.

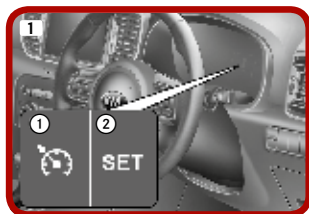

Cruise control system* [6]

- ① Cruise indicator
- ② Cruise set indicator



Activate Cruise Control System by pressing the shown button



Set cruise control speed by moving the lever down to SET -



To increase cruise control set speed



Cancel cruise control set speed by pressing the cancel button or the brake pedal.



Resume cruising speed by moving the lever up to RES +

Towing / Spare Tyre / Tyre Mobility Kit



Towing [7]

When towing the vehicle in an emergency without wheel dollies:

1. Set the ignition switch in the ACC position.
2. Place the transaxle shift lever in N (Neutral).
3. Release the parking brake.

Emergency towing

If towing is necessary, it is recommended to have it done by an authorised Kia dealer or a commercial tow truck service.

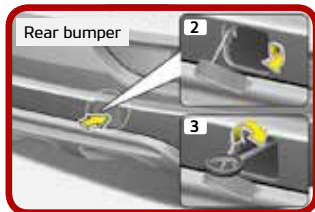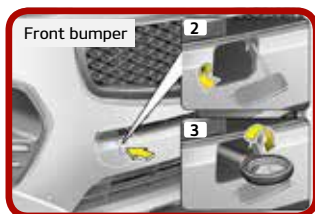

Removable towing hook

1. Open the tailgate and remove the towing hook from the tool case. The tool case is located under the luggage box.
2. Remove the hole cover pressing the lower part of the cover on the bumper.
3. Install the towing hook by turning it clockwise until it is fully secured.
4. Remove the towing hook and install the cover after use.



Jack and tools* [7]

The shown tools are stored in the luggage compartment.

Pull up the luggage box cover to reach this equipment.

- ① Jack handle
- ② Jack
- ③ Wheel lug nut wrench



Tyre Mobility Kit* [7]

Please read the instructions before using the Tyre Mobility Kit.


- ① Compressor
- ② Sealant bottle



With the Tyre Mobility Kit it is possible to stay mobile even after experiencing a tyre puncture.

Once the punctured tyre is properly sealed, cautiously drive (up to max. 200 km (120 miles)) at a max. speed of 80 km/h (50 mph) to the nearest vehicle or tyre service point, in order to have the tyre repaired or replaced.

Engine Oil / Washer Fluid / Additional Information

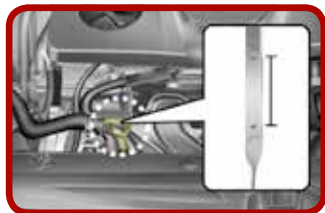

Checking the engine oil level [8]

Warm up the engine to operating temperature and switch off. On level ground pull the dipstick out and wipe clean before re inserting it fully. Pull the dipstick out again and check the level. The level should be between F and L.



Refilling engine oil [8]

Only refill with the specified engine oil [9], using a funnel to avoid spillage on engine components.



Checking the washer fluid level [8]

Check the fluid level and add fluid if necessary.

Additional Information*

Idle Stop & Go (ISG)

When enabled, ISG automatically stops the car's engine to reduce fuel consumption and emissions. The ISG function may not work if the car's battery charge status, ambient temperature and/or engine temperature is too low. Air conditioning/heater control settings may also affect ISG function.

Idle Stop & Go (ISG)

- For Manual Transaxle vehicles: Make sure the transaxle is in Neutral and the clutch pedal is fully depressed before starting the vehicle.
- For Automatic Transaxle vehicles: Make sure the transaxle is in the P (Park) position and the brake pedal fully depressed before starting the vehicle.

Starting your vehicle with the parking brake applied:

Many of our cars have Bluetooth® connectivity to enable the driver to safely enjoy the convenience of the mobile phone. For Bluetooth® compatibility please visit the owners section on our website.

For full details and instructions on any item contained in this quick reference guide, please read the owner's manual.

Hill-Start Assist Control (HAC)

This is designed to assist with hill starts by preventing the car rolling backwards when driving off. The system maintains the braking pressure in certain circumstances for 2 seconds enabling to pull away when you are ready.

Parking brake (handbrake)

When engaging the parking brake, apply the footbrake first and keep it depressed. Then ensure the parking brake is properly applied according to the type. Hand type: pull the parking brake lever up as far as possible. Foot type: depress the parking brake pedal down as far as possible. Electric (EPB) type: pull up the EPB switch and make sure the warning light comes on.

We strongly recommend to leave the car in first or reverse gear or in the 'P' (Park) position on automatics when leaving the car.

The Kia Service App – now available for free on iPhone/iPad and Android

With the Kia Service, you have (almost) all Kia dealers in Europe within reach*. Looking for a showroom or just a service, the app displays all dealers around your current location on the map. With one click you can call a dealer, visit their website or get directions to the showroom. Great for travel at home or abroad.

(*) In selected markets only

The Kia Service App



The Kia 7 year warranty 7-year/100,000 miles new car warranty. Valid in all EU member states (plus Norway, Switzerland, Iceland and Gibraltar), subject to local terms and conditions.

