


Flash time setting

You can use the Flash feature to access services provided by your telephone operator. The Flash time is dependent on the local telephone exchange. You can change the setting using the switch indicated in the following illustration under C.



- A - Ringer Volume Switch
- B - Tone/Pulse Switch
- C - Flash Time Switch

Phone operation

Receiving a phone call



Making a phone call



Redial



Access telephone operator services

During conversation, press FLASH button to interrupt momentarily the telephone conversation and to access your telephone operator's services.

USER MANUAL

ST-01



Please read it carefully before use!

Parts checklist

- 1 base
- 1 line cord
- 1 handset
- 1 handset cord
- 1 user manual

Installation

Installing the phone

Your phone should be placed on a level surface, such as a desk or table, or you can mount it on a wall.

1. Connecting the handset.
2. Connecting the telephone line.




Wall mounting

1. Rotate the wall mounting knob as shown in the following illustration:




The knob is designed to keep the unit in place when the telephone is mounted on the wall.

2. Install the base unit on the wall and then plug one end of the line cord into the telephone connection socket and the other end into the modular telephone line jack marked .
3. Attach the telephone at the wall as shown in the following figure.

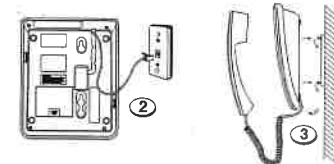

Telephone keys

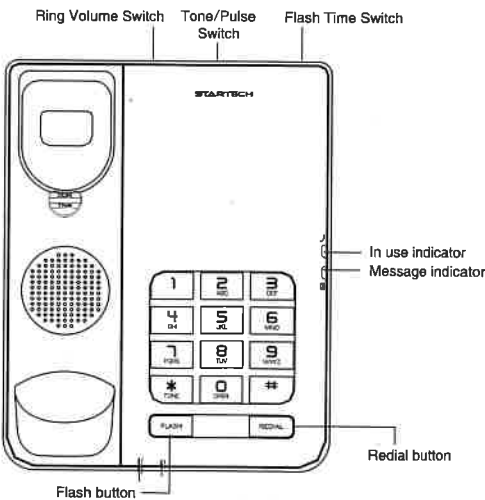

Telephone configuration

Note: Immediately change the following factory settings.

Ringer volume level

The phone will ring when there is an incoming call. You can set the ringer volume to high, middle or low level. The ringer volume switch is indicated in the following illustration under A.

Pulse tone setting

You can select P (PULSE) or T (TONE) dialing mode according to the requirements from the local telephone operator. The T/P switch is indicated in the following illustration under B.