




IP sever manual
KNTD-50(50 Port)
KNTD-100(100 Port)
KNTD-300(300 Port)

1. start the program

Open the folder contains software, double-click the Call Scheduling System. Exe, the initial broadcast scheduling software interface.

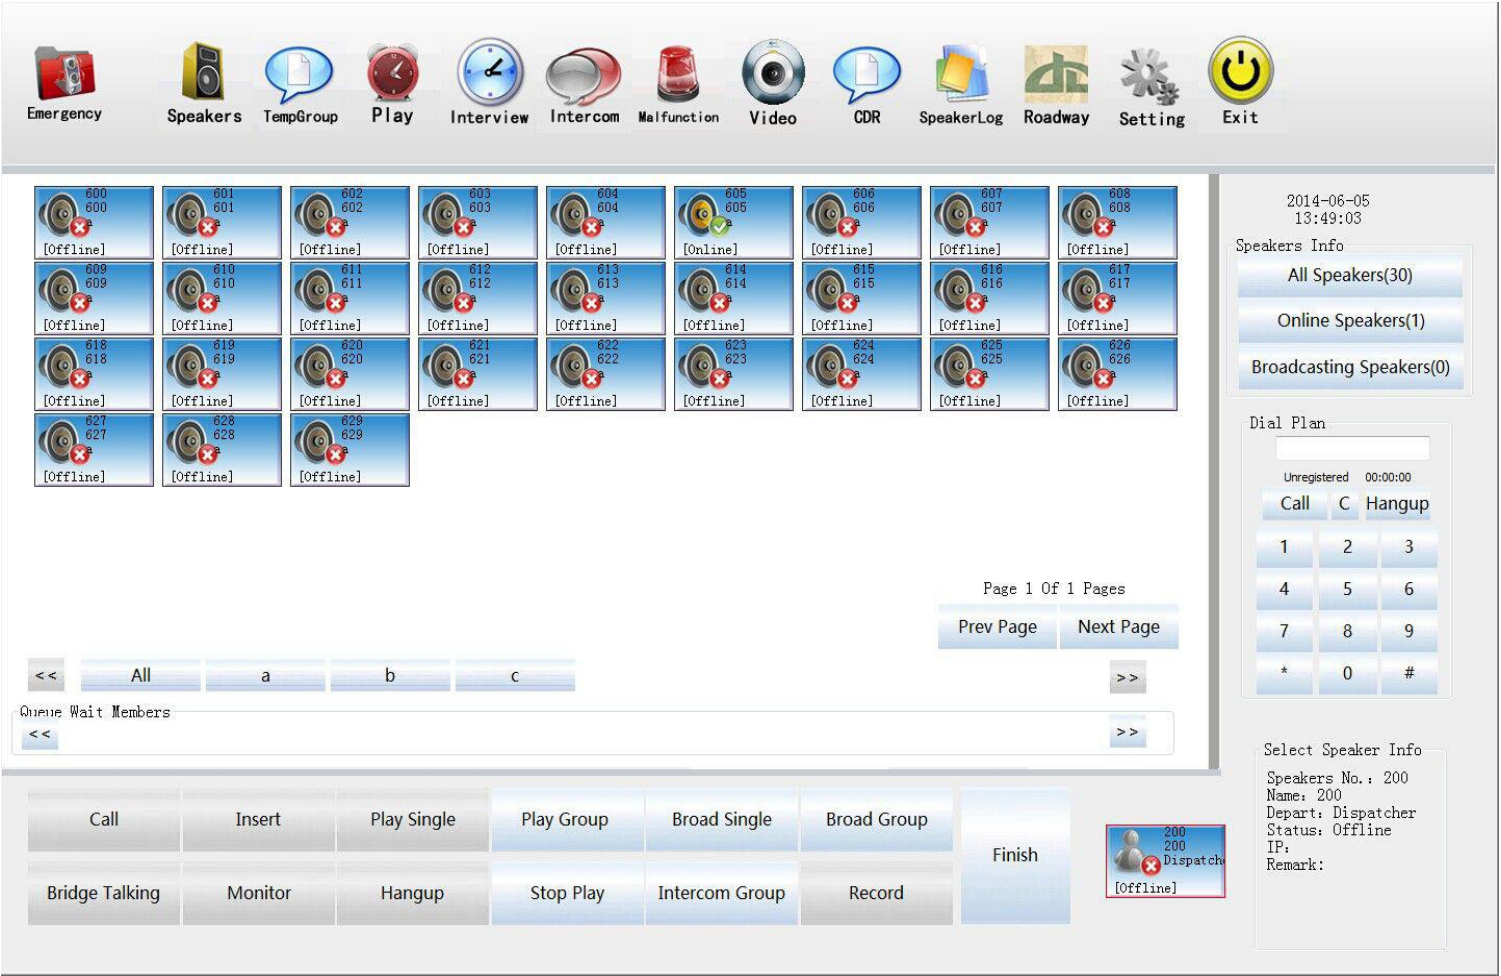

2, System Settings :

For the initial configuration system

System Setting

Console Exten: 200

Exten:

Exten Pass:

Server Port: 5060

Server Address: 210.51.2.203

Emergency Call Queue:

Play File Times: 1

Microphone: WINSND: Microsoft 声音映射器

Earphone: WINSND: Microsoft 声音映射器

Interview Source:

Apply

1. Console exten: used to control the broadcast audio of radio users, namely scheduling software soft phone number.

2.Reference broadcast system (the console number and password Settings, complete documentation in the "user Settings" and "station management" section below)

3.Exten: for the Collection and play extension number.

4.Exten pass: adopt extension of the password.

5.Server port: broadcast system server port.(default is 5060)

6.server address: broadcast system server address.

7. Emergency call queue: make radio soft phone is in a queue, in case of an emergency, call queue number, you can see on the software radio queue waiting for members. (queue number set, reference broadcast system completely "scheduling queue Settings" section of the documentation)

8. Radio frequency file for broadcasting, file play the number of times.


9. Microphone: select broadcasting software soft phone audio input.


10. earphones: select broadcasting software soft phone audio output.


11. Interview source: select audio Collection and play the audio input. Set up, click on the apply. °


3, The emergency broadcast


In an emergency situation, to all radio broadcasting terminal. All radio terminal, no matter in what state, must be response.


Emergency


Speakers


TempGroup


Play


Interview


Intercom


Malfunction


Video




























CDR

SpeakerLog

Roadway

Setting

Exit

 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Online]	 [Offline]	 [Offline]	 [Offline]
 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]
 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]	 [Offline]
 [Offline]	 [Offline]	 [Offline]						

Page 1 Of 1 Pages

Prev PageNext Page


<<Alla b c>>

Online Wait Members

<<>>

CallInsertPlay SinglePlay GroupBroad SingleBroad GroupFinish

Bridge TalkingMonitorHangupStop PlayIntercom GroupRecord


[Offline]

2014-06-05
13:50:47

Speakers Info

All Speakers(30)

Online Speakers(1)

Broadcasting Speakers(0)

Dial Plan

Unregistered 00:00:00

CallC Hangup

123

456

789

*0#

Select Speaker Info

Speakers No.: 200

Name: 200

Depart: Dispatcher

Status: Offline


IP:

Remark:

4, Speakers

In sound state TAB, showing the department name, click on the name of the department, can show that members of each department in the middle of an extension (all the extension will be displayed only after need to add to the address book) can click on (under) on a page, used to display the display of the extension. Display checkmark is online extension, the Red Cross is not online extension, such as above, all members of the extension, below is a member of the development department extension.


Is the initial of open the radio software interface, can clearly see the current state of the sound.

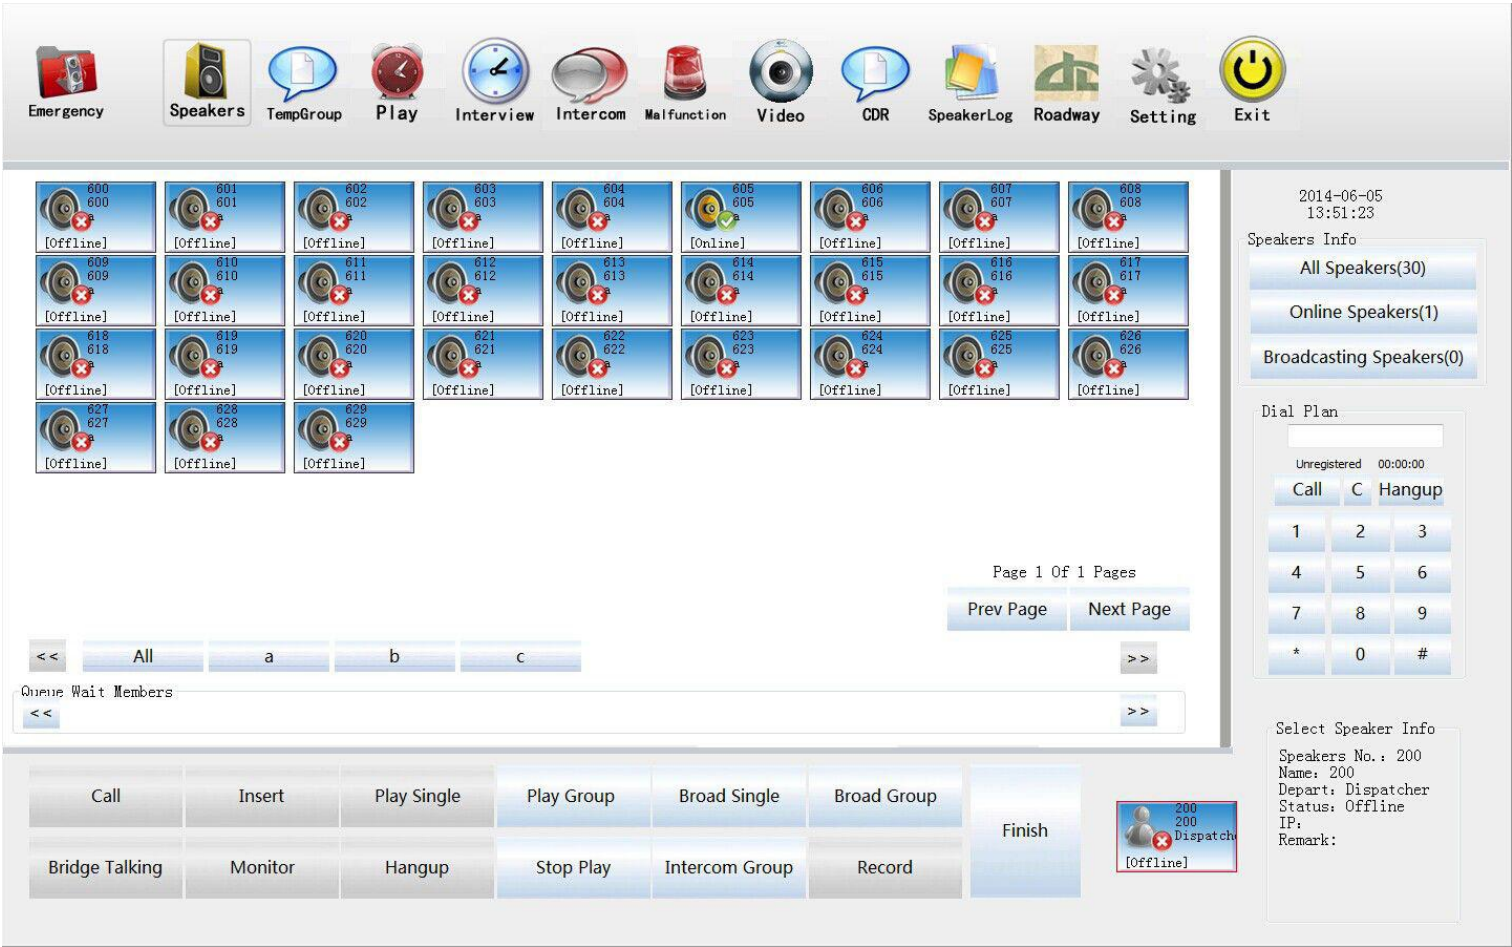

In stereo mode, you can see the " offline" , "online" , "ringing " , "talking " , " broadcast" five states .



5. Display the system time.

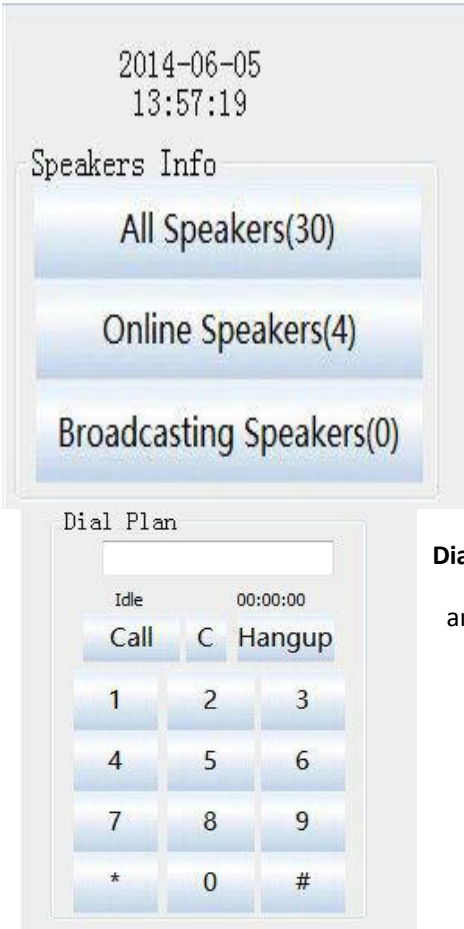

All speakers: click on the all sound list can display the current department.

Online speakers: click on the line's sound can show the current department.

Broadcasting speakers: click on this button to display the stereo is on the phone

Dial plan : Broadcast softphone dial pad , click the numbers enter the phone number and click call call, click Hang up that end of the call .

Queue waiting for members of the table : When is displayed call queue , waiting for the sound numbers.



call : Select any one is talking of sound, and then click to speak to insert into the current call.

Insert : Select a sound, and then click a single broadcast , the audio player on the selected voice file .
(MP3 audio files and supports wav format)

Play single : choose a department , click on the partition of the entire broadcasting sector to play audio files .

Play group: Select a sound, click alone Collection and play the contents of the selected audio player Collection and play in real time .

Broad single: audio input in real time on the way to collect and store the collected files in c: \ record inside .

Monitor: If sound bound video, click on the video , you can see the current sound of the monitor screen .

(Refer to bind video broadcasting system is fully described in the document " Camera Management " chapter)

Bridge talking : Select the desired split over the sound , and then click the demolition talk to forcibly demolished over the phone for calls .

Monitor: Sound choice is arbitrary call , click to listen , you can achieve broadcast soft phone, monitor conversations selected sound .

Strong hanging : Click strongly linked to forcibly terminate the ongoing call or audio broadcasts .

Stop play : Click this button to stop the ongoing broadcast audio .

Broad group : Choose a department , click on the partition propaganda , propaganda can be for the entire sector .

Intercom group : choose a department , click on the intercom partition , the entire department to achieve a dialogue between people .

(Propaganda : the dispatcher talking, sound passive listening , unable to speak the intercom : namely, scheduling and people talk to each other between sets)

Finish: Click the end , can end being Collection and play functions.

record: Click on the recording , you can now call any audio recording .(Audio file available in a broadcast system "Record Search" to view)

Handsfree Volume : Drag the mouse to move left and right to adjust the size of the speakerphone volume .

Microphone Volume : Drag the mouse to move left and right to adjust the size of the microphone volume .

Emergency Speakers TempGroup Play Interview Intercom Malfunction Video CDR SpeakerLog Roadway Setting Exit

2014-06-05 14:00:50

Speakers Info

All Speakers(30)

Online Speakers(4)

Broadcasting Speakers(0)

Dial Plan

Idle 00:00:00

Call C Hangup

1 2 3

4 5 6

7 8 9

* 0 #

Page 1 Of 1 Pages

Prev Page Next Page

<< All a b c >>

Temporary Group

605 605 [Online]

Add Group Clear Group

Group Broad Group Intercom

Group Play Group Interview

Finish

Add group : the need for a temporary online audio broadcast or group call to establish a temporary group .

Clear Group: Empty members of the provisional group.

Group Broad : click on the members of the provisional group were propaganda.


Group intercom : click on the members of the group were temporary intercom .

Group play : When you select a sound , add a temporary group , you can temporarily set the audio broadcast .

Group interview : When you select a sound , adding a temporary group , you can play the contents of the Collection and play real-time temporary groups.

Finish : End the current operation.

6, An appointment broadcasting Plays the specified sound file at a specified time

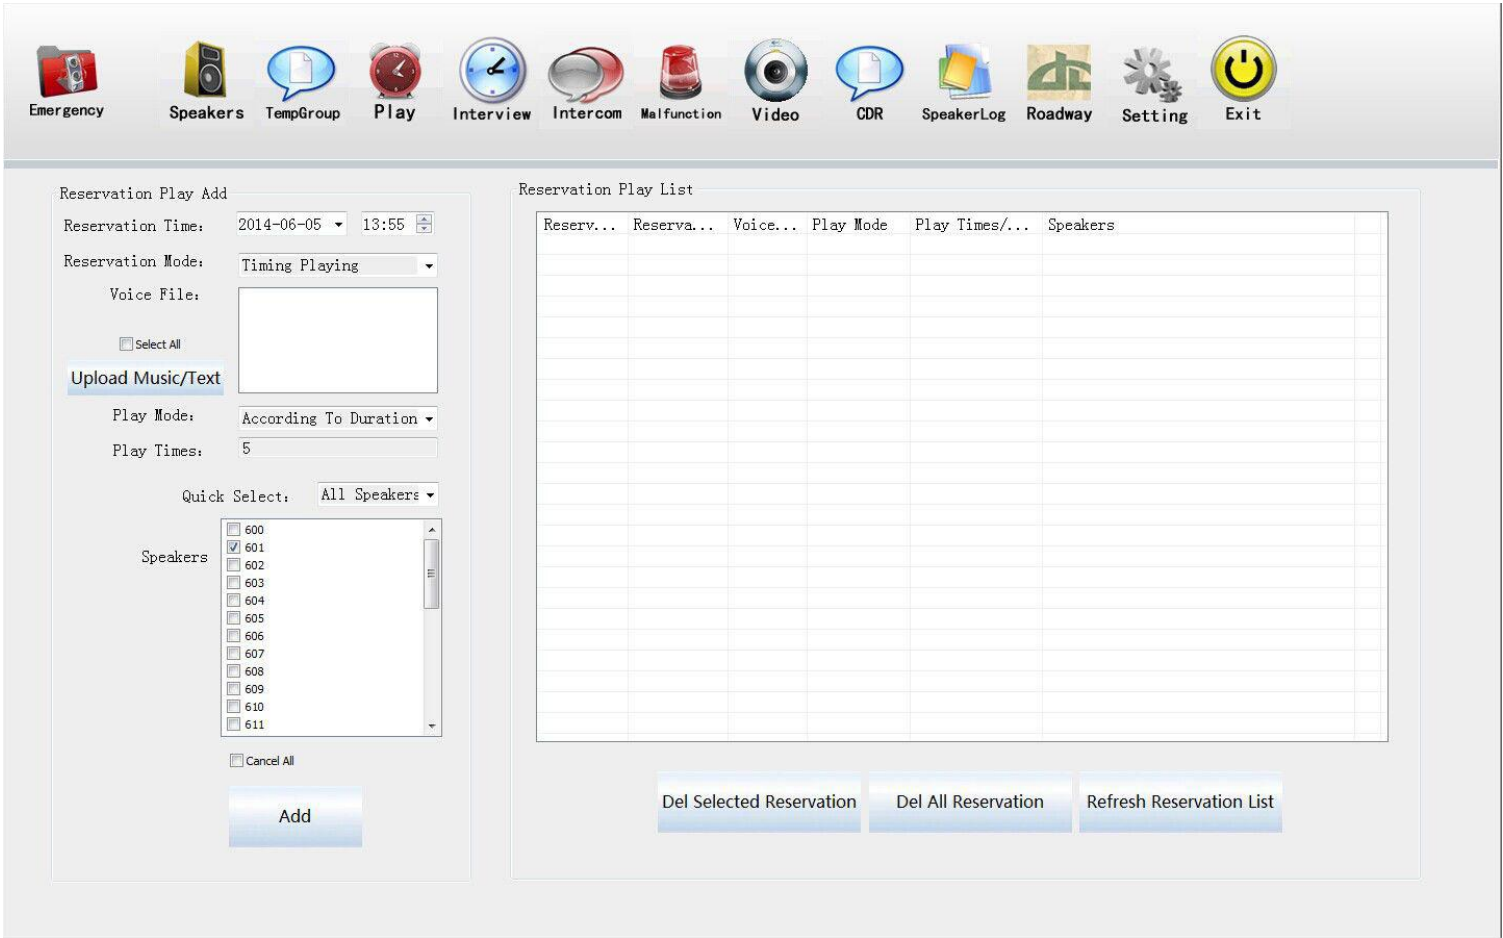

Reservation mode: there are four types of "now playing" and "timing playing", "daily", "weekly" select the appropriate mode for playback.

Voice files: audio files are stored in the c:\record directory, to select the file to play it in the booking broadcasting.

Play mode: there are two playing modes "by number" "long play on time" select the appropriate mode for playing the file limit.


Broadcast audio: you can see a list of all current audio. Quick selection: you can quickly select by sector. Add: click Add appointments for broadcasting related reservation information appears in the list, it means added successfully.

Del selected Reservation: appointment broadcast scheduled event in the list is selected, click this button, the reservation of broadcasting has been removed.

Del all reservation: click this button to delete all appointments.


Refresh Reservation list: to refresh the events that appear in the reservation list.

Specifies the sound to play. Collection and play audio sources can be set in system settings.



8. Intercom group

Setting intercom group, can achieve the intercom group members talking to each other.

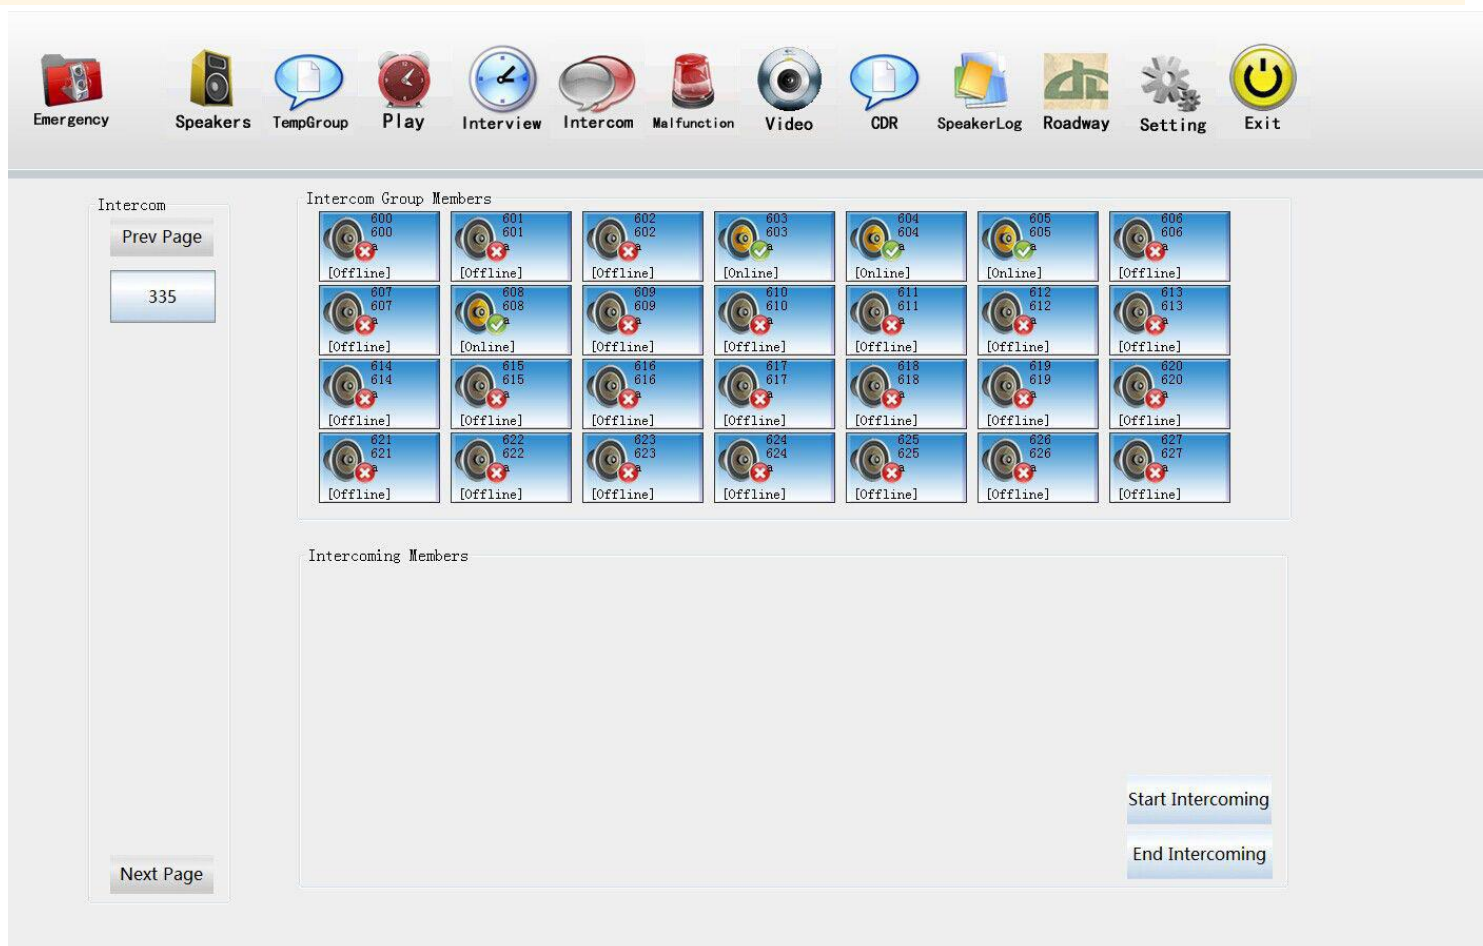

(Intercom group settings , you can access via the web broadcasting system , in broadcast management added .)

Intercom Group: Displays the current broadcasting system exists intercom group , click on the (next) one can see not show intercom group .


Intercom group member Status: Click intercom group name , that group members can see the status of the corresponding intercom .

Intercom state : If there intercom underway in this box , you can see are speaking members.

Began speaking : Broadcast Scheduling Software initiated intercom, corresponding group members to join the intercom and began speaking .End the intercom : end the current ongoing intercom .


9, emergency events

In case of emergency , depending on the event , manual transmission information to the specified terminal . For example, the designated terminal broadcast , send a fax to the specified terminal , the designated terminal texting , etc., has informed the circumstances of the incident.

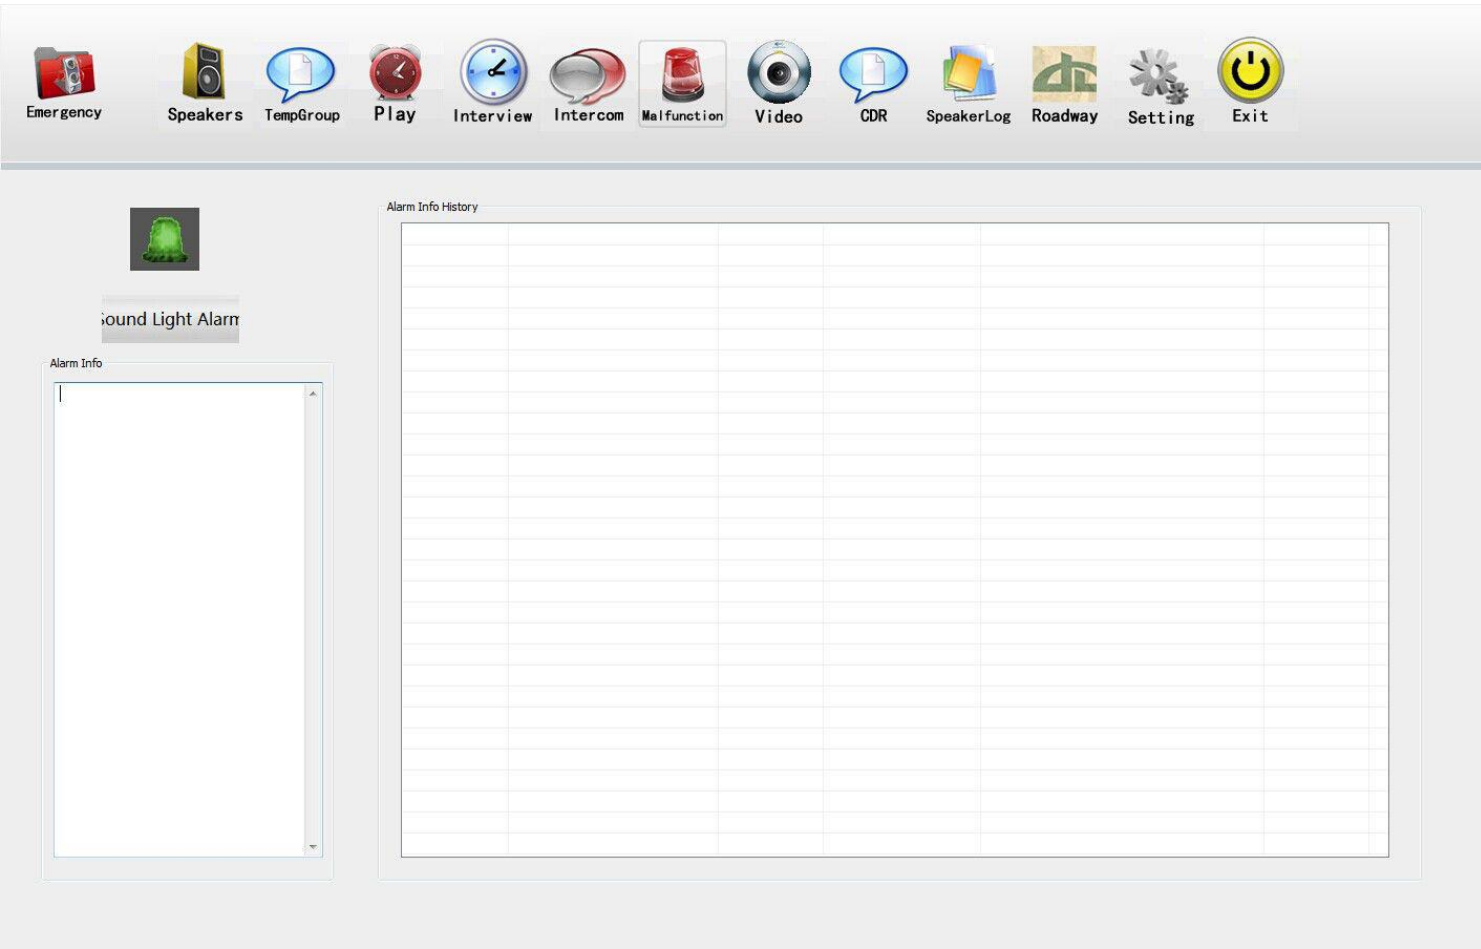

10. video list



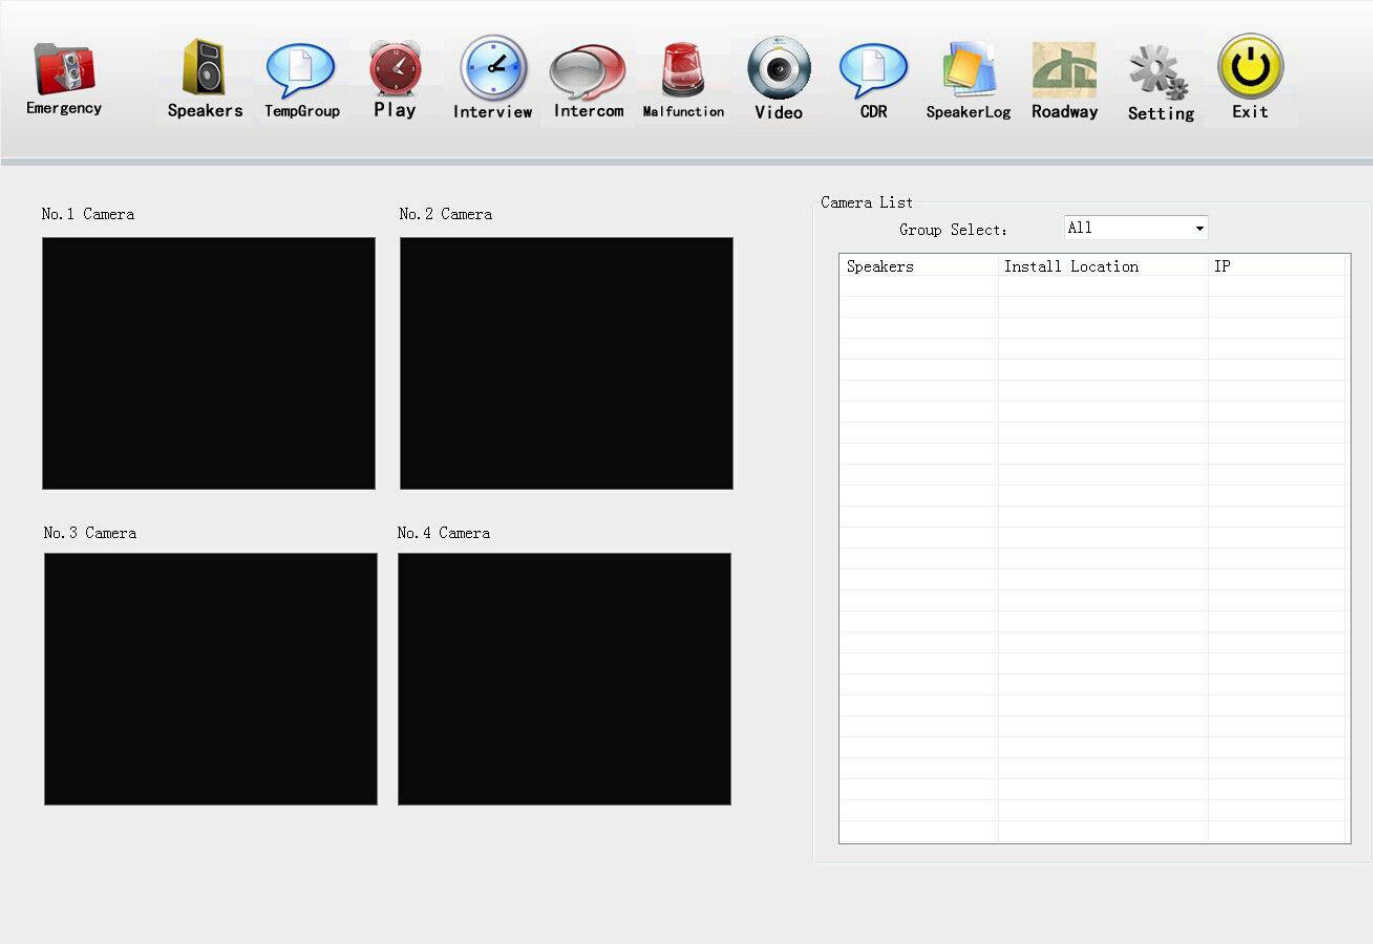










View real-time video monitoring screen.



Camera List : You can view the extension of the current camera is bound , select the camera , you can see on the left display window real-time video image of the selected camera . When the timeout four cameras , video display will cycle through the left windows.

11 , call recording

Check call records between terminals.

 Emergency  Speakers  TempGroup  Play  Interview  Intercom  Malfunction  Video  CDR  SpeakerLog  Roadway  Setting  Exit

All Record: CDR Numbers (34268)

Call Time	Caller Number	Called Number	Duration(Seconds)	Acknowledge Status	Recording
2014-06-05 14:55:20	200	604	4	ANSWERED	
2014-06-05 14:55:19	200	604	0	ANSWERED	
2014-06-05 14:53:25	603	605	25	ANSWERED	
2014-06-05 14:53:18	603	605	1	ANSWERED	
2014-06-05 14:53:15	603	605	1	ANSWERED	
2014-04-08 03:37:41	200	000441516015390	0	ANSWERED	
2014-04-08 03:37:40	200	900441516015390	0	ANSWERED	
2014-04-08 03:37:39	200	00441516015390	0	ANSWERED	
2014-04-07 23:11:47	605	801122455909920	0	ANSWERED	
2014-04-07 23:11:07	605	22455909920	0	ANSWERED	
2014-04-07 10:29:23	602	22478111180	0	ANSWERED	
2014-04-07 10:26:36	602	801122455909920	0	ANSWERED	
2014-04-07 10:23:48	602	0022455500524	1	ANSWERED	
2014-04-07 10:21:01	602	01122455500523	0	ANSWERED	
2014-04-07 10:18:13	602	901122455500500	1	ANSWERED	
2014-04-07 10:15:26	602	90022455202180	0	ANSWERED	
2014-04-07 10:12:38	602	922455114170	0	NO ANSWER	
2014-04-07 10:12:38	602	22455114170	1	ANSWERED	
2014-04-07 10:09:50	602	22455104407	1	ANSWERED	
2014-04-07 10:07:03	602	801122455102120	1	ANSWERED	
2014-04-07 10:04:16	602	00212892016300	0	ANSWERED	
2014-04-07 10:01:28	602	01117675033170	1	ANSWERED	
2014-04-07 09:58:41	602	901114735079020	0	ANSWERED	
2014-04-07 09:55:53	602	90014735078050	1	ANSWERED	

Operator

Search

Play Record

Page 1 Of 1224 Pages

Prev Page

Next Page

All records : See all terminals , record all time periods.

Today Record : View today's call log of all terminals.














The day before the record: See yesterday's record.

After a day of record: See tomorrow's Record.

Play Record : If the terminal is recorded, then the recorded message will be displayed in the recording field, click on the day of call recording , click Play voice , you can listen to this call recording.

12. Speaker logs

Through acoustic logging can view all terminal fault record.

EmergencySpeakersTempGroupPlayInterviewIntercomMalfunctionVideoCDRSpeakerLogRoadwaySettingExit

Speakers Malfunction Record 270 Items

Speaker	IP	Install Location	Malfunction Start Time	Malfunction End Time	Malfunction Type
601		601	2014-06-05 11:52:26		Malfunctioning
607		607	2014-03-03 18:30:35		Malfunctioning
606		606	2014-03-03 18:30:35		Malfunctioning
604	114.245.45.166:8112	604	2014-03-03 18:30:35	2014-06-05 13:54:19	Malfunction End
603	114.245.45.166:8111	603	2014-03-03 18:30:35	2014-06-05 13:52:50	Malfunction End
601	222.129.48.172:8065	601	2014-03-03 18:30:35	2014-03-06 13:29:00	Malfunction End
200	114.245.45.166:8110	200	2014-03-03 18:30:35	2014-06-05 13:52:37	Malfunction End
602		602	2014-02-28 11:24:29		Malfunctioning
615		615	2014-02-20 17:40:26		Malfunctioning
601	114.245.45.162:8060	601	2014-02-20 16:43:03	2014-02-20 16:43:48	Malfunction End
200	114.245.45.162:2266	200	2013-09-27 09:39:06	2014-02-20 16:16:31	Malfunction End
604	114.245.45.162:5060	604	2013-08-23 09:23:34	2014-02-20 16:45:16	Malfunction End
605	222.129.36.156:5060	605	2013-07-11 14:09:24	2014-06-05 13:45:16	Malfunction End
623		623	2013-07-11 12:13:19		Malfunctioning
617		617	2013-07-11 12:13:19		Malfunctioning
611		611	2013-07-11 12:13:19		Malfunctioning
610		610	2013-07-11 12:13:19		Malfunctioning
604	222.129.52.33:5060	604	2013-07-11 12:13:19	2013-07-11 14:10:13	Malfunction End
601	114.245.45.162:8060	601	2013-07-11 12:13:19	2014-02-20 16:42:19	Malfunction End
200	114.245.36.187:5060	200	2013-07-11 12:13:19	2013-08-23 09:24:16	Malfunction End
620		620	2013-06-09 11:35:41		Malfunctioning
602	183.203.164.148:...	602	2013-06-09 10:20:17	2014-02-28 11:17:04	Malfunction End
200	192.168.1.13:42250	200	2013-06-09 10:10:27	2013-06-09 10:20:17	Malfunction End
601	192.168.1.13:17614	601	2013-06-08 17:57:35	2013-06-09 10:20:24	Malfunction End
200	192.168.1.147:5060	200	2013-06-08 17:21:01	2013-06-08 17:21:18	Malfunction End
601	192.168.1.13:46906	601	2013-06-08 17:19:25	2013-06-08 17:19:45	Malfunction End

Speakers All Malfunction Type All Type Begin Time

☐ Start Time 2014/ 6/ 5

☐ End Time 2014/ 6/ 5

Search


Audio : Select audio, Sound fault conditions specified in the query .

Failure type : There are two types of faults and failures end , You can choose according to the contents of the query.

Failure start date end date and time and trouble : You can choose two different dates, To check the fault condition within the specified date.

13. Roadway Figure

Roadway figure can be added in the radio and the client, so that sound intuitive management.

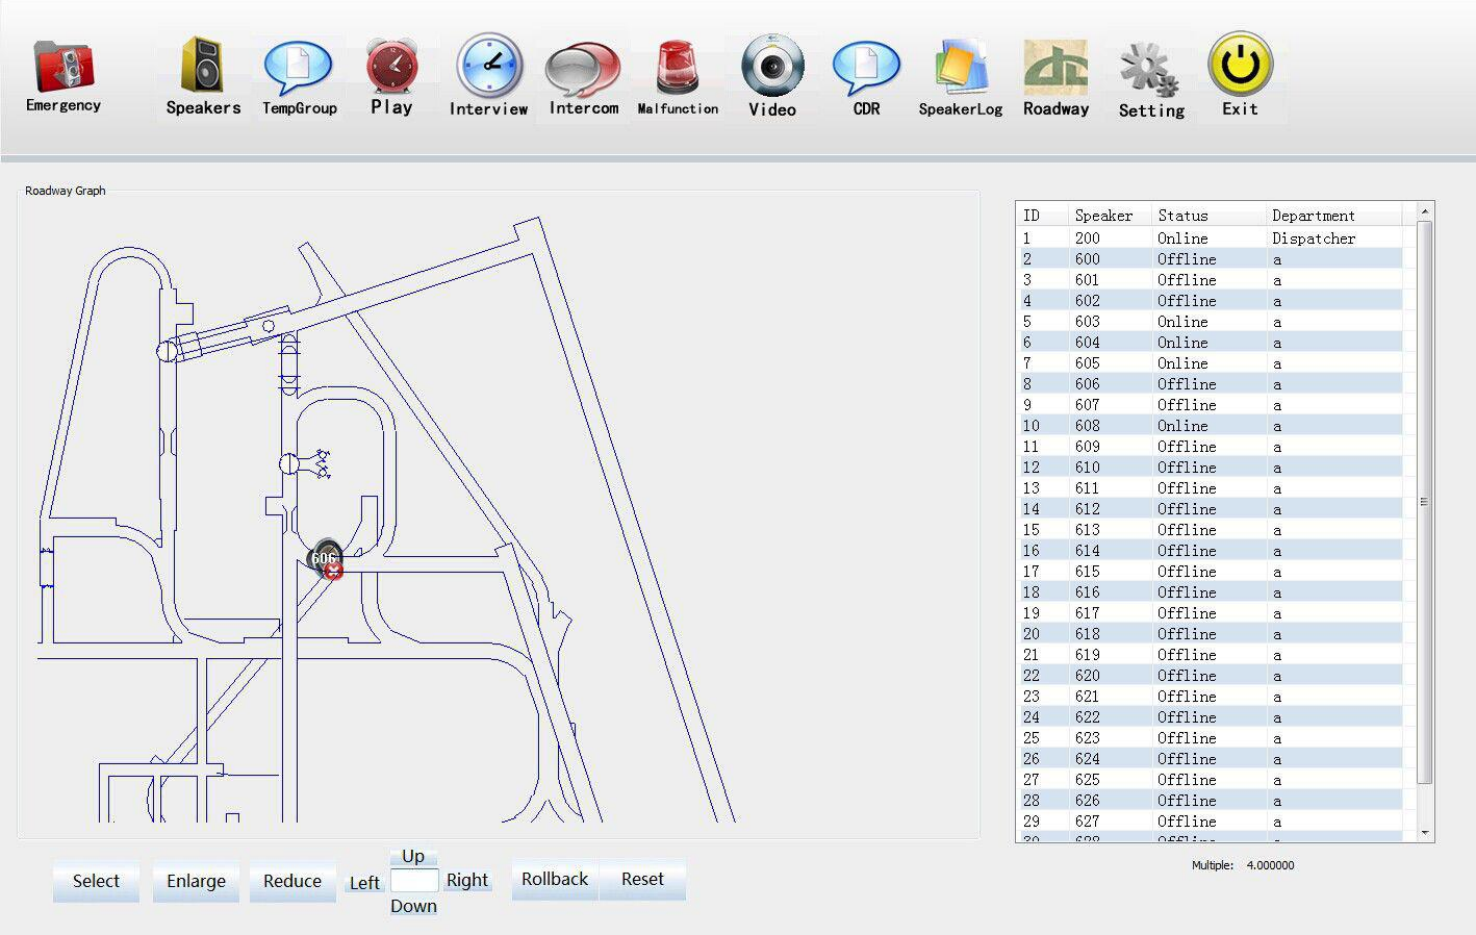

Click on the select, roadway on the drawing to the client on the computer, as shown in figure. The mouse wheel can enlarge or shrink the figure of roadway.

Roadway figure to add audio: in on the right side of the sound, click the choose to add a sound. Then the location specified in the figure of roadway, double click the mouse, you can add audio to figure on the roadway.

Emergency
 Speakers
 TempGroup
 Play
 Interview
 Intercom
 Malfunction
 Video
 CDR
 SpeakerLog
 Roadway
 Setting
 Exit

Roadway Graph

Select

Enlarge

Reduce

Left

Up

Right

Rollback

Reset

Down

ID	Speaker	Status	Department
1	200	Offline	Dispatcher
2	600	Offline	a
3	601	Offline	a
4	602	Offline	a
5	603	Offline	a
6	604	Offline	a
7	605	Online	a
8	606	Offline	a
9	607	Offline	a
10	608	Online	a
11	609	Offline	a
12	610	Offline	a
13	611	Offline	a
14	612	Offline	a
15	613	Offline	a
16	614	Offline	a
17	615	Offline	a
18	616	Offline	a
19	617	Offline	a
20	618	Offline	a
21	619	Offline	a
22	620	Offline	a
23	621	Offline	a
24	622	Offline	a
25	623	Offline	a
26	624	Offline	a
27	625	Offline	a
28	626	Offline	a
29	627	Offline	a
30	628	Offline	a

Multiple: 4.000000

Right click on the add on acoustics, in the drop-down list.

Call the sound: to call the sound operation.

Stop calling: hang up the sound current.

Broadcast voice: the sound play music files specified.

Stop playing: stop the current broadcast.

Delete sound: delete the current sound.

14. exit

Click the exit button to exit the broadcast platform