

# **Entertainment Center User Guide**

# Contents


<b>Entertainment Center Overview.....</b>	<b>1</b>
Magnavox 32ME303V 32" 720P 60HZ LED Television.....	1
Pyle PSBV200BT 300 Watt Bluetooth Sound Bar.....	2
Playstation 3 Game Console.....	3
iPhone 4.....	5
Digital Antenna.....	5
<b>Turning on the Pyle Sound Bar.....</b>	<b>7</b>
<b>Turning on the Magnavox Television.....</b>	<b>8</b>
<b>Turning on the Playstation 3 Game Console.....</b>	<b>9</b>
<b>Watch a Movie on DVD or Blu-Ray.....</b>	<b>10</b>
<b>Watch YouTube.....</b>	<b>11</b>
<b>Watch Netflix.....</b>	<b>12</b>
<b>Watch Amazon Video.....</b>	<b>13</b>
<b>Watch Broadcast Television.....</b>	<b>14</b>
<b>Play Music From a Playlist on the iPhone 4.....</b>	<b>15</b>

# Entertainment Center Overview

This overview will orient the user to the components of the entertainment center in the common area. This is for users who know how to operate some electronics but are inexperienced with the specific layout of this entertainment center.

The entertainment center in the living room is composed of five components:

Figure 1. Entertainment Center Layout

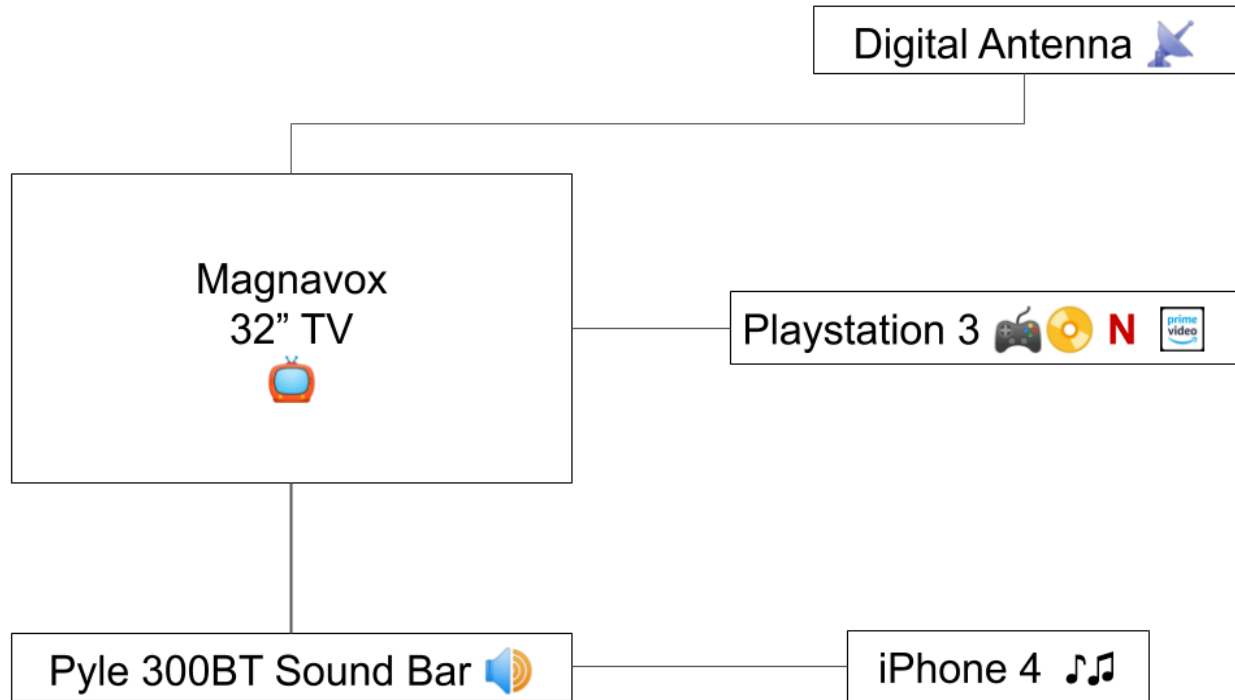

[Magnavox 32" TV \(on page 1\)](#)

[Pyle 300BT Sound Bar \(on page 2\)](#)

[Playstation 3 Game Console \(on page 3\)](#)

[iPhone 4 \(on page 5\)](#)

[Digital Antenna \(on page 5\)](#)

## Magnavox 32ME303V 32" 720P 60HZ LED Television

The Magnavox 32ME303V 32" 720P 60HZ LED television serves as the entertainment center's video device.



The Magnavox 32ME303V 32" 720P 60HZ LED television can play content from the Playstation 3 as well as receive digital and analog broadcast signals from the digital antenna.

To change input settings, press the Source button repeatedly until the desired setting appears in the upper left corner of the television screen.

### Console Controls


Button	Location	Description
Power	Toggle button, center console, bottom of television	Powers the television on and off.
Source	Toggle button, center console, bottom of television	Changes the input options for the television.
Volume Up/Down	Toggle buttons, center console, bottom of television	Raises and lowers the television volume.
Channel Up/Down	Toggle buttons, center console, bottom of television	Changes the broadcast channel that the television will receive.

### Input Settings

Input Setting	Location	Description
HDMI	Source button, center console, bottom of television	Switches the television to display video content from the Playstation3 game console.
TV	Source button, center console, bottom of television	Switches the television to display video content from the digital antenna.

## Pyle PSBV200BT 300 Watt Bluetooth Sound Bar

The Pyle PSBV200BT 300 Watt Bluetooth sound bar serves as the entertainment center's speaker system.

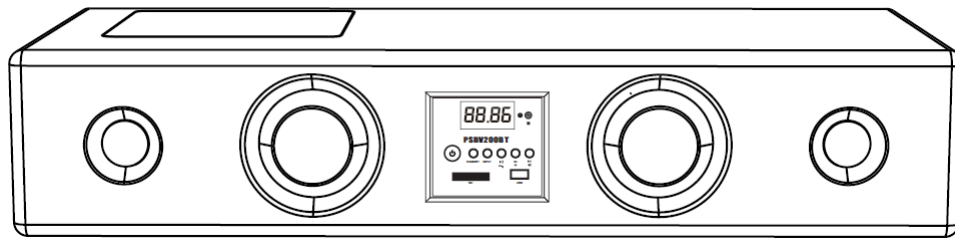

The Pyle PSBV200BT 300 Watt Bluetooth sound bar can play sound from all of the other components (Magnavox TV, Playstation 3, iPhone 4).

To change input settings, press the Input button on the central console repeatedly until the desired setting appears in the LCD display.

### Console Controls

Button	Location	Description
Power	Large toggle button, center console, left side	Powers the sound bar on and off.
Standby	Toggle button, center console, second from the left.	Puts the sound bar in standby mode.
Input	Toggle button, center console, third from the left.	Changes the audio input selection for the sound bar. Options are: AUX1, AUX2, PC/MP3/FM ANT, USB, and BLUE (Bluetooth).
Play	Toggle button, center console, third from the right.	Plays or pauses the current media input device connected to the sound bar.
Pre / VOL-	Toggle button, center console, second from the right.	Raises the sound bar volume.
Next / VOL+	Toggle button, center console, right side.	Lowers the sound bar volume.

### Input Settings

Input Setting	Location	Description
USB	Input button, center console	Switches the sound bar to receive audio from the iPhone via USB connection.
AUX 1	Input button, center console	Switches the sound bar to receive audio from the television.

## Playstation 3 Game Console

The Playstation 3 game console serves as the primary video player.



- The Playstation 3 game console requires access to the Internet.
- You must use the Playstation 3 remote control to set up and access these functions.

The Playstation 3 game console allows you to play:

- Video games
- DVDs
- Blu-Ray Disc

You can also use the Playstation 3 game console to access online video services:

- YouTube
- Netflix
- Amazon Video

To change the input, use the arrow buttons on the Playstation 3 remote control to navigate the menu of available options.

### Media settings

Input Setting	Location	Description
DVD/Blu-Ray	Video > media disc	Loads a media file inserted in the disc player. Does not require a functioning online connection.
Netflix	Video > Netflix	Connects to Netflix. Requires a functioning online connection.
YouTube	Video > YouTube	Connects to YouTube. Requires a functioning online connection.
Amazon Video	Video > Amazon Video	Connects to Amazon Video. Requires a functioning online connection.
Video Game	Games > game disc	Loads a game disc inserted in the disc player. Does not require a

Input Setting	Location	Description
		functioning online connection unless otherwise indicated.

## iPhone 4

The iPhone 4 functions as a music server.



The iPhone 4 functions as a music server, and is loaded with roughly 6 GB of music files covering a variety of easy listening, ambient, and soft rock music. It is connected to the sound bar by a USB cable.

To access the music controls:

1. Turn on the iPhone 4.
2. Unlock the iPhone 4 screen. To do that, slide your finger across the screen from left to right.
3. Click on the Music icon at the bottom of the screen of the iPhone 4.
4. Browse the music menu.

## Digital Antenna

The digital antenna receives digital and analog broadcast television signals.



Input	Location	Description
Analog	Telescoping aerial antenna, at the top of the unit	Manipulate the direction of each aerial to improve reception of desired signal.
Digital	Dial, located at the base of the unit	Turn slowly, one click at a time, to improve reception of desired signal.



# Turning on the Pyle Sound Bar

This explains how to activate the Pyle PSBV200BT 300 Watt Bluetooth sound bar.

Users should be familiar with consumer electronics.

1. Press the round Power button on the left side of the center console. The device will emit an audible series of tones. The current input setting will appear on the LCD display in the center console.
2. Select the desired input source. To do that, press the Input button on the central console repeatedly until the desired setting appears on the LCD display in the center console.

## Related information

- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)

# Turning on the Magnavox Television

This explains how to activate the Magnavox 32ME303V 32" 720P 60HZ LED television.

- Users should be familiar with consumer electronics.
- The sound bar must be powered on.

1. Press the power button on the right side of the bottom of the television.
2. Change the television input. To do that, press the Input button on the left side of the bottom of the television until the desired input appears in the upper left corner of the television screen.

## Related information

- [Magnavox 32ME303V 32" 720P 60HZ LED Television \(on page 1\)](#)
- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)

# Turning on the Playstation 3 Game Console

This explains how to activate the Playstation 3 game console.

- Users should be familiar with consumer electronics, remote controls, and the Playstation 3 menu system.
- The Playstation 3 game console requires access to the Internet.
- You must use the Playstation 3 remote control to set up and access these functions.
- The television and sound bar must be powered on.

1. Press the power button on the right side of the black ridge on the front of the Playstation 3 game console.
2. Change the television input to HDMI. To do that, press the Source button in the central console of the bottom of the television until HDMI appears in the upper left corner of the television screen. The Playstation 3 screen will appear on the screen.
3. Use the Playstation remote control to select the "User" profile. The Playstation menu will appear on the screen.

## Related information

- [Playstation 3 Game Console \(on page 3\)](#)
- [Magnavox 32ME303V 32" 720P 60HZ LED Television \(on page 1\)](#)
- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)

# Watch a Movie on DVD or Blu-Ray

This explains how to set up the entertainment center to watch media on either a DVD or Blu-Ray disc.

- Users should be familiar with consumer electronics, remote controls, the Playstation 3 menu system, DVDs, Blu-ray discs, and DVD/Blu-ray players.
- The Playstation 3 game console requires access to the Internet.
- You must use the Playstation 3 remote control to set up and access these functions.
- The television, sound bar, and Playstation 3 game console must be powered on.

The Playstation 3 is capable of playing both DVDs and Blu-ray discs.

1. Open the disc tray on the Playstation 3. To do that, press the middle of the black ridge on the front of the console. The sliding disc cover on top will slide open to the left, exposing the disc player.
2. Carefully place the DVD or Blu-Ray disc in the disc player. To do that, slide the hole in the middle of the central plastic hub onto the spindle of the disc player.
3. Close the disc tray. To do that, manually slide the disc cover from the left to the right. Once the disc cover is closed, you will hear a gentle click from the device
4. Wait 5-15 seconds for the disc player to spin up the disc. The movie will begin playing.
5. Control the movie playback using the Playstation 3 remote control.

## Related information

- [Playstation 3 Game Console \(on page 3\)](#)
- [Magnavox 32ME303V 32" 720P 60HZ LED Television \(on page 1\)](#)
- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)

# Watch YouTube

This explains how to set up the entertainment center to connect to YouTube.

- Users should be familiar with consumer electronics, remote controls, YouTube, and the Playstation 3 menu system.
- The Playstation 3 game console requires access to the Internet.
- You must use the Playstation 3 remote control to set up and access these functions.
- The television, sound bar, and Playstation 3 game console must be powered on.

The Playstation 3 is capable of connecting to and browsing the online media service YouTube.

1. Use the Playstation 3 remote control to navigate to Video settings.
2. Scroll through the Video options. To do that, press the up and down arrow keys on the Playstation 3 remote control.
3. Select the YouTube logo and press the Enter key on the Playstation 3 remote control. The YouTube app will appear on the screen.
4. Navigate the YouTube interface using the Playstation 3 remote control.

## Related information

- [Playstation 3 Game Console \(on page 3\)](#)
- [Magnavox 32ME303V 32" 720P 60HZ LED Television \(on page 1\)](#)
- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)

# Watch Netflix

This explains how to set up the entertainment center to connect to Netflix.

- Users should be familiar with consumer electronics, remote controls, Netflix, and the Playstation 3 menu system.
- The Playstation 3 game console requires access to the Internet.
- You must use the Playstation 3 remote control to set up and access these functions.
- The television, sound bar, and Playstation 3 game console must be powered on.

The Playstation 3 is capable of connecting to and browsing the online media service Netflix.

1. Use the Playstation 3 remote control to navigate to Video settings.
2. Scroll through the Video options. To do that, press the up and down arrow keys on the Playstation 3 remote control.
3. Select the Netflix logo and press the Enter key on the Playstation 3 remote control. The Netflix app will appear on the screen.
4. Select the "User" profile. To do that, click the left and right arrow keys on the Playstation 3 remote control and then pressing Enter.
5. Navigate the Netflix interface using the Playstation 3 remote control.

## Related information

- [Playstation 3 Game Console \(on page 3\)](#)
- [Magnavox 32ME303V 32" 720P 60HZ LED Television \(on page 1\)](#)
- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)

# Watch Amazon Video

This explains how to set up the entertainment center to connect to Amazon Video.

- Users should be familiar with consumer electronics, remote controls, Amazon Video, and the Playstation 3 menu system.
- The Playstation 3 game console requires access to the Internet.
- You must use the Playstation 3 remote control to set up and access these functions.
- The television, sound bar, and Playstation 3 game console must be powered on.
- You will need an access code to make any purchases.

The Playstation 3 is capable of connecting to and browsing the online media service Amazon Video.

1. Use the Playstation 3 remote control to navigate to Video settings.
2. Scroll through the Video options. To do that, press the up and down arrow keys on the Playstation 3 remote control.
3. Select the Amazon Prime logo and press the Enter key on the Playstation 3 remote control. The Amazon Video app will appear on the screen.
4. Navigate the Amazon Video interface using the Playstation 3 remote control.

## Related information

- [Playstation 3 Game Console \(on page 3\)](#)
- [Magnavox 32ME303V 32" 720P 60HZ LED Television \(on page 1\)](#)
- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)

# Watch Broadcast Television

This explains how to set up the entertainment center to connect to broadcast television.

- Users should be familiar with broadcast television, antennas, and consumer electronics.
- The television and the sound bar must be powered on.

The Magnavox television is connected to a digital antenna, and is capable of receiving digital and analog broadcast signals.

1. Change the television input to TV. To do that, press the Source button in the central console on the bottom of the television until TV appears in the upper left corner of the television screen. The current channel and its broadcast will appear on the screen.
2. Tune to the desired channel. To do that, press the Channel up and down buttons in the central console.
3. Adjust the digital antenna to improve reception as needed.

## Related information

- [Magnavox 32ME303V 32" 720P 60HZ LED Television \(on page 1\)](#)
- [Digital Antenna \(on page 5\)](#)
- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)



# Play Music From a Playlist on the iPhone 4

This explains how to set up the entertainment center to play music from the dedicated iPhone music server.

- Users should be familiar with consumer electronics, smartphones, and navigating a menu of playlists.
- The sound bar must be powered on.
- Check that the iPhone is properly connected to the sound bar.
- Check that the iPhone has sufficient power.

There is an iPhone 4 connected to the front of the Pyle sound bar by a USB cable.

1. Press the Input button on the Pyle sound bar until the display shows USB.
2. Turn on the iPhone 4.
3. Unlock the iPhone 4 screen. To do that, slide your finger across the screen from left to right.
4. Click on the Music icon at the bottom of the screen of the iPhone 4.
5. Browse the music menu.
6. Click on the title of the desired playlist.
7. Indicate whether or not you want the playlist to repeat. To do that, click the "Repeat playlist" button on the lower left corner of the screen until the desired setting is highlighted.
8. Indicate whether or not you want the playlist to play in order or be shuffled. To do that, click the "Shuffle" button on the lower right corner of the screen until the desired setting is highlighted.

## Related information

- [Pyle PSBV200BT 300 Watt Bluetooth Sound Bar \(on page 2\)](#)
- [iPhone 4 \(on page 5\)](#)