



# SYSTEM SETUP

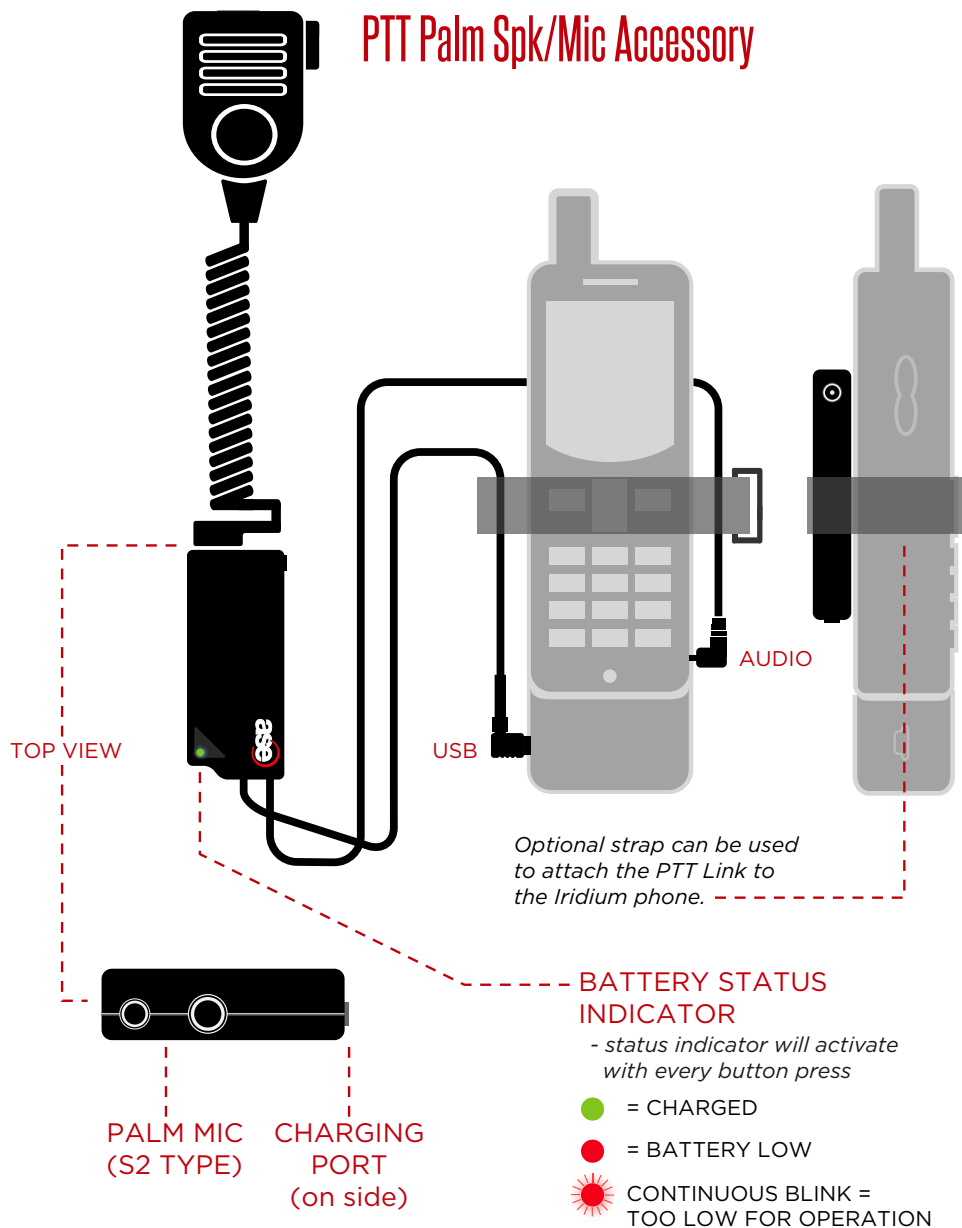

**NOTE:** PTT Link uses the Iridium phone charger. Charge every 40 Hours of use!


# QUICK START GUIDE

## 1 ACTIVATION

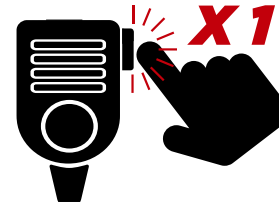

Single button press and hold will wake unit and activate communication with Iridium phone for a talk request.

## 2 AUDIO LEVEL CHANGE

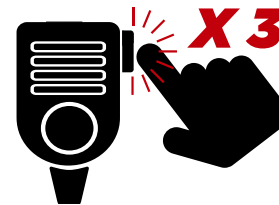


Three rapid button presses will toggle the PTT Link unit into a louder Palm Mic audio state. Three additional rapid button presses will toggle the unit back to standard audio levels. Audio level will reset every time the unit is deactivated.

☀ **X3** = LOUDER AUDIO LEVEL

☀ **X3** = STANDARD AUDIO LEVEL

## 3 UNIT DEACTIVATION


## \* IMPORTANT

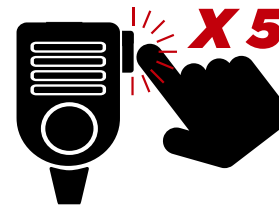

**The phone and PTT Link will continue to be active and use battery until the PTT Link unit is deactivated.**

Five rapid button presses will deactivate the PTT Link unit. If the Iridium phone is in a 'power down' state the phone will also be deactivated

Unplugging the USB will deactivate both the PTT Link unit and the Iridium phone if the phone is in a 'power down' state.

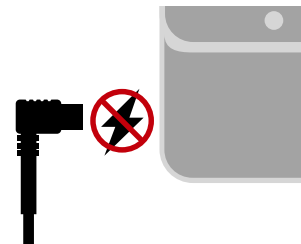

BE PREPARED. STAY CONNECTED.