


-The valve(BA506) located in P/R D/B to be local-hydraulically operated.  
See page 32/48 for the detail.

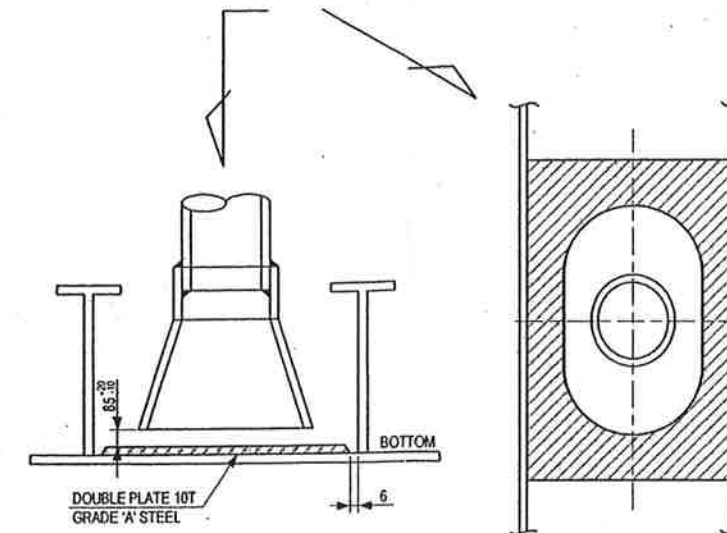

NOTE : 800-2-512-2-026-2-017-2-012-2-013-2-014 : G.R.P PIPE