


This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or motor. The components are numbered 1 through 74. The diagram shows the following sub-assemblies and parts:

- Top Housing (64):** The main upper enclosure, with mounting brackets (65, 66, 67) and a base plate (68).
- Motor Assembly (36-37):** Located at the top right, consisting of a motor unit (36) and a drive shaft (37).
- Shaft and Gear Train (51-63):** A central shaft (51) with multiple gears (52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63) and bearings (52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63).
- Impeller Assembly (30-35):** A vertical assembly on the right side, including an impeller (30) and a housing (31, 32, 33, 34, 35).
- Base and Mounting (16-17):** The bottom housing (16) and mounting feet (17).
- Internal Components (1-15):** Various internal parts including a fan (1), gears (2, 3, 4, 5, 6, 7), and a central shaft (8, 9, 10, 11A, 12, 13, 14, 15).
- Accessories (70-74):** Additional components like a control box (70), a switch (71), a plug (72), a cable (73), and a connector (74).

## TR8SH SPARE PARTS LIST

Part No.	Part Name	Part No.	Part Name	Part No.	Part Name
1	front plate	26	electric box	51	φ35xφ25x7 oil seal
2	shaft protector A	27	electric box cover	52	reversing small gear
3	nut	28	fan cover	53	φ20 C-type snap ring
4	blade	29	φ12 C-type snap ring	54	φ35 C-type snap ring
5	spacer	30	fan	55	6202 bearing
6	square mandril	31	motor back cover	56	M5x20 screw
7	left stripper comb	32	ripple gasket	57	M6x20 screw
8	hand wheel	33	6201 bearing	58	5x5x12 flat key
9	back plate	34	rotor	59	6x6x15 flat key
10	right closing ring	35	motor shaft	60	reversing big gear shaft
11	pin	36	stator	61	reversing big gear
12	right shaft	37	switch	62	φ15 C-type snap ring
13	shaft protector B	38	connect plate	63	microswitch
14	M5x10 screw	39	s/s case	64	s/s shield
15	bracket	40	spindle	65	connect bracket
16	base plate	41	M6 nut	66	20x15x3 magnet
17	rubber foot	42	motor screw	67	magnet base
18	M8x20 screw	43	gear box cover	68	guide plate
19	M10 nut	44	6804 bearing	69	left closing ring
20	worm	45	worm gear	70	knob
21	φ24xφ15x7 oil seal	46	spacer	71	round mandril
22	motor front cover	47	6805 bearing	72	right stripper comb
23	6002 bearing	48	M5x16 screw	73	lock
24	motor foot	49	gear box	74	left shaft
25	motor case	50	output shaft	75	

## TR8MH Exploded view

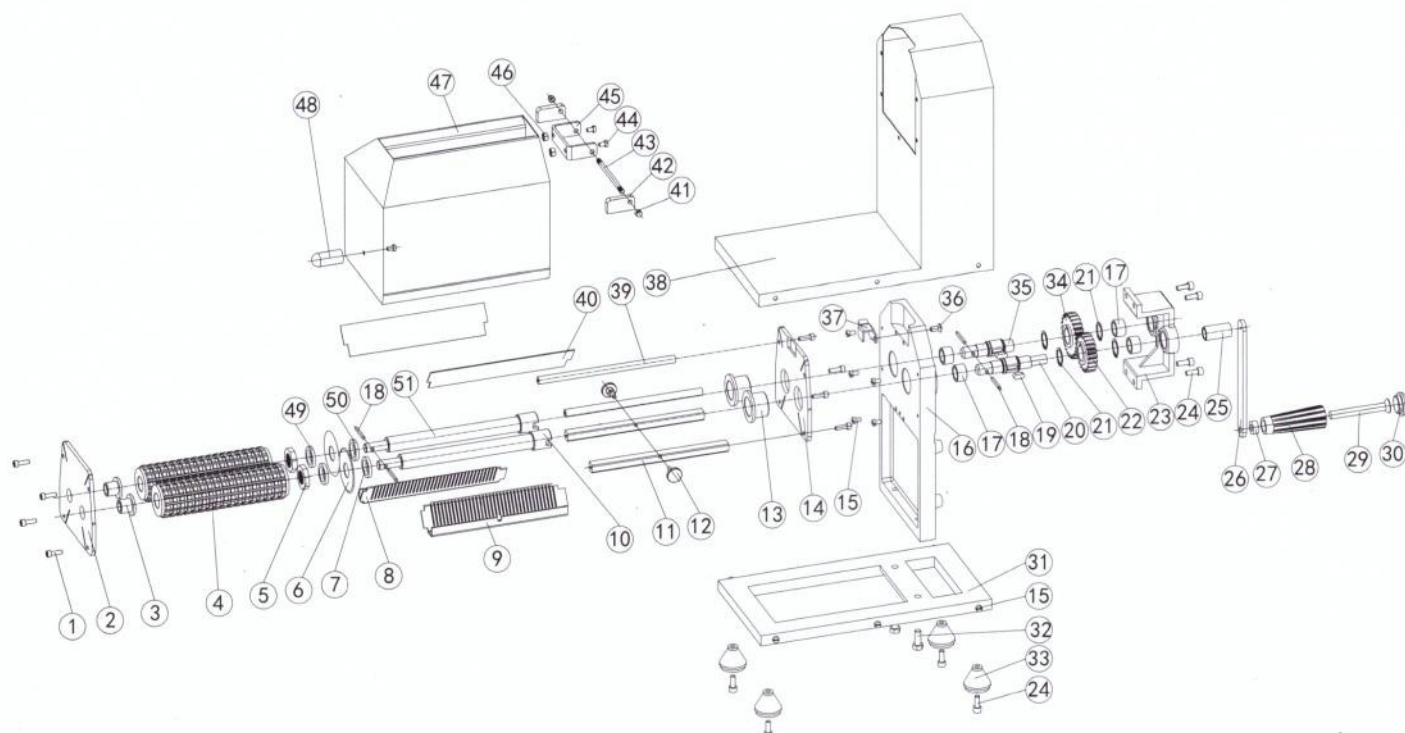

## TR8MH SPARE PARTS LIST

Part No.	Part Name	Part No.	Part Name	Part No.	Part Name	Part No.	Part Name
1	M5x16 screw	14	back plate	27	M10 nut	40	guide plate
2	front plate	15	M5x10 screw	28	knob	41	M6 nut
3	shaft protector A	16	bracket	29	screw	42	connect plate
4	roller	17	pin protector	30	knob cover	43	spindle
5	nut	18	pin	31	base plate	44	M5x16 screw
6	blade	19	6x6x15 flat key	32	M8x20 screw	45	connect bracket
7	right closing ring	20	output shaft	33	rubber foot	46	nut
8	right stripper comb	21	φ20 C-type snap ring	34	reversing big gear	47	s/s shield
9	left stripper comb	22	reversing small gear	35	reversing big gear shaft	48	knob
10	left shaft	23	bearing block	36	M5x20 screw	49	spacer
11	square mandril	24	M6x16 screw	37	lock	50	left closing ring
12	hand wheel	25	sleeve	38	case	51	right shaft
13	shaft protector B	26	handle	39	round mandril		