


Power fail Alarm configuration

First of all login into the device and go to management→ fault Alarm→ Enable the fault alarm output→Action check box will be on → PWR1 & PWR2 ON→ save and apply

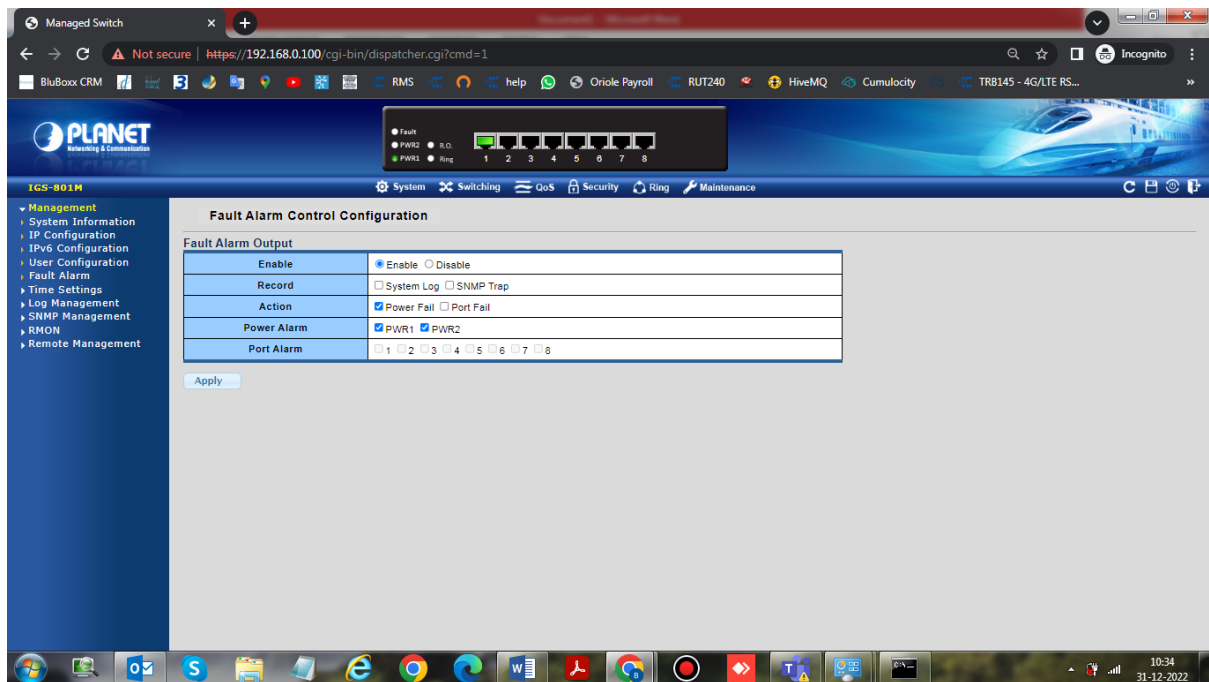

Save configuration as startup configuration and apply

