


Configuration Backup

Log into device and go to maintenance → Back up manager → select backup type as per below → select Image as per below → click on Backup

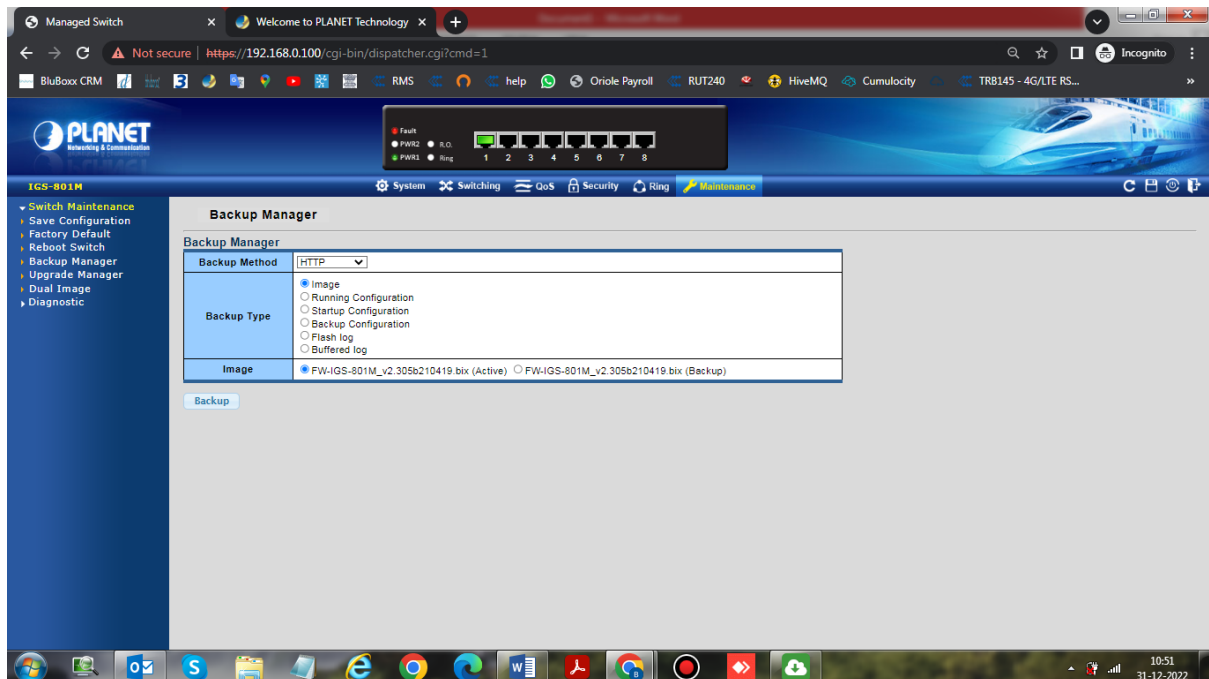

This function allows backup of the current image or configuration of the Industrial Managed Switch to the local management station. The Backup Manager screen in Figure 4-15-3 appears.

Backup Manager	
Backup Method	TFTP
Server IP	<input type="text"/> (IPv4 or IPv6 Address)
Backup Type	<p><input checked="" type="radio"/> Image</p> <p><input type="radio"/> Running Configuration</p> <p><input type="radio"/> Startup Configuration</p> <p><input type="radio"/> Backup Configuration</p> <p><input type="radio"/> Flash log</p> <p><input type="radio"/> Buffered log</p>
Image	<p><input type="radio"/> IGS-4215-16T2S_v1.305b191217.bix (Backup)</p> <p><input checked="" type="radio"/> IGS-4215-16T2S_v1.305b191219.bix (Active)</p>

Backup

The page includes the following fields:

Object	Description
• Backup Method	Select backup method from this drop-down list.
• Server IP	Fill in your TFTP server IP address.
• Backup Type	Select backup type.
• Image	Select active or backup image.

Buttons

Backup: Click to back up image, configuration or log.

The below info is for upgrade the backup file into device

4.15.4 Upgrade Manager

This function allows reloading of the current image or configuration of the Industrial Managed Switch to the local management station. The Upgrade Manager screen in [Figure 4-15-4](#) appears.

Upgrade Manager

Upgrade Method	TFTP ▾
Server IP	<input type="text"/> (IPv4 or IPv6 Address)
File Name	<input type="text"/>
Upgrade Type	<input checked="" type="radio"/> Image <input type="radio"/> Startup Configuration <input type="radio"/> Backup Configuration <input type="radio"/> Running Configuration
Image	<input type="radio"/> (Backup) <input checked="" type="radio"/> (Active)

Upgrade

The page includes the following fields:

Object	Description
• Upgrade Method	Select upgrade method from this drop-down list.
• Server IP	Fill in your TFTP server IP address.
• File Name	The name of firmware image or configuration.
• Upgrade Type	Select upgrade type.
• Image	Select active or backup image.

Buttons

Upgrade : Click to upgrade image or configuration.