

USER GUIDE


(Guidelines for presentation)

Room Meeting 1

By Dika

Presentation.

Only Use 1 Laptop

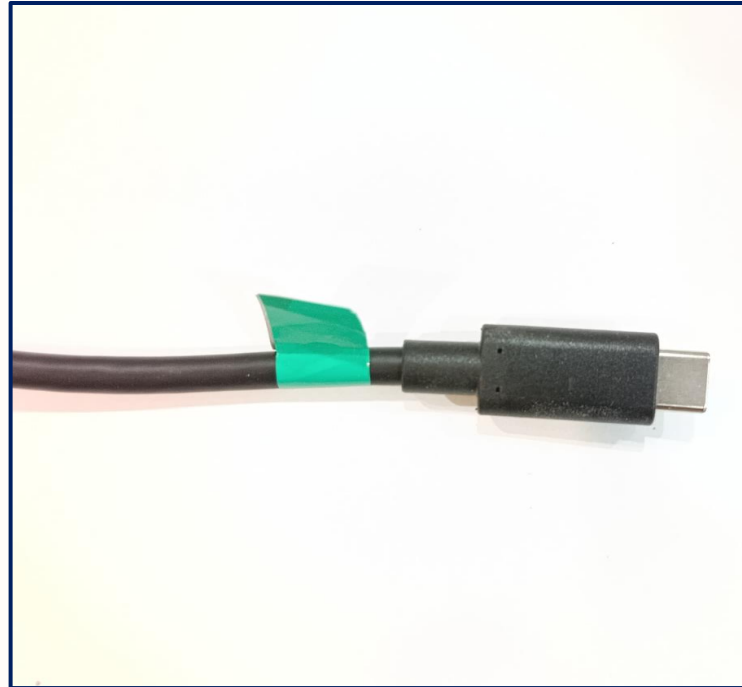

1.

Connect your laptop with USB C cable

The laptop will be directly connected to the TV and Projector. The laptop also gets an internet connection. The laptop battery will be automatically charged.

or




2.

Connect your laptop with HDMI cable (cable with yellow label)

The laptop will be directly connected to the TV and Projector. The laptop does not have an internet connection. The laptop is also not charging.

Use 2 Laptops

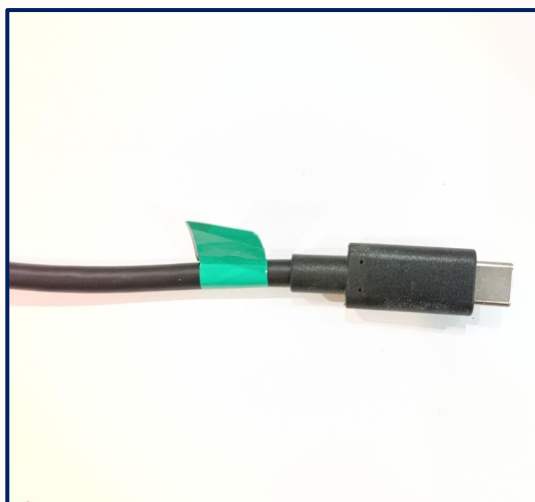


1. Connect your laptop with USB C cable

The laptop will be directly connected to the TV. The laptop also gets an internet connection. The laptop battery will be automatically charged.



2. Connect your laptop with HDMI cable (unlabeled cable)


The laptop will be directly connected to the Projector. The laptop also gets an internet connection. The laptop battery will be automatically charged.

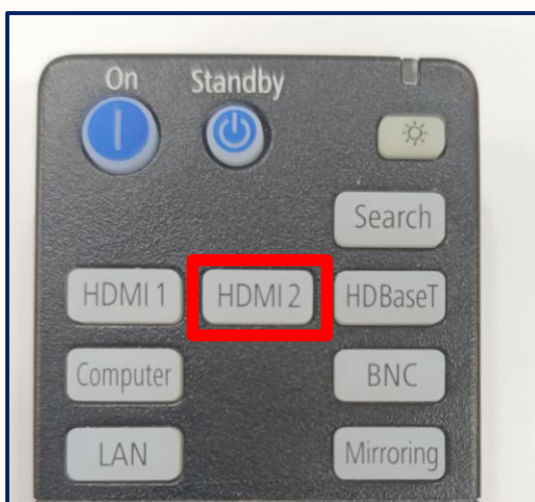

3. Switch the projector source to HDMI 2


Press the 'HDMI 2' button on the remote.

Video Conference.

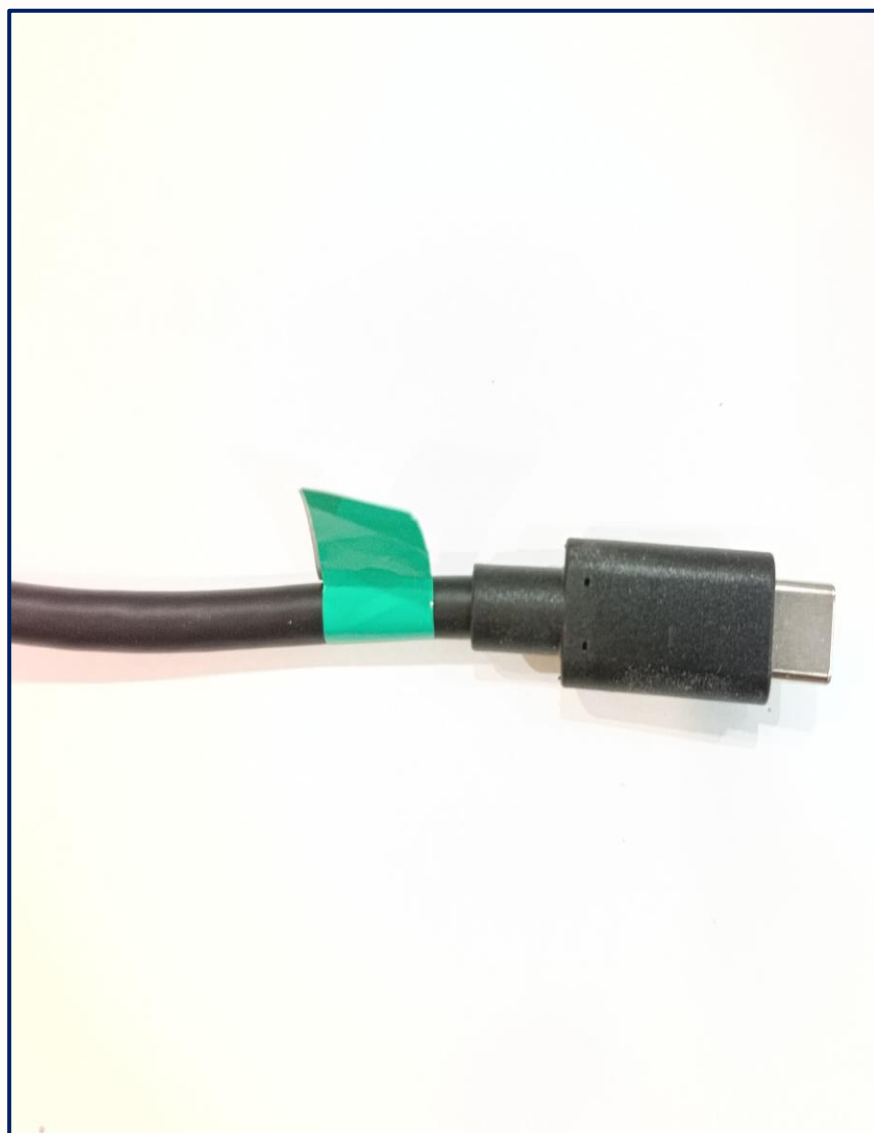

- 1. Connect your laptop with USB C cable**
- 2. Switch the camera source to “Logitech Rally Mini Bar”. Then switch the microphone source to “Logitech Mic Pod”.**

Logitech Tap Touch Controller

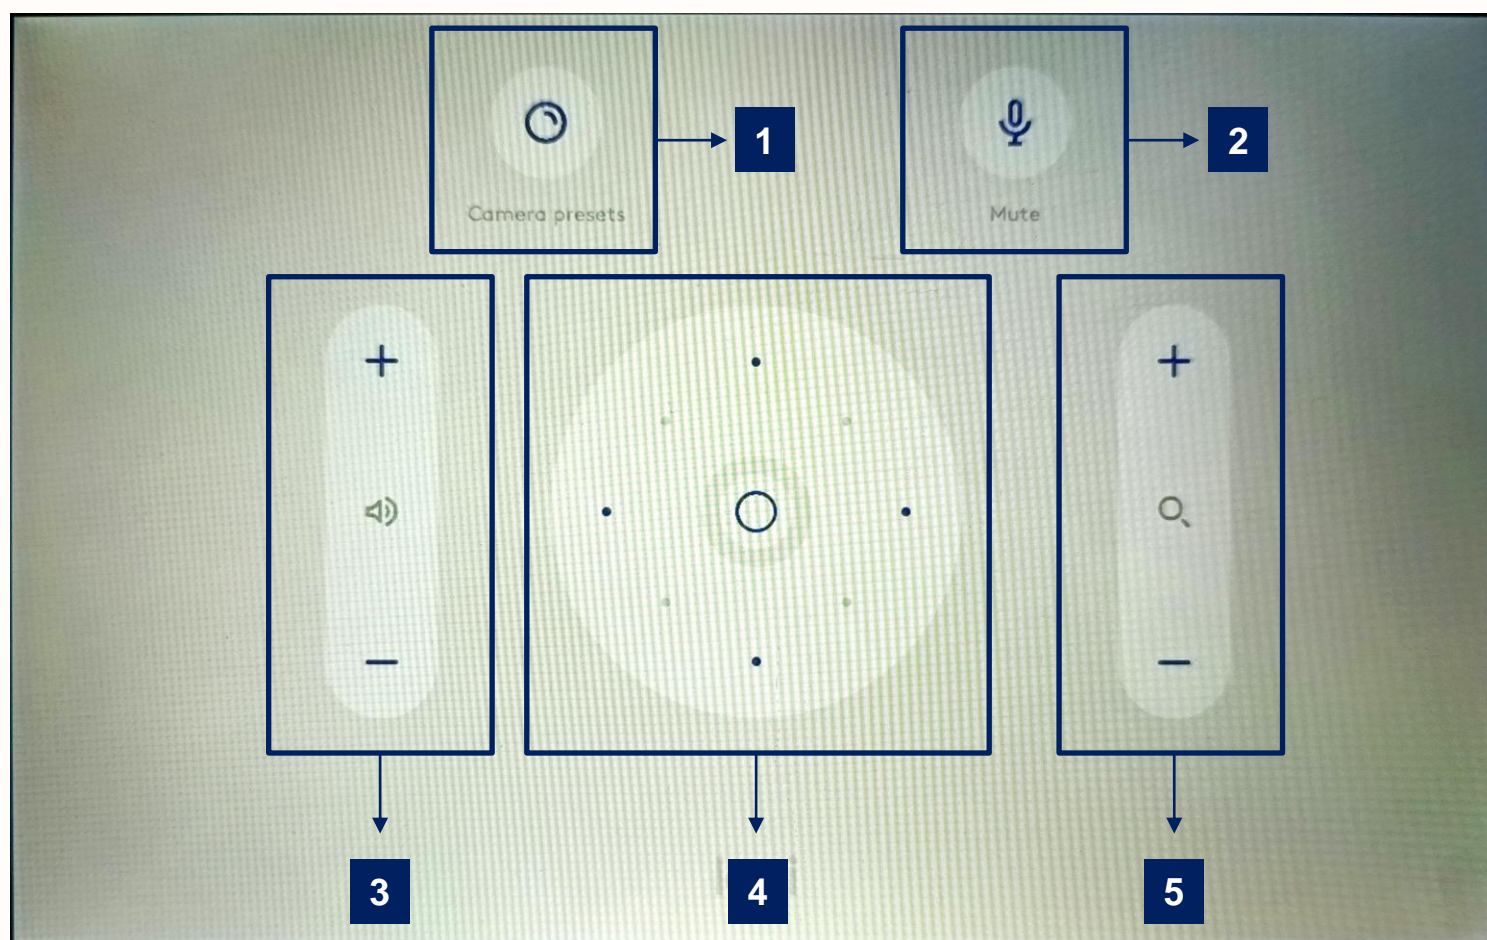

After connecting your laptop, the Tap display will change as illustrated above.

- 1.**
The camera has been set up with an automatic sound sensor. Meeting participants who are speaking will be highlighted by the camera. To turn off the feature, tap image number 1.
- 2.**
To mute the microphone press image number 2. If you want to unmute it, tap image number 2 again.
- 3.**
To increase/decrease the volume, tap image number 3.
- 4.**
To change the camera direction (Pan & Tilt), tap image number 4.
- 5.**
To zoom in and out, tap image number 5.